

[Manuals.plus](#) /

› [Robo Alive](#) /

› Robo Alive Ferocious Roaring Dragon (Model 7115B) Instruction Manual

Robo Alive 7115B

Robo Alive Ferocious Roaring Dragon (Model 7115B) Instruction Manual

Your Guide to Unleashing the Robotic Dragon

INTRODUCTION

Welcome to the world of Robo Alive! This instruction manual provides essential information for the safe and optimal use of your Robo Alive Ferocious Roaring Dragon. Experience realistic movements, terrifying roars, and captivating LED effects that bring your robotic dragon to life.

Key Features:

- Realistic head motions and walking action.
- Terrifying roaring and fire/ice breathing LED effects.
- Deadly robotic bite action.
- Light-reflecting eyes.
- Adjustable wings for dynamic posing.
- Advanced robotics for lifelike movements and sound.

SAFETY INFORMATION

Please read all safety instructions before operating the toy. Keep this manual for future reference.

General Safety:

- This toy contains small parts and is not suitable for children under 36 months due to choking hazards.
- Adult supervision is recommended during play.
- Keep hair, loose clothing, and fingers away from moving parts.
- Do not operate the toy near water or in wet conditions.

Battery Safety:

- Requires 3 x AAA batteries (not included).

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Insert batteries with correct polarity (+ and -).
- Remove exhausted batteries from the toy.
- Remove batteries if the toy is not used for a long period.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.

PACKAGE CONTENTS

- 1 x Robo Alive Ferocious Roaring Dragon Robotic Toy

SETUP

Battery Installation:

1. Locate the battery compartment on the underside of the dragon.
2. Using a small screwdriver, open the battery compartment cover.
3. Insert 3 x AAA batteries, ensuring correct polarity (+ and -).
4. Replace the battery compartment cover and secure it with the screw.

Wing Attachment:

The dragon's wings are designed to be easily attached and detached. Gently push the wing pegs into the corresponding slots on the dragon's back until they click into place. To remove, gently pull them out.



Image: The red Robo Alive Ferocious Roaring Dragon demonstrating its adjustable wings, which can be moved up or down for different poses.

OPERATING INSTRUCTIONS

Turning On/Off:

Locate the ON/OFF switch on the underside of the dragon. Slide the switch to the 'ON' position to activate the toy. Slide to 'OFF' to deactivate.

Movement:

Once activated, the dragon will begin to walk with realistic head motions. For optimal movement, place the dragon on a flat, hard surface. Carpeted or uneven surfaces may hinder its walking ability.



Image: A red Robo Alive Ferocious Roaring Dragon in action, illustrating its stomping, chomping, and roaring capabilities.

Sound & Light Effects:

The dragon produces terrifying roaring sounds and features a deadly robotic bite action where its mouth opens and closes. During some roars, a blue LED light will illuminate inside its mouth, simulating a powerful ice-breathing effect.



Image: A close-up of the red Robo Alive Ferocious Roaring Dragon's head, showing a blue LED light glowing inside its open mouth, simulating an ice blast.

Official Product Video:

Your browser does not support the video tag.

Video: An official ZURU TOYS video showcasing the Robo Alive Dragon's various features, including its walking, roaring, and light-up effects. This video provides a dynamic overview of the toy's capabilities.

MAINTENANCE

Cleaning:

To clean your Robo Alive Dragon, gently wipe the surface with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Do not immerse the toy in water, as this may damage the electronic components.

Storage:

When not in use, store the dragon in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if the toy will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Toy Not Functioning (No Movement/Sound/Light):

- Ensure the ON/OFF switch on the underside of the dragon is in the 'ON' position.
- Check the battery compartment for proper battery installation and polarity.
- Replace with fresh AAA batteries if current batteries are low or depleted.

Wings or Tail Tip Detaching:

The wings and the tip of the tail are designed to be detachable for safety and easy re-assembly. If they come off during play, simply align the pegs with the corresponding holes and gently push until they snap back into place.

SPECIFICATIONS

Attribute	Detail
Brand Name	Robo Alive
Model Name	Dragon
Model Number	7115B
Item Type Name	Robotic Toy
Manufacturer	ZURU
Age Range Description	3+ (Manufacturer Minimum Age: 36.0 months)
Power Source	Battery (3 AAA batteries required)
Material Type	Plastic
Item Dimensions L x W x H	17.2"L x 5.43"W x 11.22"H
Item Weight	0.55 Pounds
Color	Red



Image: The red Robo Alive Ferocious Roaring Dragon shown with its approximate length and height dimensions.

WARRANTY AND SUPPORT

For detailed warranty information, product support, or to inquire about replacement parts, please visit the official ZURU website or contact their customer service department. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question