

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Wonlink](#) /

› [Wonlink 10x20 ft Pop up Canopy Tent User Manual](#)

Wonlink B07NP94J33

Wonlink 10x20 ft Pop up Canopy Tent

USER MANUAL

Model: B07NP94J33

INTRODUCTION

Thank you for choosing the Wonlink 10x20 ft Pop up Canopy Tent. This heavy-duty, height-adjustable shelter is designed for quick and easy setup, providing a reliable outdoor space for various events, gatherings, or as a temporary shelter. This manual will guide you through the assembly, operation, and care to ensure optimal performance and longevity of your canopy.



The Wonlink 10x20 ft Pop up Canopy Tent provides ample shaded space for various outdoor activities.

SAFETY INFORMATION

Please read and understand all safety warnings before setting up or using the canopy tent. Failure to follow these instructions may result in injury or damage to the product.

- **Weather Conditions:** This canopy is designed for protection against sun and light rain. *Do not use the canopy in strong winds, heavy rain, hail, or snow.* Severe weather conditions can cause the canopy to collapse, leading to serious injury or property damage.
- **Anchoring:** Always secure the canopy with the provided ground nails and ropes. Proper anchoring is crucial to prevent the canopy from lifting or moving in windy conditions.
- **Clearance:** Ensure adequate clearance around the canopy during setup and use. Avoid setting up near power lines, trees, or other obstructions.
- **Supervision:** Keep children and pets away from the canopy during setup and takedown.
- **Fire Safety:** Keep all flame and heat sources away from the canopy fabric. The fabric is not fireproof.
- **Structural Integrity:** Regularly inspect the frame and fabric for any signs of wear, damage, or loose connections. Do not use if any part is compromised.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present in your package:



All components included in the Wonlink 10x20 ft Pop up Canopy Tent package.

- 1x Canopy Top (Blue, 210D Oxford fabric)
- 1x Steel Frame (Pre-assembled, white powder-coated)
- 1x Wheeled Bag (for transport and storage)
- 4x Wind Ropes
- 10x Ground Spikes

SETUP INSTRUCTIONS

The Wonlink Pop up Canopy Tent is designed for quick setup, typically requiring 1-2 people. Follow these steps for efficient assembly:



PATIO POP UP GAZEBO

Providing you with pleasant outdoor leisure time!



Visual guide for the four main steps of canopy setup.

- Step 1: Unpack the Frame.** Take the fully assembled steel frame out of the wheeled bag. Place it in the desired setup location.
- Step 2: Partially Expand the Frame.** With a person at each end, gently pull the frame apart until it is about halfway open. Do not fully extend yet.
- Step 3: Attach the Canopy Top.** Drape the canopy top fabric over the partially expanded frame. Ensure the corners of the fabric align with the frame's corners. Secure the canopy top to the frame using any attached Velcro straps or ties.
- Step 4: Fully Extend and Secure.** Continue pulling the frame outwards until it is fully extended and the locking mechanisms click into place. Adjust the height of the legs as desired (refer to Operating Instructions). Finally, secure the tent using the provided 12 ground nails and 8 ropes for stability.

OPERATING INSTRUCTIONS

Height Adjustment

The Wonlink canopy tent features three adjustable height settings, allowing you to customize the clearance and overall height of the shelter. The top height of the tent can reach up to 10.8 feet.

3- ADJUSTMENT HEIGHT



The canopy offers three distinct height adjustment settings for versatility.

- To adjust the height, locate the push buttons on each of the 6 legs of the frame.
- Simultaneously press the buttons and slide the inner leg section up or down to the desired height position. Ensure that the button clicks securely into the corresponding hole at each leg for stability.
- Confirm all legs are set to the same height to maintain a level and stable structure.

General Use

Once set up and secured, the canopy provides a shaded area. While the fabric is UV-resistant and water-resistant for light rain, it is crucial to monitor weather conditions and take down the canopy if strong winds or heavy precipitation are expected.



The canopy fabric offers UV protection, wind resistance, and water resistance for light conditions.

MAINTENANCE

Proper maintenance will extend the life of your Wonlink canopy tent.

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as this can damage the fabric's protective coating. Rinse thoroughly and allow to air dry completely before storage.
- **Drying:** Always ensure the canopy top is completely dry before folding and storing. Storing a damp canopy can lead to mildew and fabric degradation.
- **Frame Care:** Wipe down the steel frame with a damp cloth to remove dirt and debris. Inspect for any rust or damage.
- **Storage:** When not in use, store the canopy tent in its wheeled bag in a cool, dry place, away from direct sunlight and extreme temperatures.



The waterproof fabric is easy to clean and maintain.



The wheeled bag facilitates easy transport and storage of the canopy.

TROUBLESHOOTING

Here are some common issues and their potential solutions:

Problem	Possible Cause	Solution
Canopy is unstable or wobbly.	Not properly anchored; legs not fully extended/locked; uneven ground.	Ensure all legs are fully extended and locked. Use all ground nails and ropes. Relocate to a level surface if possible.
Water pooling on canopy top.	Insufficient tension in fabric; heavy rain exceeding water resistance.	Ensure canopy top is tautly stretched over the frame. If heavy rain, take down the canopy immediately.
Difficulty extending/collapsing frame.	Frame joints are stiff or misaligned.	Ensure no fabric is caught in the joints. Apply a silicone-based lubricant to moving parts if necessary. Ensure buttons are fully depressed when adjusting height.
Canopy fabric leaks during light rain.	Fabric coating wear; seam issues.	Inspect fabric for tears or worn areas. Consider applying a fabric waterproofing spray. If new and leaking, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Wonlink
Model	B07NP94J33
Product Dimensions (L x W x H)	66.14" x 14.56" x 7.87" (packaged)
Assembled Dimensions	10 ft x 20 ft (approximate)
Item Weight	68 Pounds
Frame Material	White color powder coated steel
Canopy Material	210D Oxford Polyester
Water Resistance Level	Water Resistant
UV Protection	Yes (Blocks 99% of UV rays)
Adjustable Height Settings	3 positions (Top height up to 10.8 ft)
Assembly Required	No (Frame comes fully assembled)
Color	Blue

WARRANTY AND SUPPORT

Wonlink is committed to providing high-quality products and customer satisfaction.

- **Satisfaction Guarantee:** If you have any questions or concerns regarding your 10x20 ft Pop up Canopy Tent, please do not hesitate to contact us. Your satisfaction is our priority, and we are dedicated to offering the best possible solution.
- **Contact Support:** For assistance, troubleshooting, or warranty inquiries, please reach out to Wonlink customer service through the platform where you purchased the product or visit the official Wonlink store page.