

## ONN ONA18SB002

# ONN ONA18SB002 37-inch Bluetooth 2.0-Channel Soundbar Speaker User Manual

Model: ONA18SB002

## 1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your ONN ONA18SB002 37-inch Bluetooth 2.0-Channel Soundbar Speaker. Please read this manual thoroughly before using the product to ensure proper function and safety.

The ONN ONA18SB002 soundbar is designed to enhance the audio experience for televisions, computers, and other compatible devices through its 2.0-channel audio output and Bluetooth connectivity.

## 2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- ONN ONA18SB002 37-inch Bluetooth 2.0-Channel Soundbar Speaker
- Remote Control
- Power Cable
- Optical Cable
- Wall Mount Kit
- User Manual (this document)

## 3. PRODUCT OVERVIEW

The ONN ONA18SB002 soundbar features a sleek design with integrated controls and various input options for versatile connectivity.

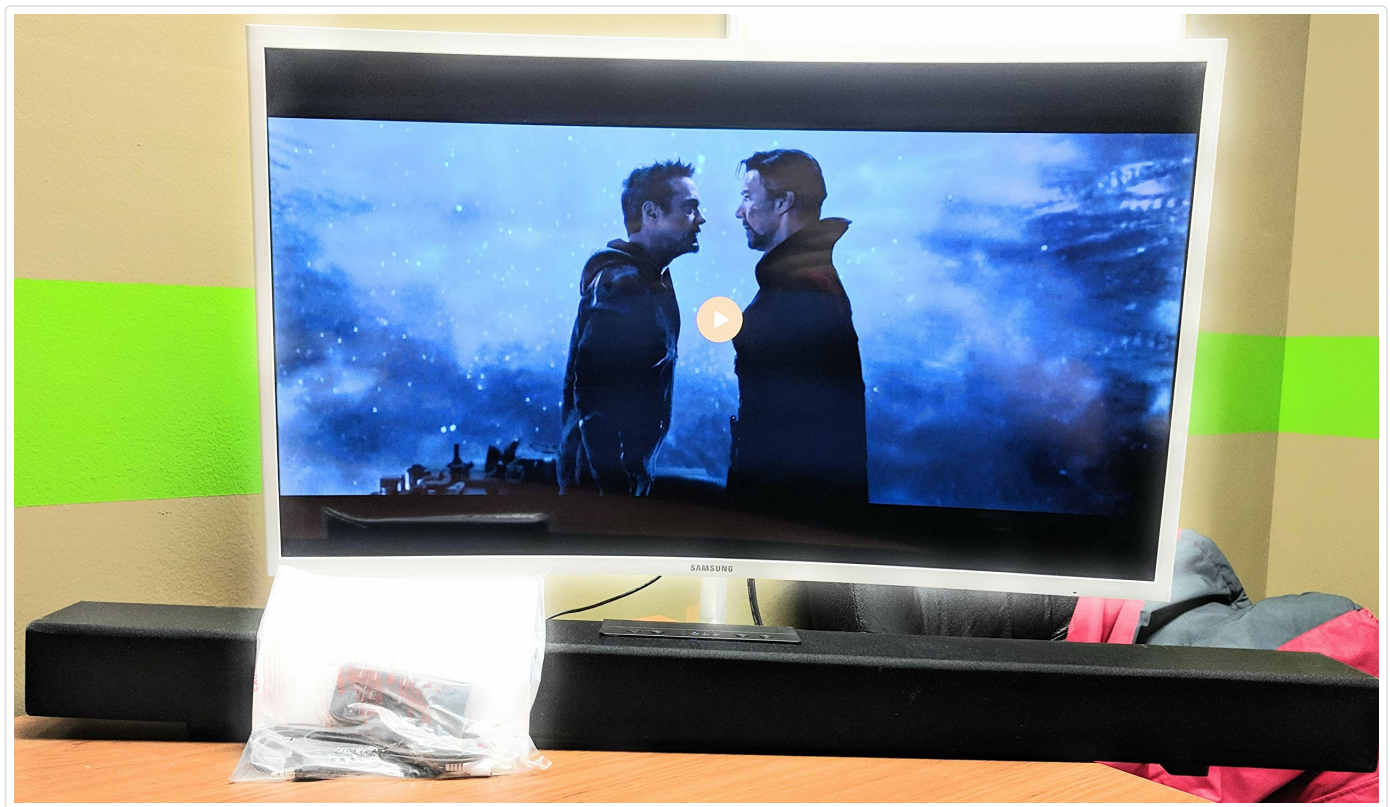


Image 3.1: Front view of the ONN ONA18SB002 Soundbar. This image displays the speaker grille and the overall form factor of the soundbar.

### 3.1. Controls and Indicators

The soundbar features touch controls located on the unit and can also be operated via the included remote control.

- **Power Button:** Turns the soundbar on or off.
- **Volume Up/Down:** Adjusts the audio output level.
- **Input/Source Button:** Cycles through available input sources (e.g., Bluetooth, Optical).
- **Bluetooth Pairing Button:** Initiates Bluetooth pairing mode.
- **LED Indicator:** Displays current status, such as power on/off, input source, and Bluetooth pairing status.

### 3.2. Rear Panel Connections

The rear panel of the soundbar provides various ports for connecting to external devices.

- **DC IN:** Connects to the power adapter.
- **Optical IN:** Connects to devices with an optical audio output (e.g., TV, game console).
- **AUX IN:** Connects to devices with a 3.5mm audio output (e.g., smartphone, MP3 player).

## 4. SETUP

### 4.1. Placement

Place the soundbar on a stable, flat surface in front of your television or computer monitor. Ensure there are no obstructions in front of the soundbar to allow for optimal sound dispersion. Maintain adequate ventilation around the unit.

### 4.2. Power Connection

1. Connect the power cable to the **DC IN** port on the rear of the soundbar.
2. Plug the other end of the power cable into a standard wall outlet.

### 4.3. Audio Connections

Choose one of the following methods to connect your audio source:

### Optical Connection (Recommended for TVs)

1. Connect one end of the optical cable to the **Optical OUT** port on your television or audio source.
2. Connect the other end of the optical cable to the **Optical IN** port on the soundbar.
3. Select the Optical input on the soundbar using the Input/Source button.

### AUX Connection (for 3.5mm audio output)

1. Connect a 3.5mm audio cable (not included) from the headphone jack or AUX OUT port of your device to the **AUX IN** port on the soundbar.
2. Select the AUX input on the soundbar using the Input/Source button.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Power On/Off

Press the **Power** button on the soundbar or the remote control to turn the unit on or off.

### 5.2. Volume Control

Press the **Volume Up (+)** or **Volume Down (-)** buttons on the soundbar or remote control to adjust the audio level.

### 5.3. Input Selection

Press the **Input/Source** button on the soundbar or remote control repeatedly to cycle through the available input sources: Bluetooth, Optical, AUX.

### 5.4. Bluetooth Pairing

1. Turn on the soundbar.
2. Press the **Input/Source** button until the Bluetooth input is selected (indicated by the LED indicator).
3. The soundbar will automatically enter pairing mode. The LED indicator will flash.
4. On your Bluetooth-enabled device (e.g., smartphone, tablet), go to the Bluetooth settings and search for available devices.
5. Select "ONA18SB002" from the list of devices.
6. Once paired, the LED indicator on the soundbar will stop flashing and remain solid.
7. You can now play audio from your device through the soundbar.

*Note: The soundbar will attempt to reconnect to the last paired device automatically when powered on.*

## 6. MOUNTING INSTRUCTIONS

---

The ONN ONA18SB002 soundbar can be wall-mounted using the included wall mount kit. Follow these general steps:

1. Determine the desired mounting location on the wall, ensuring it is level and structurally sound.
2. Mark the positions for drilling holes using the wall mount template (if provided) or by measuring the soundbar's mounting points.
3. Drill pilot holes and insert wall anchors if necessary (for drywall).
4. Secure the wall brackets to the wall using appropriate screws.
5. Carefully attach the soundbar to the wall brackets.

*Caution: Ensure all cables are connected before mounting. If you are unsure about wall mounting, consult a qualified professional.*

## 7. TROUBLESHOOTING

If you encounter issues with your soundbar, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Ensure the power cable is securely connected to both the soundbar and a working power outlet.
No sound	Verify the soundbar is powered on and the volume is not muted or too low. Check that the correct input source is selected on the soundbar. Ensure audio cables (Optical, AUX) are securely connected to both the soundbar and the source device. Adjust the audio output settings on your source device (e.g., TV audio output to 'External Speaker' or 'PCM' for optical).
Bluetooth pairing fails	Ensure the soundbar is in Bluetooth pairing mode (LED flashing). Make sure your device's Bluetooth is enabled and within range (typically 10 meters). Forget/remove "ONA18SB002" from your device's Bluetooth list and try pairing again. Turn off other nearby Bluetooth devices to avoid interference.
Remote control not working	Check the battery in the remote control and replace if necessary. Ensure there are no obstructions between the remote and the soundbar.

## 8. SPECIFICATIONS

Feature	Specification
Model Name	ONA18SB002
Speaker Type	Soundbar
Speaker Size	37 Inches
Surround Sound Channel Configuration	2.0
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Control Method	Touch, Remote Control
Power Source	Corded Electric
Compatible Devices	Desktop, Smartphone, Television
Product Dimensions	5 x 5 x 15 inches (Note: This seems to be package dimensions, actual soundbar length is 37 inches)
Item Weight	4.3 pounds
UPC	681131238359

## 9. CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the soundbar. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the soundbar in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure proper airflow around the soundbar to prevent overheating. Do not block ventilation openings.
- **Water Exposure:** This product is not waterproof. Avoid exposing the soundbar to water or excessive moisture.

## 10. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the warranty card included with your product or contact ONN customer service. Keep your purchase receipt as proof of purchase.

Contact information for ONN support can typically be found on the manufacturer's official website or on the product packaging.

