

Tekswamp SA-DX940

Tekswamp Replacement Remote Control User Manual

Model: SA-DX940

For Technics SA-DX940 Audio Receiver

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Tekswamp Replacement Remote Control, specifically designed for the Technics SA-DX940 audio receiver. This remote is compatible only with the Technics SA-DX940 model. No additional programming is required for its operation. The remote is designed to replicate most of the original commands for your device.



Figure 1: Tekswamp Replacement Remote Control (Top View)

Key Features:

- **Comfortable Design:** Features comfortable, easy-to-reach buttons in a compact, rectangular body, convenient for everyday use and transportation.
- **Low Power Consumption:** The electrical circuit requires little power to operate, ensuring continued functionality even when batteries are low.
- **ON Indicator:** An indicator light illuminates after any active button is pressed, confirming proper operation and IR signal transmission.
- **Durable Construction:** Manufactured from strong, durable plastic to prevent easy breakage. Buttons are designed to be comfortable yet not overly sensitive, preventing accidental signals.
- **Security Screw:** Includes a childproofing security screw to prevent unauthorized access to internal components and associated choking hazards.

2. SETUP

Follow these steps to prepare your remote control for use:

1. **Battery Installation:** The remote requires two (2) AAA batteries (not included).
2. Locate the battery compartment on the back of the remote control.
3. Using a small Phillips head screwdriver, loosen the security screw on the battery compartment cover.

4. Remove the battery compartment cover.
5. Insert two AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
6. Replace the battery compartment cover and tighten the security screw.
7. **No Programming Required:** This remote is pre-programmed for the Technics SA-DX940 and does not require any additional setup or code entry.



Figure 2: Battery Compartment with AAA Batteries

3. OPERATING INSTRUCTIONS

Once batteries are installed, the remote is ready for immediate use with your Technics SA-DX940 receiver.

Basic Functions:

- **Power On/Off:** Use the **Power** button to turn the device on and off.
- **Menu Navigation:** Utilize the directional arrow buttons (Up, Down, Left, Right) and the **OK** button to navigate menus on your receiver's display.
- **Input Signal Selection:** Use the **SRC** (Source) button to cycle through available input signals.
- **Volume Control:** Adjust volume using the **V+** and **V-** buttons.
- **Mute:** Press the **Mute** button to silence the audio.



Figure 3: Overview of Remote Control Buttons

Important Notes:

- **Functionality:** While the remote provides most original commands, some specific functions such as page flip, keystone correction, video adjustment, and number input may not work properly with all devices in rare cases.
- **No Laser Pointer:** This remote does not include a laser pointer function.
- **ON Indicator:** The ON Indicator light will illuminate briefly when any active button is pressed, confirming the remote is sending a signal.

4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control periodically with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or the ON Indicator light dims. Always replace both AAA batteries at the same time. Dispose of old batteries responsibly according to local regulations.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.
- **Durability:** The remote is constructed from durable plastic. However, avoid dropping the remote or subjecting it to excessive force, as this may cause damage.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Remote is not responding.	<ul style="list-style-type: none"> ◦ Batteries: Check if the batteries are inserted correctly with the correct polarity. Replace old or depleted batteries with new AAA batteries. ◦ Line of Sight: Ensure there is a clear line of sight between the remote's IR emitter and the receiver's IR sensor. Obstructions can block the signal. ◦ Distance: Ensure you are within an effective operating range of the receiver.
Some specific functions do not work.	<ul style="list-style-type: none"> ◦ Compatibility: While the remote is designed for the Technics SA-DX940, some highly specific or rarely used functions (e.g., page flip, keystone correction, video adjustment, number input) may not be fully supported or may behave differently than the original remote. This is normal for universal or replacement remotes. ◦ Original Device Limitations: Verify if the function was fully supported by your original Technics SA-DX940 remote or device.
ON Indicator light does not illuminate.	<ul style="list-style-type: none"> ◦ Batteries: Check or replace batteries. ◦ Damage: If batteries are new and correctly inserted, the remote may be damaged.

6. SPECIFICATIONS

Attribute	Detail
Product Dimensions	1.5 x 0.8 x 5.5 inches

Attribute	Detail
Item Weight	2 ounces
Batteries Required	2 AAA batteries (not included)
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Technics SA-DX940 Home Theater Receiver
Manufacturer	TL Electronics CO.
Country of Origin	China

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the original purchase documentation or contact Tekswamp directly through their official channels. Tekswamp is the brand manufacturer of this replacement remote control.

You can typically find support contact information on the packaging or the seller's website where the product was purchased.

© 2024 Tekswamp. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.