

BEPER BT.710Y

BEPER BT.710Y Electric Crepe Maker Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your BEPER BT.710Y Electric Crepe Maker. Please read all instructions carefully before first use and retain this manual for future reference. The BEPER BT.710Y Electric Crepe Maker is designed for easy and quick preparation of thin crepes, tortillas, and pancakes. Its non-stick aluminum plate, with a 20 cm diameter, ensures even cooking without burning. The appliance features an on/off button with an operating light for user convenience. It is easy to clean and includes a batter tray for preparation. Stable non-slip feet provide safety during use. The base and handle are heat-insulated for safe handling. Its compact and lightweight design makes it suitable for any kitchen. An automatic thermostat and on/off switch with an indicator light control the temperature for consistent results. A plastic batter bowl and wooden spatula are included to assist with preparation.



Image 1.1: The BEPER BT.710Y Electric Crepe Maker in use, showing a cooked crepe, the batter bowl, and a plate of finished crepes.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your BEPER BT.710Y Electric Crepe Maker:

- **Non-stick Plate:** 20 cm diameter cooking surface.
- **Thermo-insulated Handle:** For safe and comfortable handling.
- **ON/OFF Button with Indicator Light:** Controls power and shows operational status.
- **Batter Tray:** Plastic bowl for holding crepe batter.
- **Wooden Spatula:** For spreading batter and handling crepes.



Image 3.1: Labeled components of the crepe maker.



Image 3.2: Key features including 800W power and 20cm non-stick plate.

4. SETUP

1. **Unpack:** Carefully remove the crepe maker and all accessories from its packaging.
2. **Initial Cleaning:** Before first use, wipe the non-stick cooking plate with a damp cloth and then dry thoroughly. Do not immerse the appliance in water.
3. **Placement:** Place the crepe maker on a stable, heat-resistant, and dry surface, away from the edge of the counter. Ensure there is adequate ventilation around the appliance.
4. **Power Connection:** Ensure the ON/OFF button is in the 'OFF' position before plugging the appliance into a suitable 240V electrical outlet.
5. **Pre-heating:** For the first use, it is recommended to pre-heat the appliance for a few minutes without batter to burn off any manufacturing residues. A slight odor or smoke may occur, which is normal. Allow to cool and wipe clean.

5. OPERATING INSTRUCTIONS

Follow these steps to prepare delicious crepes:

1. **Prepare Batter:** Prepare your desired crepe batter. Pour a thin layer of batter into the provided plastic batter tray.
2. **Pre-heat:** Plug in the crepe maker and press the ON/OFF button. The indicator light will illuminate, signaling that the appliance is heating up. Allow it to pre-heat for approximately 3-5 minutes until it reaches the optimal cooking temperature. The automatic thermostat will maintain this temperature.
3. **Dip and Cook:** Once pre-heated, gently dip the non-stick cooking plate into the batter tray, ensuring the

entire cooking surface is evenly coated with a thin layer of batter.

4. **Cook Crepe:** Lift the crepe maker from the batter and hold it horizontally. Cook for approximately 30-60 seconds, or until the edges begin to crisp and the surface appears cooked.
5. **Flip (Optional):** If desired, use the wooden spatula to gently loosen the crepe and flip it to cook the other side for a few more seconds.
6. **Remove:** Once cooked to your preference, slide the crepe off the plate using the wooden spatula onto a serving plate.
7. **Repeat:** Repeat the process for additional crepes.
8. **Finish:** After use, press the ON/OFF button to turn off the appliance and unplug it from the wall outlet.



Image 5.1: Step-by-step visual guide for using the crepe maker.

Crepes dolci o salate pronte in pochi minuti Sweets or salad crepes ready in minutes



Image 5.2: Examples of sweet and savory crepes that can be prepared.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your crepe maker:

1. **Cool Down:** Always ensure the appliance is unplugged and completely cooled before cleaning.
2. **Clean Non-stick Plate:** Wipe the non-stick cooking plate with a soft, damp cloth or sponge. For stubborn residue, a small amount of mild dish soap can be used, but ensure it is thoroughly rinsed off with a damp cloth. Avoid abrasive cleaners or scouring pads, as these can damage the non-stick coating.
3. **Clean Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive materials.
4. **Batter Tray and Spatula:** The plastic batter tray and wooden spatula can be washed with warm, soapy water and rinsed thoroughly.
5. **Storage:** Store the crepe maker in a dry place, away from direct sunlight and moisture, once it is clean and dry.

Never immerse the main unit of the crepe maker in water or any other liquid.

7. TROUBLESHOOTING

If you encounter issues with your BEPER BT.710Y Electric Crepe Maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; ON/OFF button not pressed.	Ensure the power cord is securely plugged into a working outlet. Press the ON/OFF button.
Crepes stick to the plate.	Plate not properly cleaned; insufficient pre-heating; damaged non-stick coating.	Ensure the plate is clean and dry. Allow sufficient pre-heating time. If coating is damaged, contact support.
Crepes are unevenly cooked.	Batter not spread evenly; insufficient pre-heating.	Ensure the plate is fully and evenly coated with batter. Allow proper pre-heating.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. It should dissipate quickly.

If the problem persists after attempting these solutions, please contact BEPER customer support.




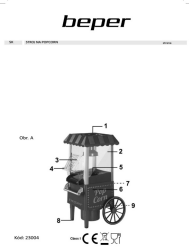

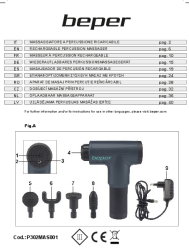
8. SPECIFICATIONS

- **Brand:** BEPER
- **Model Number:** BT.710Y
- **Color:** Red
- **Dimensions (L x W x H):** 24.99 x 44.5 x 8 cm
- **Weight:** 750 grams
- **Power:** 800 W
- **Voltage:** 240 V
- **Material:** Aluminum (plate)
- **Special Feature:** Batter tray included
- **Automatic Shut-off:** No
- **Components Included:** Plastic batter bowl, wooden spatula
- **Plate Diameter:** 20 cm

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, spare parts availability, or technical support, please refer to the warranty card included with your product or visit the official BEPER website. Information on spare parts availability is not provided in this manual.

For direct assistance, please contact BEPER customer service through their official channels.

 <p>Model: 23008</p>	<p>Beper 23008 Stick Waffle Maker - User Manual and Safety Guide</p> <p>Comprehensive guide for the Beper 23008 stick waffle maker, including safety precautions, operating instructions, cleaning, maintenance, and warranty details.</p>
 <p>Model: 90.420</p>	<p>Beper Juice Extractor 600-800W - User Manual and Instructions</p> <p>Comprehensive user manual for the Beper Juice Extractor (Model 90.420), providing detailed instructions for operation, safety, cleaning, and maintenance. Includes technical specifications and warranty information.</p>
	<p>Beper C106CAS002 Microwave Popcorn Maker Instructions and Guarantee</p> <p>Official instructions and guarantee information for the Beper C106CAS002 microwave popcorn maker. Learn how to safely and effectively make popcorn.</p>
 <p>Model: 23004</p>	<p>Beper 23004 Popcorn Maker User Manual</p> <p>User manual for the Beper 23004 popcorn maker, providing detailed instructions on safe operation, cleaning, maintenance, and warranty information.</p>
 <p>Model: P101TOS502</p>	<p>Beper P101TOS502 Multi-function Grill User Manual</p> <p>User manual for the Beper P101TOS502 Multi-function Grill, providing safety instructions, usage guides, cooking times, maintenance tips, technical data, and warranty information. Visit beper.com for more.</p>
 <p>Model: P302MAS001</p>	<p>Beper P302MAS001: Manuale d'uso del Massaggiatore a Percussione Ricaricabile</p> <p>Guida completa per il massaggiatore a percussione ricaricabile Beper P302MAS001. Scopri come utilizzare in sicurezza ed efficacia questo dispositivo per il sollievo muscolare e il recupero.</p>