

Fujifilm X-T30 Body Silver

Fujifilm X-T30 Mirrorless Digital Camera

MODEL: X-T30 BODY SILVER

Introduction

The Fujifilm X-T30 is a compact and powerful mirrorless digital camera designed for both amateur and professional photographers. Featuring a 26.1 MP APS-C X-Trans CMOS sensor and a fast image processor, it delivers high-quality still images and 4K video. Its intuitive controls and advanced autofocus system make it a versatile tool for various shooting scenarios, offering exceptional image quality in a portable design.

Setup

Follow these steps for initial setup of your Fujifilm X-T30 camera:

- Charge and Insert Battery:** Ensure the supplied NP-W126S battery is fully charged using the provided charger. Insert the charged battery into the battery compartment at the bottom of the camera, ensuring it clicks into place.
- Insert Memory Card:** Open the memory card slot cover. Insert a compatible SD/SDHC/SDXC (UHS-I) memory card with the label facing the back of the camera until it locks. Close the cover securely.
- Attach a Lens (Optional):** Align the white dot on the lens with the white dot on the camera body. Rotate the lens clockwise until it clicks into place. (Note: This product is sold as body only; lenses are sold separately.)
- Power On:** Turn the ON/OFF switch to 'ON'. The camera will prompt you to set the date, time, and time zone upon first use.



Figure 1: Front view of the Fujifilm X-T30 camera, showing the lens mount and main body.

Operating the Camera

The X-T30 features intuitive controls for a seamless shooting experience.

Controls Overview

- **Shutter Speed Dial:** Located on the top plate, this dial allows direct control over shutter speed.
- **Exposure Compensation Dial:** Adjust exposure compensation quickly using this dedicated dial.
- **Mode Dial:** Select various shooting modes including Program, Shutter-priority, Aperture-priority, and Manual.
- **Q Button:** The 'Q' (Quick Menu) button on the rear provides instant access to frequently used settings.
- **Joystick (Focus Lever):** Used for navigating menus and quickly selecting autofocus points.



Figure 2: Top view of the Fujifilm X-T30, highlighting the shutter speed, exposure compensation, and mode dials.



Figure 3: Rear view of the Fujifilm X-T30, displaying the tilting LCD screen and control buttons.

Shooting Modes

The X-T30 offers a variety of shooting modes to suit different photographic needs:

- **Program (P):** Camera sets aperture and shutter speed for optimal exposure.
- **Shutter-Priority (S):** You set the shutter speed, and the camera selects the aperture. Ideal for controlling motion blur.
- **Aperture-Priority (A):** You set the aperture, and the camera selects the shutter speed. Ideal for controlling depth of field.
- **Manual (M):** You control both aperture and shutter speed.
- **Custom (C1/C2/C3/C4):** Save and recall up to four sets of frequently used settings.

Autofocus System

The X-T30 features an advanced autofocus system with 425 selectable phase-detection points, covering nearly 100% of the sensor area. Key AF features include:

- **Single-Point AF:** For precise focus on a specific area.
- **Zone AF:** Focuses on subjects within a selected zone.
- **Wide/Tracking AF:** Automatically selects focus points across the frame or tracks moving subjects.
- **Eye Detection AF:** Automatically detects and focuses on human eyes, crucial for portrait photography.

Video Recording

The X-T30 is capable of recording high-quality video:

- **4K DCI 2160p:** Record cinematic 4K video at up to 30 frames per second.
- **Full HD 1080p:** Record Full HD video at various frame rates up to 60 frames per second.
- **F-Log Gamma:** For professional color grading workflows.

Tilting LCD Touchscreen

The 3-inch tilting LCD touchscreen provides flexible viewing angles for both stills and video, and allows for intuitive touch operations such as touch focus and touch shutter.



Figure 4: The Fujifilm X-T30 with its tilting screen extended, useful for low-angle shots.



Figure 5: The Fujifilm X-T30 with its tilting screen extended upwards, useful for high-angle shots.

Maintenance

Proper care and maintenance will extend the life of your camera.

- **Cleaning the Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using organic solvents.
- **Cleaning the Lens and Sensor:** Use a blower brush to remove dust from the lens surface and sensor. For smudges, use a lens cleaning solution and a microfiber cloth. Never touch the sensor directly.
- **Battery Care:** Store batteries in a cool, dry place when not in use. Avoid fully discharging batteries for extended periods.
- **Storage:** When storing the camera for long periods, remove the battery and memory card. Store in a cool, dry, well-ventilated area, away from direct sunlight and high humidity.

Troubleshooting

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Camera does not power on	Battery is dead or incorrectly inserted.	Ensure battery is charged and inserted correctly.
Images are blurry	Incorrect focus, camera shake, or dirty lens.	Check focus mode, use a faster shutter speed or tripod, clean the lens.
Memory card error	Card is full, corrupted, or incompatible.	Delete files, format card (backup first), or try a different card.
No sound in video playback	Volume is muted or too low.	Adjust playback volume in camera settings.

Specifications	
Feature	Detail
Model Name	X-T30 Body Silver
Photo Sensor Resolution	26.1 MP
Sensor Type	CMOS (APS-C)
Video Resolution	4K DCI 2160p
Screen Size	3 inches
Display Type	Tilting LCD Touchscreen
Autofocus Points	425
Connectivity	Wi-Fi, Bluetooth, HDMI, USB-C
Item Weight	383 Grams
Battery Type	Lithium Ion (NP-W126S)
Storage Media	Single Slot: SD/SDHC/SDXC (UHS-I)

Warranty and Support
Your Fujifilm X-T30 Mirrorless Digital Camera comes with a manufacturer's warranty and access to support resources. Warranty: This product is covered by a 1-Year manufacturer's warranty. Please retain your proof of purchase for warranty claims. User Guides: For more detailed information and advanced features, please refer to the official user

guides:

- [User Guide \(PDF\)](#)
- [User Manual \(PDF\)](#)
- **Online Support:** Visit the official Fujifilm website for product registration, firmware updates, FAQs, and contact information for technical support.