

Bosch MS6CB6110

Bosch ErgoMixx Hand Blender Set MS6CB6110 - Instruction Manual

Model: MS6CB6110 | Brand: Bosch

1. INTRODUCTION AND PRODUCT OVERVIEW

The Bosch ErgoMixx Hand Blender Set MS6CB6110 is a powerful and versatile kitchen appliance designed for efficient blending and mixing. With its robust motor and ergonomic design, it simplifies various food preparation tasks, from creating smooth soups and sauces to preparing shakes and purees.

Key Features:

- **1000 Watt Motor:** Provides strong performance for fast and perfect results, even with tough ingredients.
- **Ergonomic Design:** Features an extra light, ergonomic housing with a soft-touch handle and large buttons for comfortable and safe operation.
- **QuattroBlade System:** Robust stainless steel mixing base with a "QuattroBlade" blade system and anti-splash function ensures efficient preparation without splashes.
- **Variable Speed Control:** Offers 12 speed settings plus a turbo function, allowing precise adjustment to the ideal speed for all ingredients.
- **Included Accessories:** Comes with a Mixing / Measuring Jug with Lid (600ml) for convenience.



Figure 1: The Bosch ErgoMixx Hand Blender MS6CB6110 with its included 600ml measuring jug.

2. COMPONENTS AND WHAT'S INCLUDED

Your Bosch ErgoMixx Hand Blender Set includes the following main components:

- **Motor Unit:** The main body of the hand blender containing the powerful 1000 Watt motor and control buttons.
- **Blender Foot:** The detachable stainless steel blending shaft with the "QuattroBlade" system.
- **Mixing / Measuring Jug:** A 600ml capacity jug with a lid, suitable for blending and measuring ingredients.



Figure 2: All components of the Bosch ErgoMixx Hand Blender Set, including the motor unit, blending shaft, and measuring jug.

3. SETUP AND ASSEMBLY

Before first use, ensure all parts are clean. Refer to the "Maintenance and Cleaning" section for initial cleaning instructions.

1. **Attach the Blender Foot:** Align the blending shaft with the motor unit. Push the blending shaft onto the motor unit until it clicks securely into place. Ensure it is firmly attached to prevent detachment during operation.
2. **Prepare Ingredients:** Place the ingredients you wish to blend into the mixing jug or another suitable container. Ensure the liquid level is appropriate for blending and does not exceed the maximum fill line of the jug.
3. **Connect to Power:** Plug the power cord into a suitable electrical outlet (240V).



Figure 3: Demonstrates the secure attachment of the blending shaft to the motor unit, ensuring proper assembly before use.

4. OPERATING INSTRUCTIONS

The Bosch ErgoMixx Hand Blender is designed for ease of use. Follow these steps for optimal performance:

1. **Immerse the Blender:** Place the blender foot into the ingredients in your container. Ensure the blades are fully submerged before starting the appliance to prevent splashing.
2. **Select Speed:** Use the rotary speed selector on the top of the motor unit to choose one of the 12 available speeds. Start with a lower speed for delicate ingredients and gradually increase as needed.
3. **Activate Blending:** Press and hold the main power button (usually the larger button) to begin blending. For short bursts of maximum power, press the "Turbo" button (usually marked with a 'T'). Release the button to stop blending.
4. **Blend Evenly:** Move the blender up and down and in circular motions within the container to ensure all ingredients are evenly blended.
5. **Finish Blending:** Once the desired consistency is achieved, release the power button and unplug the appliance from the power outlet before removing the blender from the ingredients.



Figure 4: Close-up view of the speed dial, illustrating how to select one of the 12 speed settings for precise control.



Figure 5: The hand blender positioned in a pot, ready to blend ingredients, demonstrating its anti-splash design.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your Bosch ErgoMixx Hand Blender.

1. **Unplug Before Cleaning:** Always unplug the hand blender from the power outlet before cleaning any part of the appliance.
2. **Detach Blender Foot:** Press the release buttons on the side of the motor unit and pull the blending shaft away from the motor unit.
3. **Clean Blender Foot:** The stainless steel blending shaft can be rinsed under running water or placed in a dishwasher. Ensure no food particles remain around the blades.

4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. **Do not immerse the motor unit in water or any other liquid.**
5. **Clean Accessories:** The mixing jug and lid are dishwasher safe or can be washed by hand with warm soapy water.
6. **Drying:** Allow all parts to dry completely before reassembling or storing.



Figure 6: The blending shaft detaching from the motor unit, highlighting the ease of disassembly for cleaning.

6. TROUBLESHOOTING

If you encounter issues with your hand blender, consult the following common troubleshooting tips:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet faulty; blending shaft not properly attached.	Ensure the appliance is securely plugged into a working outlet. Check if the blending shaft is clicked into place.

Problem	Possible Cause	Solution
Motor runs, but blades do not spin.	Blending shaft not securely attached to the motor unit.	Detach and reattach the blending shaft, ensuring it clicks firmly into position.
Blender stops during operation.	Overheating due to prolonged use or blending very tough ingredients.	Unplug the blender and let it cool down for at least 30 minutes. Reduce blending time or process ingredients in smaller batches.
Excessive splashing during blending.	Blades not fully submerged; too much liquid; speed setting too high.	Ensure blades are fully immersed. Reduce liquid volume or use a lower speed setting.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Bosch
Model Number	MS6CB6110
Power	1000 Watt
Color	Black, Silver
Special Feature	Portable
Capacity (Jug)	600 Milliliters
Number of Speeds	12 + Turbo Function
Blade Material	Stainless Steel
Material Type Free	BPA Free
Product Dimensions	2.44 x 2.17 x 15.47 inches
Item Weight	2.16 pounds
Power Source	Corded Electric
Voltage	240V

8. WARRANTY AND SUPPORT

The Bosch ErgoMixx Hand Blender Set MS6CB6110 comes with a **Limited Warranty**. For detailed information regarding warranty terms, conditions, and duration, please refer to the warranty card included with your product or visit the official Bosch Home Appliances website.

For customer support, service inquiries, or to purchase replacement parts, please contact Bosch customer service or visit the [Bosch Store on Amazon](#).

