

[Manuals.plus](#) /

› [Polly Pocket](#) /

› Polly Pocket Pollyville Arcade Playset GFP41 Instruction Manual

Polly Pocket GFP41

Polly Pocket Pollyville Arcade Playset Instruction Manual

Model: GFP41 | Brand: Polly Pocket

1. SAFETY INFORMATION

WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years. Manufacturer recommended age is 4-8 years.

Always supervise children during play. Inspect all components regularly for damage. Discontinue use if any part is broken or damaged.

2. PACKAGE CONTENTS

Your Polly Pocket Pollyville Arcade Playset (Model GFP41) includes the following items:

- 1 x Pollyville Arcade Playset
- 2 x Mini-figures (Polly and Lila)
- 1 x Sticker Sheet
- 5 x Mini-accessories (e.g., arcade machines, bike, Skee-Ball game)



Image: The Pollyville Arcade Playset is shown open, displaying its interior levels, along with the two mini-figures, sticker sheet, and various mini-accessories like arcade games and a bike, all ready for assembly and play.

3. SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all items from the packaging. Ensure all listed package contents are present.
2. **Open the Playset:** The Arcade Playset is designed to open and unfold. Gently pull the two halves apart to reveal the interior play areas. The playset can unfold to offer four levels of play or remain closed for a 360-degree play experience.
3. **Place Mini-figures and Accessories:** Position the Polly and Lila mini-figures and the 5 mini-accessories (arcade machines, bike, Skee-Ball game) within the playset as desired.
4. **Apply Stickers (Polly Stick Technology):** The playset features Polly Stick technology. Use the included sticker sheet to place stickers on any flat surface within the playset where you wish the mini-figures to adhere. Once a sticker is applied, the mini-figures can be placed on it and will stick securely.



Image: A young child is actively engaged in playing with the unfolded Polly Pocket Pollyville Arcade Playset. The playset is open, revealing multiple levels of play, and the child is positioning mini-figures on the interactive elements.

4. OPERATING INSTRUCTIONS

The Polly Pocket Pollyville Arcade Playset offers interactive play across its multiple levels. Here's how to maximize your play experience:

- **Interactive Play:** Engage the mini-figures with the various arcade machines and accessories. For example, place a figure on the bike for a virtual ride or interact with the Skee-Ball game.
- **Polly Stick Feature:** Utilize the Polly Stick technology by placing mini-figures on the applied stickers. This allows figures to stand securely in various positions throughout the playset, enhancing imaginative play.
- **Expand Your World:** The Arcade Playset can be connected to other Pollyville stores and playsets (sold separately). Align the sidewalks to create a larger, interconnected Pollyville world

for extended play scenarios.

- **Storage:** When play is complete, the playset can be folded closed. This compact design allows for easy storage of all accessories inside, making it convenient for travel or tidying up.



Image: Close-up of a child's hands engaging with the Polly Pocket Pollyville Arcade Playset. One hand is carefully positioning a mini-figure onto an accessory within the playset, demonstrating interactive play.

5. MAINTENANCE

To ensure the longevity of your Polly Pocket Pollyville Arcade Playset, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the playset and accessories with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners, as these may damage the plastic.
- **Storage:** Store the playset in a cool, dry place away from direct sunlight to prevent fading or warping of the plastic.
- **Sticker Care:** If the Polly Stick stickers lose their adhesiveness, gently clean them with a damp

cloth to remove dust or debris.

6. TROUBLESHOOTING

If you encounter any issues with your Polly Pocket Pollyville Arcade Playset, refer to the following common solutions:

- **Mini-figures not sticking:** Ensure that the Polly Stick stickers are clean and free of dust. If necessary, gently wipe the sticker surface with a damp cloth.
 - **Playset not closing properly:** Check that all mini-figures and accessories are correctly placed within the playset before attempting to close it. Ensure no items are obstructing the closing mechanism.
 - **Missing parts:** If any parts are missing upon opening, please contact customer support for assistance.
-

7. SPECIFICATIONS

Brand	Polly Pocket
Model Number	GFP41
Product Type Name	Arcade Playset, mini dolls with accessories
Manufacturer	Mattel
Material Type	Plastic
Product Dimensions (L x W x H)	10 x 10 x 8 cm
Item Weight	281.23 grams
Manufacturer Recommended Age	4 - 8 years
Assembly Required	Yes
Number of Pieces	6

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Polly Pocket website. Keep your proof of purchase for any warranty claims.