

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Hot Wheels](#) /

> [Hot Wheels City T-Rex Rampage Playset Instruction Manual GFH88](#)

Hot Wheels GFH88

Hot Wheels City T-Rex Rampage Playset Instruction Manual

Brand: Hot Wheels | Model: GFH88

1. INTRODUCTION

The Hot Wheels City T-Rex Rampage Playset provides an interactive experience where users launch Hot Wheels cars to confront a motorized T-Rex. This manual provides essential information for assembly, operation, and maintenance of your playset.

2. SAFETY INFORMATION

- Recommended for ages 5-8 years. Adult supervision is advised during play.
- Keep small parts away from children under 3 years to prevent choking hazards.
- Ensure all track connections are secure before launching vehicles.
- Do not aim launched vehicles at eyes or face.
- Use only specified batteries (4 AA batteries). Do not mix old and new batteries, or different types of batteries.

3. WHAT'S IN THE BOX

The Hot Wheels City T-Rex Rampage Playset includes the following components:

- 1 Hot Wheels City T-Rex Rampage Playset (main dinosaur unit, launcher, track pieces, city buildings).
- 1 Hot Wheels 1:64 Scale Vehicle.
- 4 AA batteries (included).



Image: The Hot Wheels City T-Rex Rampage Playset showing the red T-Rex, yellow launcher, track, and city buildings, along with an included Hot Wheels car.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Hot Wheels City T-Rex Rampage Playset:

1. Unpack all components from the box and verify against the 'What's in the Box' section.
2. Insert the 4 AA batteries into the designated battery compartment on the T-Rex base. Ensure correct polarity.
3. Connect the track pieces and city buildings to the main T-Rex unit as shown in the diagram. Ensure all connections click securely into place.
4. Attach the car launcher to the designated track connection point.
5. The playset can be connected to other Hot Wheels City tracks for expanded play. Refer to the instructions of other sets for compatibility and connection points.

MOTORIZED!



Image: A diagram illustrating the assembly steps for the Hot Wheels City T-Rex Rampage Playset, showing how track pieces and buildings connect to the main T-Rex base.

5. OPERATING INSTRUCTIONS

Engage in thrilling action with your T-Rex Rampage Playset:

1. Place a Hot Wheels car into the launcher.
2. Press the launch button firmly to propel the car towards the T-Rex.
3. The T-Rex is motorized and will move, roar, chomp, and thrash its tail. Aim your car to hit the T-Rex and knock it down to save Hot Wheels City.
4. If your aim is off, the T-Rex may 'swallow' your car or destroy the city buildings with its tail.

CITY MAP INCLUDED!



Image: A Hot Wheels car being launched from the yellow launcher towards the open mouth of the red T-Rex, which is positioned on a rotating base.

Official Product Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of the Hot Wheels City T-Rex Rampage Playset in action, showing the motorized T-Rex moving and cars being launched to interact with it.

6. MAINTENANCE

- **Battery Replacement:** When the T-Rex's movements or sounds weaken, replace the 4 AA batteries. Use a screwdriver to open the battery compartment, remove old batteries, and insert new ones, observing polarity. Securely close the compartment.
- **Cleaning:** Wipe the playset with a damp cloth. Do not immerse in water. Avoid harsh chemicals.
- **Storage:** Store the playset in a cool, dry place away from direct sunlight when not in use. Disassemble if necessary for compact storage.

7. TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
T-Rex is not moving or making sounds.	Check if batteries are inserted correctly and are not depleted. Replace batteries if necessary. Ensure the power switch is in the 'ON' position.
Car is not launching effectively.	Ensure the car is placed correctly in the launcher. Press the launch button firmly and quickly. Check for any obstructions in the track or launcher mechanism.
Track pieces are separating during play.	Ensure all track connections are fully engaged and clicked into place during assembly. Avoid excessive force during play.

8. SPECIFICATIONS

- **Product Dimensions:** 30.31 x 9.65 x 9.84 inches
- **Item Weight:** 1.43 pounds
- **Item Model Number:** GFH88
- **Manufacturer Recommended Age:** 5 - 8 years
- **Batteries:** 4 AA batteries required (included)
- **Manufacturer:** Mattel

9. WARRANTY AND SUPPORT

This product is covered by the manufacturer's standard warranty. For detailed warranty information, product support, or replacement parts, please contact Mattel customer service directly. Contact information can typically be found on the product packaging or the official Hot Wheels website.