

Skyrocket 02141

Skyrocket Lumies Dazzle Gogo Interactive Pom Pom Pet Instruction Manual

Model: 02141

INTRODUCTION

The Skyrocket Lumies Dazzle Gogo is an interactive pom pom pet designed to engage users through color recognition, musical interaction, and various games. This manual provides essential information for the proper setup, operation, and maintenance of your Lumies Dazzle Gogo.

WHAT'S IN THE BOX

Upon opening your Lumies Dazzle Gogo package, please ensure all the following items are present:

- 1 x Lumies Dazzle Gogo Interactive Pet
- 1 x Instruction Manual (this document)
- 1 x Hair Clip Comb
- 3 x AAA Batteries (pre-installed)



Image: A pink Lumies Dazzle Gogo interactive pet is shown alongside its included pink hair clip comb.

SETUP

Battery Installation

Your Lumies Dazzle Gogo comes with 3 AAA batteries pre-installed. If replacement is needed, follow these steps:

1. Locate the battery compartment on the underside of the Lumies Dazzle Gogo.
2. Using a small Phillips head screwdriver (not included), loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Remove the old batteries and insert 3 new AAA (LR03) 1.5V batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
5. Replace the battery compartment cover and tighten the screw. Do not overtighten.

Battery Safety Information:

- Adult supervision is recommended for battery replacement.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.

- Remove exhausted batteries from the toy.
- Remove batteries if the toy is not to be used for a long period.
- Dispose of batteries safely and responsibly according to local regulations.

OPERATING YOUR LUMIES

Power On/Off

To turn on your Lumies Dazzle Gogo, locate the power switch, usually on the underside or back of the toy. Slide the switch to the "ON" position. To turn off, slide the switch to the "OFF" position.

Color Matching Feature

The Lumies Dazzle Gogo can identify and glow with the color of any surface it touches. To activate this feature:

1. Place the Lumies Dazzle Gogo onto a colored surface.
2. Gently press the Lumies down onto the surface. The optical sensor on its base acts as a button. You should feel a slight click.
3. The Lumies will then glow the detected color and react with sounds and phrases.

The Lumies can recognize a wide range of colors including blue, green, red, purple, pink, yellow, and orange. It may not accurately detect black or grey.



Image: Two children are shown observing a Lumies Dazzle Gogo glowing green as it sits on a green folder, demonstrating its color-matching ability.



Image: A child wears a pink Lumies Dazzle Gogo on her shoulder, which glows pink to match her jacket, illustrating the "color match your outfit" feature.

Music Mode

The Lumies Dazzle Gogo can transform colors into musical beats, offering up to 1,000 possible mixes. To use Music Mode:

1. Activate Music Mode (refer to product packaging or quick start guide for specific button press, typically a long press on the sensor).
2. Tap the Lumies onto different colored surfaces. Each color will produce a unique musical beat, allowing you to create your own color-based melodies.



Image: A girl holds a glowing purple Lumies Dazzle Gogo, with musical notes depicted around it, representing its music mode feature.

Interactive Games

Your Lumies Dazzle Gogo includes 3 fun games. Specific instructions for activating and playing these games are typically found in the quick start guide included with the product. These games often involve color recognition and sequence matching.

Sounds and Phrases

The Lumies Dazzle Gogo features over 100 unique sounds and phrases. These reactions vary based on its mood and the colors it interacts with, providing a dynamic and engaging experience.

MAINTENANCE

Cleaning

To clean your Lumies Dazzle Gogo, gently wipe the surface with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Avoid submerging the toy in water or exposing it to excessive moisture.

Storage

When not in use, store your Lumies Dazzle Gogo in a cool, dry place away from direct sunlight. If

storing for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lumies does not turn on.	Batteries are dead or incorrectly installed.	Ensure the power switch is in the "ON" position. Replace batteries with new AAA batteries, ensuring correct polarity.
Lumies is not matching colors accurately.	Sensor not fully pressed or dirty. Surface color is too dark (e.g., black/grey).	Ensure you press the Lumies firmly onto the colored surface until you feel a click. Clean the sensor area on the bottom of the toy. Try a different, brighter colored surface.
Sounds are distorted or too low.	Low battery power.	Replace batteries with new AAA batteries.
Lumies is unresponsive.	Temporary electronic glitch.	Turn the Lumies off, wait a few seconds, then turn it back on. If the issue persists, replace batteries.

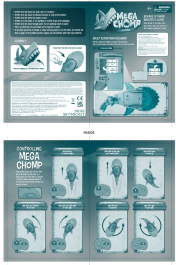 
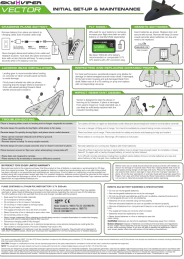 

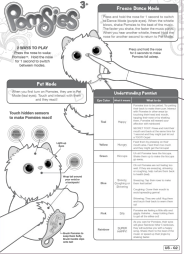 


SPECIFICATIONS

- Model Number:** 02141
- Product Dimensions:** 7 x 3.25 x 7.5 inches
- Item Weight:** 8.8 ounces
- Batteries:** 3 x AAA (LR03) 1.5V batteries (included)
- Manufacturer Recommended Age:** 3 years and up
- Manufacturer:** Skyrocket

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official Skyrocket Toys website. Keep your purchase receipt as proof of purchase.

If you encounter any issues not covered in this manual, please contact Skyrocket customer service for assistance.

	<p>Mega Chomp R/C Shark Toy - Instructions and Features Skyrocket</p> <p>Learn how to assemble, operate, and care for your Mega Chomp R/C Shark toy. Includes safety warnings, battery information, and control instructions from Skyrocket.</p>
	<p>Sky Viper Vector Stunt Plane: Initial Setup, Operation, and Maintenance Guide</p> <p>Comprehensive guide to setting up, flying, and maintaining the Sky Viper Vector Stunt Plane. Includes troubleshooting, safety, warranty, and FCC compliance information.</p>
	<p>Skyrocket Magic Whisper EC Declaration of Conformity</p> <p>Official EC Declaration of Conformity for Skyrocket's Magic Whisper toys, including Luna, Skye, and Zoey models. This document confirms compliance with relevant EU directives and harmonized standards for safety and electromagnetic compatibility.</p>
	<p>Pomsies Interactive Toy: Instructions, Modes, and Care Guide</p> <p>Comprehensive guide for Pomsies interactive toys, detailing play modes like Pet Mode and Freeze Dance Mode, understanding Pomsies' reactions based on eye color, battery installation, product care, troubleshooting, and regulatory information.</p>
	<p>My Fuzzy Friends Moji the Lovable Labradoodle - Interactive Toy Guide</p> <p>Learn how to interact with and care for your My Fuzzy Friends Moji the Lovable Labradoodle toy. This guide covers petting, brushing, trick training, changing Moji's name, and understanding Moji's needs through collar indicators.</p>
	<p>Poe the AI Story Bear User Manual and Play Guide Skyrocket LLC</p> <p>Comprehensive user manual for the Poe the AI Story Bear by Skyrocket LLC (model 18723). Learn how to set up, connect via Bluetooth, create stories using the PlayAi app, and troubleshoot.</p>