

[Manuals.plus](#) /

› [Panasonic](#) /

› Panasonic ER-GP82 Professional Cord/Cordless Hair Clipper User Manual

Panasonic ER-GP82

Panasonic ER-GP82 Professional Cord/Cordless Hair Clipper User Manual

Model: ER-GP82

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Panasonic ER-GP82 Professional Cord/Cordless Hair Clipper. Please read all instructions carefully before use and retain this manual for future reference.







Image: Front view of the Panasonic ER-GP82 Professional Cord/Cordless Hair Clipper, showcasing its ergonomic design and control dial.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Panasonic ER-GP82 Hair Clipper
- 3 Comb Attachments for 6 cutting lengths: 3-4 mm, 6-9 mm, and 12-15 mm
- Charging Stand
- Stand for Comb Attachments
- Blade Oil
- Cleaning Brush
- Power Cord (EU socket) + EU to US plug converter



Image: The three comb attachments included with the clipper, providing various cutting lengths.



Image: The stand designed to organize and store the comb attachments.

SETUP AND CHARGING

1. **Initial Charge:** Before first use, fully charge the clipper. Connect the power cord to the charging stand and plug it into an appropriate electrical outlet using the provided EU to US plug converter if necessary. Place the clipper on the charging stand. The charging indicator light will illuminate.
2. **Charging Time:** A full charge typically takes approximately one hour and provides about 50 minutes of cordless operation.
3. **Attaching Comb Attachments:** To attach a comb, align it with the clipper blade and push it firmly until it clicks into place. To remove, gently pull the comb away from the blade.





Image: The Panasonic ER-GP82 clipper placed on its charging stand, indicating it is ready for charging.



Image: A detailed view of the power cord connected to the clipper for direct charging or corded operation.

OPERATING INSTRUCTIONS

Powering On/Off

Press the power button located on the front of the clipper to turn it on or off.

Adjusting Cutting Length

The ER-GP82 features a 5-step cutting length adjustment dial on the device, ranging from 0.8 mm to 2.0 mm. Rotate the dial to select your desired length. For longer cuts, attach one of the comb attachments (3-4 mm, 6-9 mm, or 12-15 mm).



Image: A close-up of the rotary dial for adjusting the cutting length from 0.8mm to 2.0mm.

Corded and Cordless Operation

The clipper can be used both corded (while plugged in) and cordless (after charging). The linear motor maintains consistent cutting performance regardless of the battery charge level or hair density.

Usage Tips

- For best results, ensure hair is clean and dry before clipping.
- Move the clipper against the direction of hair growth for an even cut.
- Start with a longer setting and gradually reduce the length if unsure.



Image: A hand demonstrating the comfortable grip of the Panasonic ER-GP82 hair clipper during operation.

MAINTENANCE

Cleaning the Blades

1. Turn off the clipper and detach the comb attachment.
2. Gently push the blade unit away from the clipper body to remove it.
3. Use the provided cleaning brush to remove hair clippings from the blade unit and the clipper body.
4. The blades can be rinsed under running water. Ensure they are completely dry before reattaching.
5. Reattach the blade unit by aligning it and pushing until it clicks into place.

Oiling the Blades

After each cleaning or approximately once a week, apply a few drops of the provided blade oil to the moving parts of the blade. Turn on the clipper for a few seconds to distribute the oil evenly. This ensures smooth operation and extends blade life.

SAFETY INFORMATION

- Avoid use on infants.
- Keep the device away from water sources. Do not immerse the clipper in water.
- Exercise caution when using near the face and eyes.
- Follow recommended charging procedures to prevent damage to the battery.
- Handle the clipper with care to prevent injury.
- Do not disassemble or attempt to repair the clipper yourself. Contact qualified service personnel.

TROUBLESHOOTING

If you encounter issues with your Panasonic ER-GP82, consider the following common solutions:

- **Clipper not turning on:** Ensure the battery is charged. If using corded, check the power connection.
- **Reduced cutting performance:** Clean the blades thoroughly and apply blade oil. Ensure no hair is trapped in the blade mechanism.
- **Unusual noise:** Clean and oil the blades. If the noise persists, discontinue use and contact customer support.
- **Battery not charging:** Verify the power cord and charging stand connections. Ensure the electrical outlet is functional.

For persistent issues, please refer to the warranty and support section.

SPECIFICATIONS

Feature	Detail
Model Name	ER-GP82
Blade Material	Titanium, Carbon Fiber (X-taper Blade 2.0)
Cutting Length Adjustment	0.8 mm - 2.0 mm (5 steps) + 3 comb attachments (3-4 mm, 6-9 mm, 12-15 mm)
Motor Type	Linear Motor with Constant Control
Power Source	Battery Powered (Cord/Cordless)
Battery Type	Rechargeable Lithium-ion
Charging Time	Approx. 1 hour
Operating Time	Approx. 50 minutes (cordless)
Dimensions	1.85 x 1.89 x 6.93 inches
Weight	245 Grams (8.64 ounces)

WARRANTY AND SUPPORT

Panasonic products are manufactured to high-quality standards. For warranty information, service, or technical support, please refer to the documentation included with your purchase or visit the official Panasonic website. Keep your proof of purchase for warranty claims.

© 2024 Panasonic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question