

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Magnavox](#) /

› [Magnavox 40ME325V/F7 40-inch 1080P LED HDTV User Manual](#)

Magnavox 40ME325V/F7

Magnavox 40ME325V/F7 40-inch 1080P LED HDTV User Manual

Model: 40ME325V/F7

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Magnavox 40ME325V/F7 40-inch 1080P LED HDTV. Please read these instructions thoroughly before using your television to ensure optimal performance and safety. Keep this manual for future reference.



Image 1.1: Front view of the Magnavox 40ME325V/F7 40-inch LED HDTV. This image displays the television's screen and bezel, with the Magnavox logo centered at the bottom.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent electric shock, fire, or damage to the unit.

- Do not expose the television to rain or moisture.
- Do not block ventilation openings. Ensure adequate space around the TV for proper airflow.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the television during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. WHAT'S IN THE BOX

Verify that all components are present upon unpacking:

- Magnavox 40ME325V/F7 40-inch LED HDTV
- TV Stand (2 pieces)
- Remote Control
- Power Cord
- User Manual (this document)
- AA Batteries (2) for Remote Control

4. SETUP

4.1 Attaching the Stand

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align the stand pieces with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Do not overtighten.
4. Place the TV on a stable, level surface.

4.2 Connecting Peripherals

Connect your external devices to the appropriate ports on the back of the television.





Image 4.1: Rear view of the Magnavox 40ME325V/F7 television's input/output ports. This image shows the location of the Antenna In, Component In, HDMI (1, 2, 3), Digital Audio Out (Coaxial), Headphone/Audio Out, and USB ports.

- **HDMI Inputs (HDMI 1, 2, 3):** Connect Blu-ray players, game consoles, cable/satellite boxes, or other HDMI-enabled devices. The TV features 3 HDMI inputs for versatile connectivity.
- **Antenna In:** Connect an external antenna or cable TV coaxial cable for over-the-air or basic cable channels.
- **Component In (YPbPr):** Connect older devices using component video and analog audio cables.
- **USB:** Insert a USB flash drive to view JPEG photos.
- **Digital Audio Out (Coaxial):** Connect to a home theater system or soundbar for digital audio output.
- **Headphone/Audio Out:** Connect headphones or external speakers.

4.3 Powering On

1. Plug the power cord into the TV's power input, then into a wall outlet.
2. Press the **POWER** button on the remote control or on the TV itself.
3. Follow the on-screen instructions for initial setup, including language selection and channel scanning.

5. OPERATING THE TELEVISION

5.1 Remote Control Overview

Familiarize yourself with the functions of the remote control.



Image 5.1: The Magnavox television remote control. Key buttons include Power, Source, Number Pad, Volume Up/Down, Channel Up/Down, Menu, Info, and Navigation controls.

- **POWER:** Turns the TV on or off.
- **SOURCE:** Selects input sources (HDMI 1, HDMI 2, HDMI 3, TV, Component, USB).
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels.
- **MENU:** Accesses the main menu for settings adjustments.
- **INFO:** Displays current channel or input information.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigate through menus and confirm selections.

5.2 Basic Functions

- **Changing Channels:** Use the **CH +/-** buttons or the number pad to select channels.
- **Adjusting Volume:** Use the **VOL +/-** buttons.
- **Selecting Input Source:** Press the **SOURCE** button repeatedly to cycle through available inputs, or use the navigation buttons to select from the on-screen menu.
- **Picture Settings:** Access the menu to adjust settings such as brightness, contrast, color, and picture mode. The TV features Brilliant Motion Rate 120 (BMR 120) for smooth motion in fast-paced scenes.

5.3 USB Media Playback

The Magnavox 40ME325V/F7 includes a JPEG Photo Viewer function.

1. Insert a USB flash drive containing JPEG image files into the USB port on the TV.
2. Select the USB input source using the **SOURCE** button.
3. Navigate through your photos using the remote control.

6. MAINTENANCE

6.1 Cleaning the TV

- Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for TVs, applied to the cloth, not directly to the screen.
- Cabinet:** Wipe the cabinet and stand with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Always unplug the TV before cleaning.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No power	Power cord disconnected; outlet malfunction	Ensure power cord is securely plugged in; test outlet with another device.
No picture, but sound is present	Incorrect input source selected; external device issue	Press SOURCE to select the correct input; check connections to external devices.
No sound, but picture is present	Volume muted or too low; audio cable issue	Press VOL + or unmute; check audio cable connections.
Remote control not working	Batteries depleted; obstruction; incorrect pairing	Replace batteries; remove obstructions; ensure remote is pointed at the TV's IR sensor.

8. SPECIFICATIONS

Key technical specifications for the Magnavox 40ME325V/F7 HDTV:

Feature	Specification
Brand	Magnavox
Model Number	40ME325V/F7
Screen Size	40 Inches
Display Technology	LED
Resolution	1080p (Full HD)
Refresh Rate	120 Hz (Brilliant Motion Rate)
HDMI Inputs	3
USB Port	1 (for JPEG Photo Viewer)
Item Weight	17.64 Pounds
Product Dimensions (L x W x H)	36 x 7.1 x 22.4 inches
Included Components	Stand, TV

For more information on energy consumption, please visit ftc.gov/energy.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Magnavox website. Please note that an additional 2-year warranty may have been purchased through specific retailers like Target, which would be separate from the standard manufacturer's warranty.

For service or inquiries, please contact Magnavox customer support.