

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [AmazonBasics](#) /

> [AmazonBasics Vertical Ergonomic 2.4G Wireless Optical Mouse User Manual \(Model MM-8033\)](#)

AmazonBasics MM-8033

AmazonBasics Vertical Ergonomic 2.4G Wireless Optical Mouse

Model: MM-8033

INTRODUCTION

Thank you for purchasing the AmazonBasics Vertical Ergonomic 2.4G Wireless Optical Mouse. This manual provides essential information for setting up, operating, and maintaining your new mouse. Please read these instructions carefully before use and retain them for future reference.



Image: The AmazonBasics Vertical Ergonomic Wireless Optical Mouse positioned on a white desk alongside a laptop, demonstrating a typical usage scenario.

PACKAGE CONTENTS

Please check the package for the following items:

- AmazonBasics Vertical Ergonomic 2.4G Wireless Optical Mouse
- USB Receiver

Note: Batteries are not included and must be purchased separately.

FEATURES

- **Ergonomic Vertical Design:** Promotes a natural hand and wrist posture, reducing strain.
- **2.4G Wireless Connectivity:** Provides a reliable connection for use with PCs and laptops.
- **Optical Tracking:** Ensures precise and smooth cursor control.
- **Adjustable DPI:** Allows customization of cursor sensitivity for different tasks.
- **Multiple Buttons:** Includes left/right click, scroll wheel, DPI button, and forward/back buttons for enhanced productivity.
- **Battery Powered:** Operates on AAA batteries for portability.



Image: A side view of the AmazonBasics Vertical Ergonomic Wireless Optical Mouse, highlighting its contoured shape, thumb rest, and the forward/back buttons along with the DPI button.

SETUP

1. Install Batteries

1. Locate the battery compartment on the underside of the mouse.
2. Gently slide open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover until it clicks securely into place.



Image: The underside of the mouse with the battery compartment cover removed, showing the slots for two AAA batteries and the storage slot for the USB receiver.

2. Connect USB Receiver

1. Remove the USB receiver from its storage slot within the battery compartment.
2. Plug the USB receiver into an available USB port on your computer (PC or laptop).
3. Your computer should automatically detect and install the necessary drivers. This may take a few moments.

3. Power On the Mouse

1. Locate the ON/OFF switch on the underside of the mouse.
2. Slide the switch to the "ON" position.
3. The mouse is now ready for use.



Image: The bottom of the AmazonBasics Vertical Ergonomic Wireless Optical Mouse, displaying the ON/OFF switch, the optical sensor, and the product label with model information.

OPERATING INSTRUCTIONS

Basic Functions

- **Left Click:** Primary selection and activation.
- **Right Click:** Opens contextual menus.
- **Scroll Wheel:** Scrolls documents and web pages vertically. Can also be pressed for middle-click functionality.



Image: A top-down view of the AmazonBasics Vertical Ergonomic Wireless Optical Mouse, clearly showing the left and right click buttons separated by the scroll wheel.

Advanced Functions

- **DPI Button:** Located near the top of the mouse. Press this button to cycle through different DPI (Dots Per Inch) settings, adjusting cursor sensitivity. This allows you to switch between faster and slower cursor speeds as needed.
- **Forward/Back Buttons:** Located on the side of the mouse, accessible by your thumb. These buttons typically function as 'Forward' and 'Back' in web browsers and file explorers.

MAINTENANCE

Cleaning

To clean the mouse, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals or abrasive materials, as these can damage the mouse's surface.

Battery Replacement

When the mouse's performance degrades or it stops responding, it may be time to replace the batteries. Follow the steps in the "Install Batteries" section under Setup to replace the two AAA batteries.

TROUBLESHOOTING

- **Mouse not responding:**

- Ensure the mouse is switched to the "ON" position.
- Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
- Ensure the USB receiver is securely plugged into a working USB port on your computer. Try a different USB port.
- Restart your computer.

- **Erratic cursor movement:**

- Clean the optical sensor on the underside of the mouse with a soft, dry cloth.
- Ensure you are using the mouse on a suitable surface. Highly reflective or transparent surfaces may affect tracking. A mouse pad is recommended.
- Check for interference from other wireless devices.

- **Connection issues:**

- Move the mouse closer to the USB receiver.
- Avoid placing the receiver near large metal objects or other electronic devices that might cause interference.

SPECIFICATIONS

Model Number	MM-8033
Connectivity Technology	2.4G Wireless
Movement Detection	Optical
Number of Buttons	5 (Left, Right, Scroll Wheel, DPI, Forward, Back)
Power Source	2 x AAA Batteries (not included)
Average Battery Life	Up to 12 Months
Compatible Operating Systems	Linux, Windows 7, Windows XP (and newer versions)
Compatible Hardware Platforms	Laptop, PC
Product Dimensions (LxWxH)	15.32 x 7.8 x 8.92 cm (6.03 x 3.07 x 3.51 inches)
Item Weight	122 g

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the AmazonBasics product page or contact Amazon customer service directly. Keep your purchase receipt for warranty claims.

