

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Uniden](#) /

› [UNIDEN AS6404 Corded Landline Phone User Manual](#)

Uniden AS6404

UNIDEN AS6404 Corded Landline Phone User Manual

Model: AS6404

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your UNIDEN AS6404 Corded Landline Phone. Please read this manual thoroughly before using your phone and retain it for future reference. This phone features a backlit LCD, speakerphone function, caller ID, and various customizable settings to enhance your communication experience.

Uniden®

AS6404

**Speaker Phone
LCD backlit**



Features:

- Backlit LCD
- Speakerphone Function
- 61 Incoming CID
- 16 Outgoing CID with Conversation Time Review
- Flash Time Selectable (100 / 300 / 600ms)
- Ringer Volume Setting (HI / MID / LOW / OFF)
- LCD Display (Year, Month, Date & Time)
- Message Waiting Lamp (PULSE, FSK, DTMF)
- Tone/Pulse Dialing
- Ringer Tone Selectable
- Alarm Clock Function
- Wall Mountable
- Work Without Battery
- Available Color: Black / White

Packing (per carton)

Qty: 10pcs
G.W: 7.36kgs
Master Carton Size:
45 x 33.5 x 22.3cm

Barcode

Black – 4895152901949
White – 4895152901956



Figure 1: UNIDEN AS6404 Corded Landline Phone (White model shown)

1. PACKAGE CONTENTS

Verify that your package contains the following items:

- Base Unit
- Handset

- Line Cord
- Handset Cord
- User Manual

2. SETUP

2.1 Connecting the Handset

1. Connect one end of the coiled handset cord to the handset.
2. Connect the other end of the coiled handset cord to the jack labeled **HANDSET** on the side of the phone base unit.

2.2 Connecting the Telephone Line

1. Connect one end of the telephone line cord to the jack labeled **LINE** on the back of the phone base unit.
2. Connect the other end of the telephone line cord to your wall telephone jack.

2.3 Power Supply

The UNIDEN AS6404 is designed to operate without an external power adapter or batteries for basic functions, drawing power directly from the telephone line. This feature ensures functionality even during power outages. Some advanced features, such as LCD backlight and memory retention, may utilize a small internal battery (not user-replaceable) or rely on line power.

2.4 Wall Mounting

The phone is wall-mountable. To mount the phone:

1. Locate the wall mounting holes on the back of the base unit.
2. Install two screws (not included) into the wall, spaced appropriately for the mounting holes.
3. Slide the phone onto the screws until it is securely in place.

3. BASIC OPERATION

3.1 Making a Call

1. Lift the handset or press the **SPEAKER** button.
2. Listen for a dial tone.
3. Dial the desired telephone number.

3.2 Answering a Call

1. When the phone rings, lift the handset or press the **SPEAKER** button to answer.

3.3 Ending a Call

1. Place the handset back on the cradle or press the **SPEAKER** button again if using speakerphone.

3.4 Speakerphone Function

To use the speakerphone:

1. Press the **SPEAKER** button to initiate or answer a call without lifting the handset.
2. Adjust the speaker volume using the volume control buttons (if available, refer to phone's physical buttons).
3. Press the **SPEAKER** button again to end the call.

3.5 Redialing the Last Number

To redial the last number dialed:

1. Lift the handset or press the **SPEAKER** button.
2. Press the **REDIAL** button. The phone will automatically dial the last number.

4. ADVANCED FEATURES



Figure 2: Close-up view of the UNIDEN AS6404 keypad and LCD display

4.1 Caller ID

The phone supports Caller ID (CID) for both incoming and outgoing calls, provided you have subscribed to the service from your telephone provider.

- **Incoming CID:** Stores up to 61 incoming call records. Use the **UP/DOWN** navigation buttons to review the call history.
- **Outgoing CID:** Stores up to 16 outgoing call records with conversation time review.

4.2 LCD Display Settings

The backlit LCD displays the Year, Month, Date, and Time. Refer to the phone's menu or **SET** button for instructions on adjusting these settings.

4.3 Ringer Volume Adjustment

You can adjust the ringer volume to High (HI), Medium (MID), Low (LOW), or Off (OFF) to suit your environment. Use the dedicated **RINGER** button or menu option to cycle through the settings.

4.4 Flash Time Selection

The flash time is selectable (100 / 300 / 600ms) to ensure compatibility with various telephone systems (PABX, etc.). Adjust this setting via the phone's menu if you experience issues with call transfer or conference features.

4.5 Message Waiting Lamp (MWL)

The Message Waiting Lamp (MWL) indicates when you have new messages in your voicemail service (PULSE,

FSK, DTMF compatible). This feature requires subscription to a voicemail service from your telephone provider.

4.6 Tone/Pulse Dialing Mode

The phone supports both Tone and Pulse dialing modes. Select the appropriate mode based on your telephone line service. This setting is usually found in the phone's setup menu.

4.7 Ringer Tone Selection

Choose from various ringer tones to personalize your phone. Consult the user interface for available options and selection method.

4.8 Alarm Clock Function

The integrated alarm clock function allows you to set a wake-up or reminder alarm. Access this feature through the phone's menu settings.

4.9 Other Functions

- **Pre Dial Function:** Allows you to enter a number before lifting the handset or initiating a call.
- **Music on Hold / Do Not Disturb (DND):** These features may be available through specific button presses or menu options. Refer to the on-screen prompts or quick reference guide for activation.
- **Contrast Adjustable:** Adjust the LCD display contrast for optimal viewing.
- **IDD Code and PABX Dial Outcode Setting:** For international direct dialing or private automatic branch exchange systems.

5. MAINTENANCE

5.1 Cleaning

To keep your phone in good condition:

- Wipe the phone with a soft, slightly damp cloth.
- Do not use harsh chemicals, cleaning solvents, or abrasive cleaners.
- Ensure no liquid enters the phone's openings.

5.2 Storage

If you need to store the phone for an extended period, disconnect it from the telephone line and store it in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your UNIDEN AS6404, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
No dial tone	Telephone line cord is loose or disconnected.	Ensure the telephone line cord is securely connected to both the phone and the wall jack.
No display on LCD	Phone not receiving sufficient line power.	Check line connections. If problem persists, contact your telephone service provider.
Caller ID not working	Caller ID service not subscribed or activated.	Contact your telephone service provider to ensure Caller ID service is active on your line.

Problem	Possible Cause	Solution
Low speaker/handset volume	Volume setting is too low.	Adjust the volume using the dedicated volume buttons during a call.
Buttons not responding	Temporary software glitch.	Disconnect the phone from the telephone line for a few minutes, then reconnect it.

7. SPECIFICATIONS

Below are the technical specifications for the UNIDEN AS6404 Corded Landline Phone:

Feature	Description
Model Number	AS6404
Product Dimensions	18.42 x 19.69 x 5.72 cm
Item Weight	340 g
Colour	White
Telephone Type	Corded
Material	Plastic
Power Source	Line Powered (Works Without Battery)
Display	Backlit LCD (Year, Month, Date & Time)
Caller ID	61 Incoming CID, 16 Outgoing CID with Conversation Time Review
Ringer Volume	HI / MID / LOW / OFF settings
Flash Time	Selectable (100 / 300 / 600ms)
Dialing Mode	Tone/Pulse Dialing
Special Features	Speakerphone, Message Waiting Lamp (PULSE, FSK, DTMF), Ringer Tone Selectable, Alarm Clock, Wall Mountable, Contrast Adjustable, Pre Dial Function, Music on Hold / DND

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact Uniden customer support directly. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical support or further assistance, please visit the official Uniden website or contact their customer service department using the contact information provided in your product packaging or on their website.

