

GreatPowerDirect GPD090216-33509

GreatPowerDirect AC Power Adapter Charger Cord User Manual

For Polaroid PBT514, PBT515, PBT3022, PBT3025 Speakers

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your GreatPowerDirect AC Power Adapter Charger Cord, model GPD090216-33509. Please read this manual thoroughly before using the product to ensure proper function and longevity. This adapter is specifically designed for use with Polaroid PBT514, PBT515, PBT3022, and PBT3025 Speakers.

2. PRODUCT OVERVIEW

The GreatPowerDirect AC Power Adapter is a compact and portable power supply designed to charge compatible Polaroid speakers. It features a durable construction and is manufactured to meet safety standards including FCC, CE, and RoHS. Each unit undergoes testing to ensure reliable performance and full compatibility with the specified speaker models.



Figure 1: The GreatPowerDirect AC Power Adapter. This image shows the main body of the adapter, which plugs into a wall outlet, featuring a small red indicator light on its surface.

This adapter is an OEM equivalent part, ensuring seamless integration and performance with your Polaroid

speaker.

3. SETUP INSTRUCTIONS

1. **Identify the Charging Port:** Locate the charging port on your Polaroid PBT514, PBT515, PBT3022, or PBT3025 Speaker. This is typically a micro-USB port.
2. **Connect the Adapter to the Speaker:** Insert the micro-USB connector of the adapter cord firmly into the charging port of your speaker.
3. **Connect to Power Outlet:** Plug the AC prongs of the adapter into a standard wall power outlet (100-240V AC, 50/60Hz).
4. **Verify Connection:** Once connected, the adapter's indicator light (if present) or your speaker's charging indicator should illuminate, signifying that charging has begun.



Figure 2: The AC Power Adapter with its integrated micro-USB cable. This image displays the adapter unit and the coiled cable, ready for connection.

4. OPERATING INSTRUCTIONS

Once properly connected as described in the Setup Instructions, the adapter will automatically begin charging your Polaroid speaker. The charging process is indicated by the speaker's charging light or display. No further user interaction is required during the charging cycle. Disconnect the adapter from the speaker and the wall outlet once charging is complete or when the speaker is not in use.

5. MAINTENANCE

- **Cleaning:** Disconnect the adapter from the power outlet and the speaker before cleaning. Use a soft, dry cloth to wipe the surface of the adapter. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Handling:** Do not drop, disassemble, or attempt to repair the adapter. Avoid exposing it to water or other liquids.

6. TROUBLESHOOTING

- **Speaker Not Charging:**

- Ensure the adapter is securely plugged into both the wall outlet and the speaker's charging port.
 - Verify that the wall outlet is functional by testing it with another device.
 - Check the adapter cable for any visible damage or kinks.
- **Adapter Feels Warm:**
 - It is normal for the adapter to become slightly warm during operation. If it becomes excessively hot or emits smoke/odor, immediately disconnect it from the power outlet and discontinue use.

If troubleshooting steps do not resolve the issue, please refer to the Warranty and Support section.

7. SPECIFICATIONS

Feature	Detail
Model Number	GPD090216-33509
Brand	GreatPowerDirect
Compatible Devices	Polaroid PBT514, PBT515, PBT3022, PBT3025 Speakers
Item Weight	8 Ounces (approximately 227 grams)
Safety Standards	FCC, CE, RoHS

8. WARRANTY AND SUPPORT

This GreatPowerDirect product includes a **30-Day Money Back Guarantee** and a **1-Year Exchange Warranty** from the date of purchase. This warranty covers manufacturing defects and ensures that the product is free from defects in material and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your AC Power Adapter Charger Cord, please contact the manufacturer's customer support. Please have your model number (GPD090216-33509) and proof of purchase available when contacting support.

© 2023 GreatPowerDirect. All rights reserved.

Related Documents - GPD090216-33509



[BRIO Railway Catalogue - Explore Wooden Train Sets and Toys](#)

Discover the world of BRIO wooden railway toys. Browse the latest catalogue featuring train sets, accessories, and play worlds for children of all ages, from infant to toddler and beyond.