

manuals.plus /

- › [De Dietrich](#) /
- › [De Dietrich DPI7969XS Induction Cooktop User Manual](#)

## De Dietrich DPI7969XS

# De Dietrich DPI7969XS Induction Cooktop User Manual

## 1. INTRODUCTION

Thank you for choosing the De Dietrich DPI7969XS Induction Cooktop. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your appliance. Please read these instructions carefully before using the cooktop and retain them for future reference.



Figure 1.1: Top view of the De Dietrich DPI7969XS Induction Cooktop, showcasing its sleek black glass surface and control panel.

## 2. SAFETY INFORMATION

Your safety and the safety of others are paramount. Please observe all safety warnings and precautions outlined in this section.

## 2.1 General Safety

- This appliance is intended for domestic use only.
- Do not allow children to play with the appliance. Keep children and pets away from the cooktop during operation.
- Ensure proper ventilation around the appliance.
- Do not store flammable materials on or near the cooktop.
- Always use appropriate cookware for induction cooking.
- The cooktop features a **Child Lock** function to prevent accidental operation.

## 2.2 Electrical Safety

- Installation must be performed by a qualified electrician in accordance with local regulations.
- The appliance requires a dual power supply with 32 A + 20 A fuses.
- Ensure the voltage and frequency of your electrical supply match the specifications of the cooktop.
- Do not operate the cooktop if the power cord or plug is damaged.
- Disconnect the appliance from the power supply before any cleaning or maintenance.

## 3. PRODUCT OVERVIEW

---

The De Dietrich DPI7969XS is a high-performance induction cooktop designed for modern kitchens. It offers advanced features for flexible and efficient cooking.

### 3.1 Key Features

- **Heating Zones:** 6 independent heating fields, configurable into 3 horizontal heating zones (40 x 23 cm each, 3,700 W).
- **Power Levels:** 20 adjustable power settings.
- **Booster Function:** 6 Booster functions for rapid heating.
- **Timer Function:** 6 independent timers.
- **Piano Mode:** Dedicated settings for frying, intensive cooking, and steaming.
- **Automatic Pot Detection:** Ensures efficient energy use.
- **Safety System:** Full 10-point safety system with residual heat indicator and main cooktop switch.
- **Total Power:** 11,100 W.
- **Included Accessory:** Wooden cutting board.



Figure 3.1: The De Dietrich DPI7969XS Induction Cooktop seamlessly integrated into a kitchen countertop.

## 4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and optimal performance of your induction cooktop. It is recommended that installation be carried out by a qualified professional.

### 4.1 Unpacking

Carefully unpack the cooktop and check for any signs of damage. Retain all packaging materials until you are satisfied with the product.

### 4.2 Installation Dimensions

Ensure your countertop cutout meets the specified dimensions for a secure fit and adequate ventilation.

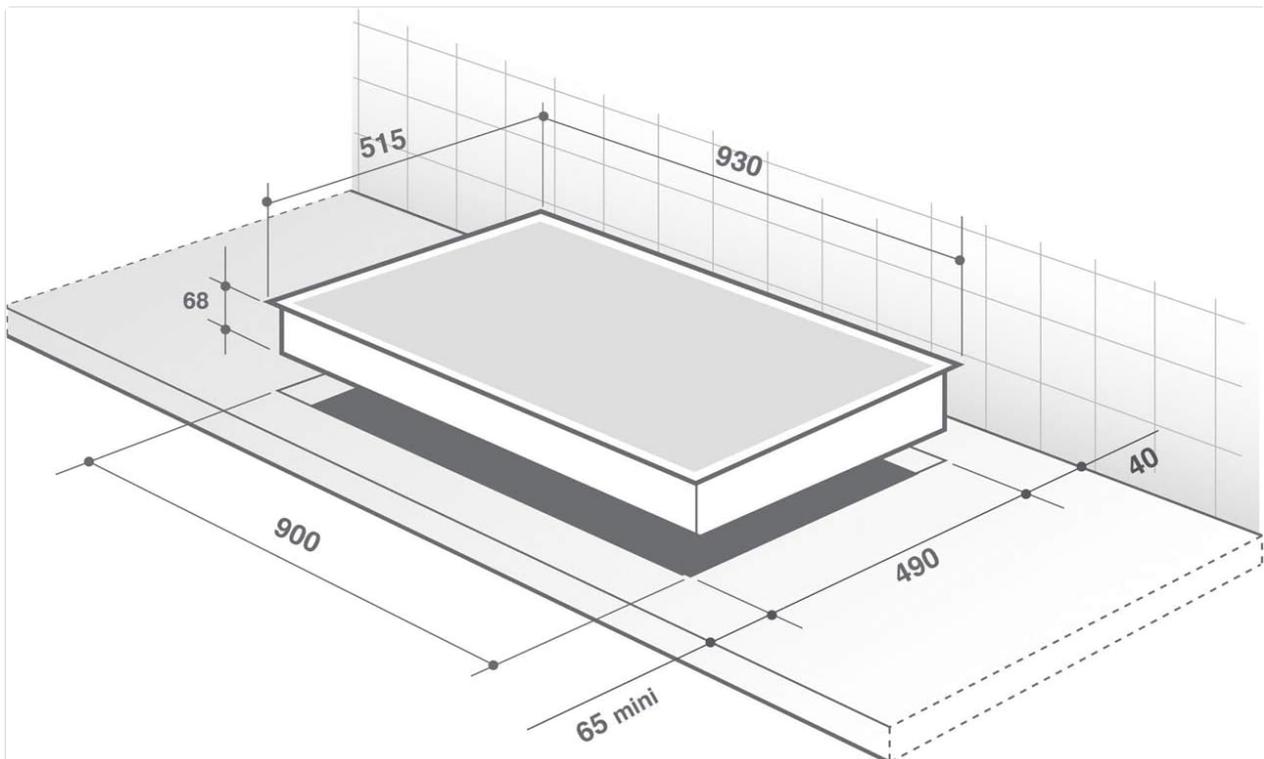


Figure 4.1: Detailed diagram illustrating the required cutout dimensions for installing the cooktop. The cutout should be

approximately 900mm (width) x 490mm (depth).

### 4.3 Electrical Connection

The cooktop comes with 2 power connection cables. Connect the appliance to a dual power supply with 32 A + 20 A fuses. Refer to the wiring diagram on the underside of the appliance and consult a qualified electrician for proper connection.

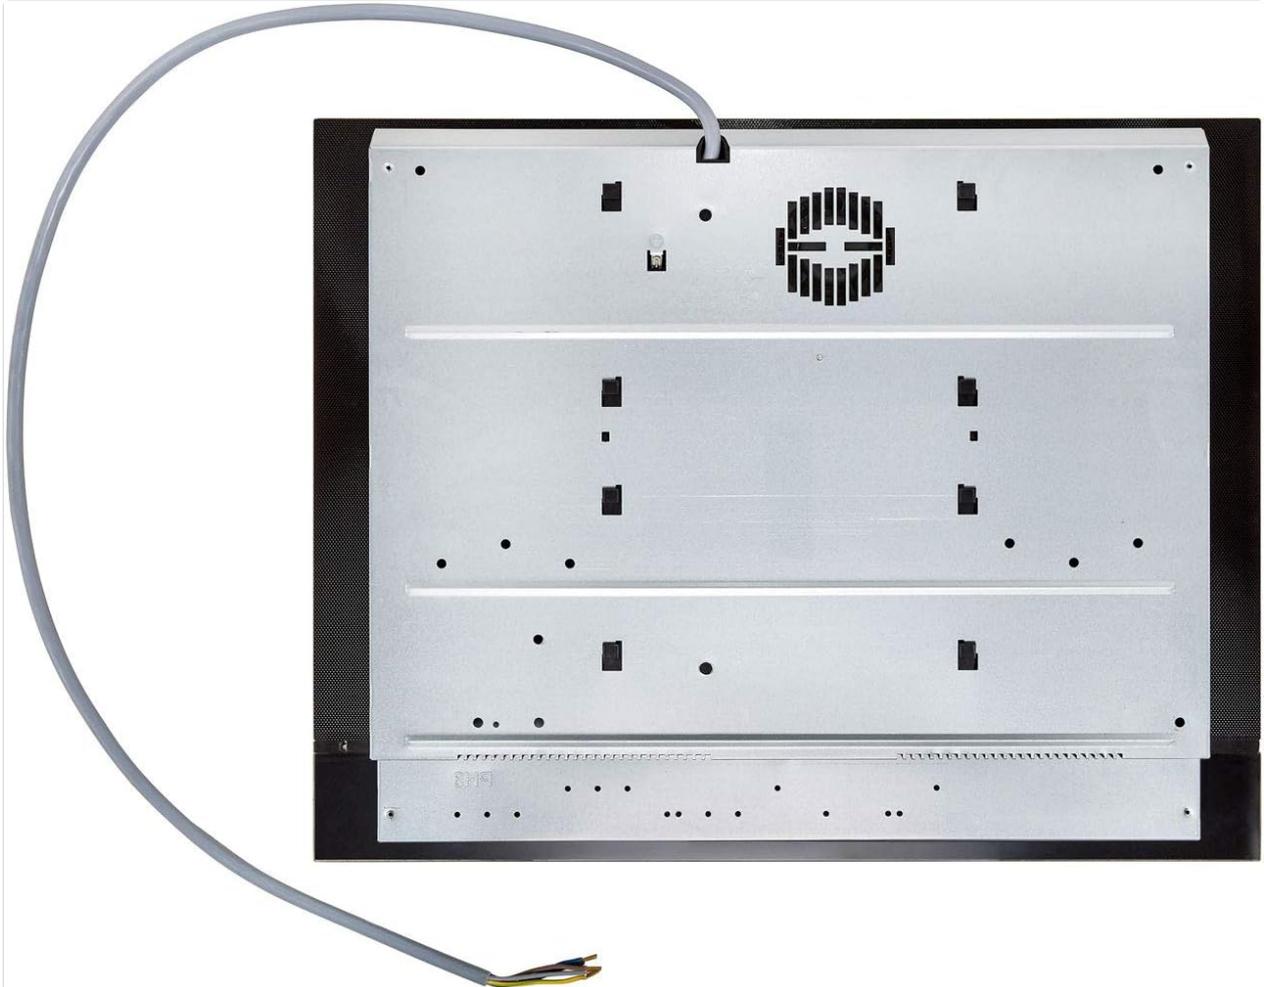


Figure 4.2: Underside view of the cooktop, showing the electrical connection points and ventilation.

## 5. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and functions to effectively use your De Dietrich DPI7969XS Induction Cooktop.

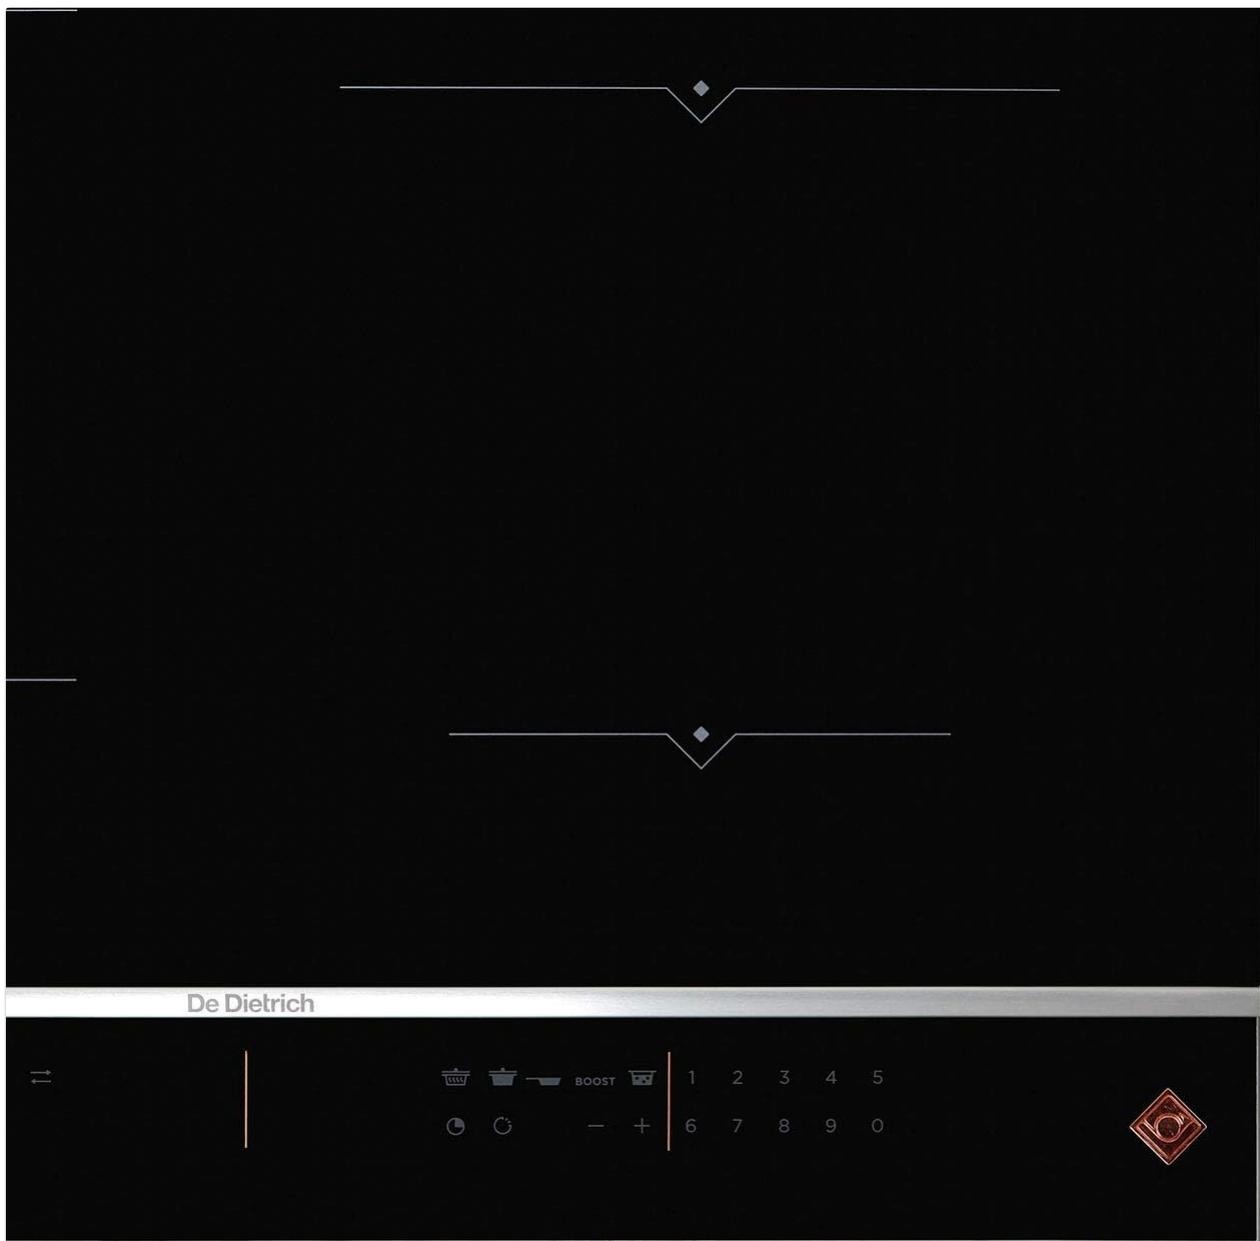


Figure 5.1: Detailed view of the cooktop's touch control panel, featuring power level selectors, function buttons, and timers.

## 5.1 Basic Operation

1. **Power On/Off:** Touch the main power button to turn the cooktop on or off.
2. **Zone Selection:** Place suitable cookware on the desired heating zone. Select the zone by touching its corresponding control.
3. **Power Level Adjustment:** Use the '+' and '-' controls or the numerical keypad to select one of the 20 power levels.

## 5.2 Special Functions

- **Booster:** Activate the Booster function for rapid heating. This temporarily increases the power to the selected zone. There are 6 Booster functions available.
- **Timer:** Set a cooking timer for each zone independently. There are 6 Timer functions.
- **Piano Mode:** This mode allows you to define 3 horizontal heating zones with preset power levels for frying, intensive cooking, and steaming, enabling seamless movement of cookware between stages.
- **Automatic Pot Detection:** The cooktop automatically detects the presence and size of cookware, ensuring efficient energy transfer.

- **Programmed Power Levels:** Utilize 4 pre-programmed power levels, including Booster, for common cooking tasks.
- **Additional Functions:** The cooktop includes 6 specific functions: Cooking, Elapsed Time, Recall, Clean Lock, Grill, and Plancha. Refer to the full manual for detailed usage of each.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooktop.

- **Daily Cleaning:** Wipe the glass surface with a soft cloth and a mild detergent after each use, once the surface has cooled down.
- **Stubborn Stains:** For burnt-on food or stubborn stains, use a specialized ceramic hob scraper.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the glass surface.
- **Clean Lock Function:** Activate the **Clean Lock** function to temporarily disable the controls during cleaning, preventing accidental changes to settings.
- Ensure the cooktop is disconnected from the power supply before any deep cleaning.

## 7. TROUBLESHOOTING

---

If you encounter issues with your cooktop, refer to the following common troubleshooting steps. For problems not listed here, contact customer support.

- **Cooktop Not Turning On:** Check the power supply and ensure the main cooktop switch is engaged. Verify that the circuit breaker has not tripped.
- **Heating Zone Not Working:** Ensure suitable cookware is placed correctly on the zone. The automatic pot detection requires ferromagnetic cookware.
- **Error Codes:** If an error code appears on the display, consult the full product manual for specific meanings and solutions.
- **Residual Heat Indicator:** The cooktop features a residual heat indicator (H) to warn that the surface is still hot after use.
- **Unusual Noises:** A slight humming or buzzing sound during operation is normal for induction cooktops and is caused by the magnetic fields.

## 8. SPECIFICATIONS

---

Specification	Detail
Brand	De Dietrich
Model Number	DPI7969XS
Manufacturer	De Dietrich
Color	Black
Material	Glass
Burner Type	Induction

Heating Elements	6 (configurable into 3 zones)
Power Source	Electric Wired
Voltage	230 Volt
Wattage (Max)	11,100 Watts (Total)
Individual Zone Power	Up to 3,700 Watts
Product Dimensions (W x D x H)	90 cm x 49 cm x 6 cm
Special Features	Child Lock
Included Components	Induction Cooktop, 2 Power Connection Cables, Wooden Cutting Board
First Available Date	October 3, 2021

Note: The product dimensions provided in the description (90 cm x 49 cm x 6 cm) refer to the cooktop itself, while other dimensions (61D x 115B x 14H cm) may refer to packaging or a different measurement context.

## 9. WARRANTY AND SUPPORT

For warranty information, technical support, or service requests, please refer to the warranty card included with your product or contact your retailer or the official De Dietrich customer service in your region. Keep your purchase receipt as proof of purchase.

### Related Documents - DPI7969XS

<p><i>INDUCTION HOB</i></p> 	<p><a href="#">De Dietrich Induction Hob User Manual and Guide</a></p> <p>Comprehensive user manual for the De Dietrich Induction Hob, covering safety, installation, operation, care, troubleshooting, and environmental information.</p>
 <p><i>TABLE INDUCTION INDUCTION HOB PLACA DE INDUCCIÓ PLACA DE INDUÇÃO PŁYTA INDUKCYJNA INDUKTIKOKESZPLÁT INDUKČNÍ VARNÁ DESKA INDUKSIÓN LEŤNŪT PLATNA EHAFAZTKEE ESTIE</i></p> 	<p><a href="#">De Dietrich Induction Hob User Guide - Features, Installation, and Operation</a></p> <p>Comprehensive user guide for De Dietrich induction hobs, covering features like Horizonte, Duozone, Power Management, installation instructions, electrical connections, operation, and maintenance.</p>

