

[Manuals.plus](#) /

> [Clarion](#) /

> Clarion NX612 Digital Terrestrial Film Antenna Set User Manual

Clarion NX612

Clarion NX612 Digital Terrestrial Film Antenna Set User Manual

Model: NX612 (KD21-901-NX612) | Brand: Clarion

INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Clarion NX612 Digital Terrestrial Film Antenna Set. Please read this manual thoroughly before installation and keep it for future reference. This product is designed to enhance digital terrestrial broadcast reception for compatible Clarion navigation systems.

PRODUCT OVERVIEW

The Clarion NX612 Digital Terrestrial Film Antenna Set is a genuine Clarion accessory designed for high-sensitivity reception of digital terrestrial television broadcasts. It ensures reliable performance and quality when used with compatible Clarion navigation systems.

Key Features:

- Genuine Clarion manufacturer's digital terrestrial antenna set.
- Designed for high-sensitivity digital terrestrial broadcast reception.
- Ensures reliable performance and quality for compatible Clarion navigation systems.

SETUP AND INSTALLATION

Proper installation is crucial for optimal reception. Follow these general guidelines. Refer to your specific Clarion navigation system's manual for detailed connection instructions.

Installation Steps:

- Preparation:** Ensure the vehicle's ignition is off and disconnect the battery to prevent electrical damage. Clean the installation surface thoroughly with an alcohol wipe to ensure proper adhesion of the film antenna.
- Antenna Placement:** Carefully peel the backing from the film antenna elements. Install the film antennas on the inside of the vehicle's windshield or side windows, ensuring they are positioned vertically and away from

metallic obstructions or defroster lines. Refer to the diagram below for typical placement.

3. **Cable Routing:** Route the antenna cables discreetly along the window edges and vehicle pillars to the location of your Clarion navigation unit. Secure the cables with clips or tape to prevent interference with vehicle operation.
4. **Connection:** Connect the antenna cables to the corresponding antenna input terminals on your Clarion navigation system. Ensure a secure and firm connection.
5. **Testing:** Reconnect the vehicle battery and turn on the ignition. Power on your Clarion navigation system and navigate to the digital terrestrial TV function. Perform an auto-scan for channels to verify reception. Adjust antenna placement slightly if reception is poor.



Image: Clarion NX612 film antenna elements. This image shows the two main film antenna elements with their connecting cables, illustrating their design for discreet window mounting.

OPERATING INSTRUCTIONS

The Clarion NX612 Digital Terrestrial Film Antenna is a passive component designed to receive broadcast signals. Its operation is integrated with your Clarion navigation system.

Using the Antenna:

- Once installed and connected, the antenna automatically receives digital terrestrial broadcast signals when your Clarion navigation system's TV function is active.
- Refer to your Clarion navigation system's user manual for instructions on how to access the TV function, scan for channels, and manage TV settings.
- Ensure the vehicle is in an area with good digital terrestrial broadcast coverage for optimal reception quality.

MAINTENANCE

The film antenna requires minimal maintenance to ensure continued performance.

Care Guidelines:

- **Cleaning:** If the film antenna or the window area around it becomes dirty, gently wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the film or affect reception.
- **Inspection:** Periodically inspect the antenna film for any signs of damage, peeling, or wear. Ensure the connecting cables are securely attached and not pinched or damaged.
- **Avoid Obstructions:** Do not place stickers, tint, or other materials directly over the film antenna elements, as this can significantly degrade signal reception.

TROUBLESHOOTING

If you experience issues with digital terrestrial TV reception, consider the following troubleshooting steps:

Problem	Possible Cause	Solution
No TV signal or poor reception.	◦ Antenna cables are loose or disconnected. ◦ Antenna is improperly placed or obstructed. ◦ Vehicle is in an area with weak signal coverage. ◦ Navigation system TV tuner issue.	◦ Check all antenna cable connections to the navigation system. ◦ Verify antenna placement on the window; ensure no obstructions. ◦ Move the vehicle to an area known for better digital TV reception. ◦ Perform a channel auto-scan on your navigation system. ◦ Consult your navigation system's manual for TV tuner troubleshooting.
Antenna film is peeling.	◦ Improper surface cleaning during installation. ◦ Extreme temperature fluctuations.	◦ Re-adhere carefully if possible, or consider replacing the antenna element if adhesion is lost. ◦ Ensure proper installation environment.

SPECIFICATIONS

Feature	Detail
Brand	Clarion
Model Number	NX612 (Manufacturer Reference: KD21-901-NX612)
Antenna Type	Digital Terrestrial Film Antenna (for Television)
Compatibility	Compatible with Clarion navigation systems (specifically NX612 model, verify with your system's manual)
ASIN	B07NTZ7HYL
First Available on Amazon.co.jp	February 17, 2019

WARRANTY AND SUPPORT

For warranty information and technical support regarding your Clarion NX612 Digital Terrestrial Film Antenna Set, please contact Clarion customer service or the authorized dealer from whom you purchased the product. Keep your proof of purchase for warranty claims.

You can typically find contact information on the official Clarion website or within the documentation provided with your Clarion navigation system.

© 2023 Clarion. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07NTZ7HYL>

More documents and user manuals: <https://manuals.plus/>