

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Philips](#) /

› [Philips Viva Collection All-in-One Multicooker HD2237/72 User Manual](#)

## Philips HD2237/72

# Philips Viva Collection All-in-One Multicooker

Model: HD2237/72

## INTRODUCTION

---

Welcome to the user manual for your Philips Viva Collection All-in-One Multicooker. This appliance is designed to simplify your cooking process with its versatile functions, including pressure cooking, slow cooking, sautéing, and more. Equipped with advanced features and safety mechanisms, it ensures delicious results with convenience and peace of mind.

## IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- Always ensure the lid is properly closed and locked before operating, especially for pressure cooking.
- Do not touch hot surfaces. Use handles or knobs.
- Ensure the pressure release valve is clear before use.
- This appliance features 9 safety protection systems for your peace of mind.
- Unplug from outlet when not in use and before cleaning.

## PRODUCT OVERVIEW AND COMPONENTS

---

Familiarize yourself with the parts of your Philips Multicooker.

**PHILIPS**

Official Store



## Auto keep warm function

Auto keeps dishes warm for 12 hours, with reheat function

Image: The Philips Viva Collection Multicooker disassembled, showing the main unit, the removable ProCeramic+ inner pot, a measuring cup, and a serving spatula. This illustrates the key components included with the appliance.

- **Main Unit:** Houses the heating element and control panel.
- **ProCeramic+ Inner Pot:** The non-stick cooking pot, 6-liter capacity, 5 times more durable with an anti-scratch surface.
- **Lid Assembly:** Includes the pressure release valve and sealing ring.
- **Measuring Cup:** For precise ingredient measurement.
- **Spatula:** For stirring and serving.

### SETUP

1. **Unpacking:** Carefully remove all packaging materials and accessories.
2. **Initial Cleaning:** Before first use, wash the inner pot, lid, measuring cup, and spatula with warm soapy water. Rinse thoroughly and dry all parts. Wipe the exterior of the main unit with a damp cloth.

3. **Placement:** Place the multicooker on a stable, level, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The display will illuminate.

## OPERATING INSTRUCTIONS

---

Your Philips Multicooker offers a variety of cooking functions for diverse culinary needs.

### Control Panel Overview



Image: A close-up of the Philips Multicooker's digital control panel, showing buttons for various cooking functions like Slow Cook, Sauté/Sear, Pressure Cook, Stew, Yogurt, Bake, and a central digital timer display.

The intuitive control panel allows you to select desired cooking modes and adjust settings. The digital display shows cooking time and status.

## Cooking Modes

- **Pressure Cook:** Ideal for faster cooking of meats, stews, and legumes. Select "Pressure Cook" and adjust time.
- **Slow Cook (Low Temp/High Temp):** Perfect for tenderizing ingredients over extended periods. Choose between low or high temperature settings.
- **Sauté/Sear (High Temp):** Use this function to brown ingredients before cooking or to reduce sauces.
- **Stew:** Pre-programmed setting for hearty stews.
- **Yogurt:** For making homemade yogurt.
- **Bake:** Allows for baking cakes and other desserts directly in the multicooker.
- **Preset Timer:** Set a delayed start time for your cooking program.
- **Keep Warm:** Automatically activates after cooking is complete, keeping food warm for up to 12 hours.

## Enhanced Performance



**PHILIPS**  
Official Store

**1300 W**

**More power at 1300 W**  
Shortens preheat time by 25%\*

Image: The Philips Multicooker in a kitchen setting, highlighting its 1300W power. Text indicates that this power shortens preheat time by 25%, emphasizing faster cooking.

The 1300W heating element ensures faster cooking, reducing preheat time by up to 25% compared to conventional models, allowing you to prepare meals more efficiently.



**PHILIPS**  
Official Store

**Easy to clean**  
Easy-to-clean detachable inner lid design

Image: A cutaway diagram of the Philips Multicooker illustrating heat circulation within the pot. The accompanying text highlights the automatic keep warm function, which maintains food temperature for up to 12 hours and includes a reheat function.

After cooking, the automatic keep warm function will activate, maintaining your food at an optimal serving temperature for up to 12 hours, ensuring your meal is ready when you are.

## MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your multicooker.

### Cleaning

**PHILIPS**

Official Store



## Auto keep warm function

Auto keeps dishes warm for 12 hours, with reheat function

Image: The Philips Multicooker with its inner pot removed, alongside a measuring cup and spatula. This image emphasizes the ease of cleaning due to the detachable components.

- **Inner Pot:** The ProCeramic+ inner pot is designed for easy cleaning and is 5 times more durable with an anti-scratch surface. Wash with warm soapy water and a soft sponge. Avoid abrasive cleaners or metal scouring pads to protect the non-stick coating.
- **Detachable Inner Lid:** The inner lid is detachable for thorough cleaning. Wash it with warm soapy water. For stubborn food odors, a mixture of baking soda and water can be used for soaking.
- **Sealing Ring:** Remove the sealing ring from the lid and wash it separately. Ensure it is properly reinstalled before next use.
- **Exterior:** Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water.
- **Accessories:** Wash the measuring cup and spatula with warm soapy water.

**PHILIPS**

Official Store



**More durable than others**

5x more durable\*\* with ProCeramic+ coating

Image: The Philips Multicooker positioned on a kitchen counter, surrounded by several prepared dishes, illustrating its versatility. The image emphasizes the product's durability, stating it is "5x more durable\*\* with ProCeramic+ coating."

The ProCeramic+ pot is engineered for exceptional durability, being 5 times more durable than conventional pots, ensuring long-lasting performance and resistance to scratches.

## TROUBLESHOOTING

If you encounter issues with your multicooker, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure power cord is securely plugged in. Check power supply. Try a different outlet.

Problem	Possible Cause	Solution
Pressure not building up.	Lid not properly sealed; sealing ring damaged; insufficient liquid.	Ensure lid is correctly closed and locked. Check sealing ring for damage or proper placement. Add more liquid if necessary.
Food sticking to inner pot.	Insufficient oil/liquid; high heat for too long; damaged non-stick coating.	Ensure adequate oil/liquid. Adjust cooking time/temperature. Avoid using metal utensils that could scratch the ProCeramic+ coating.
Lid retains food odor.	Odors absorbed by sealing ring or lid components.	Thoroughly clean the detachable inner lid and sealing ring after each use. Soak in a solution of water and baking soda or white vinegar. Ensure proper drying.

## SPECIFICATIONS

<b>Brand</b>	Philips
<b>Model Number</b>	HD2237/72
<b>Colour</b>	Silver
<b>Capacity</b>	6 Litres
<b>Power/Wattage</b>	1300W
<b>Voltage</b>	240V
<b>Material</b>	Metal (ProCeramic+ inner pot)
<b>Item Weight</b>	7.09 kg
<b>Product Dimensions (L x W x H)</b>	35.5D x 35.5W x 37.2H centimetres
<b>Special Features</b>	Scratch Resistant ProCeramic+ Pot, 9 Safety Protection Systems, Automatic Keep Warm (12 hours)

## WARRANTY AND SUPPORT

Philips stands by the quality of its products. For warranty information, product registration, or technical support, please refer to the official Philips website or contact their customer service.

You can find more information and support at the [Philips Official Store on Amazon](#).