

## Crosley T150A

# Crosley T150A Modern 2-Speed Bluetooth Turntable System User Manual

Model: T150A-WH

## INTRODUCTION

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your Crosley T150A Modern 2-Speed Bluetooth Turntable System. Please read this manual thoroughly before using your new turntable to ensure proper function and longevity of the product.

The Crosley T150A is designed to deliver a complete audio experience, allowing you to enjoy your vinyl collection and stream digital music via Bluetooth. It features a variable weighted tone arm, two-speed playback, and includes stereo speakers for immediate use.

## PACKAGE CONTENTS

Before proceeding with setup, ensure all components are present:

- Crosley T150 Unit
- Turntable Platter
- Drive Belt
- Stereo Speakers (2)
- Speaker Wires (2)
- 45 RPM Adapter
- Power Adapter
- User Manual (this document)

## SETUP INSTRUCTIONS

### 1. Unpacking and Placement

Carefully remove all components from the packaging. Place the turntable unit on a stable, level surface away from direct sunlight, heat sources, and excessive vibration.

## 2. Platter and Belt Installation

- Place the metal platter onto the turntable spindle.
- Locate the drive belt. Carefully stretch the belt around the inner rim of the platter and then around the motor pulley. Ensure the belt is not twisted.

## 3. Speaker Connection

Connect the included stereo speakers to the turntable unit using the provided speaker wires. Match the positive (+) and negative (-) terminals on both the turntable and the speakers. The included speakers provide 30 watts of sound.



Image: Rear view of the Crosley T150A-WH turntable and speakers, illustrating the audio output and power connections.

## 4. Tonearm Setup

The moving magnet cartridge is pre-mounted and aligned at the factory. The aluminum tonearm features an adjustable counterweight. For initial setup, ensure the counterweight is set according to the manufacturer's recommendations (refer to the quick start guide if provided, or adjust for proper tracking force to prevent skipping and record wear).



Image: Detailed view of the tonearm, cartridge, and platter on the Crosley T150A-WH turntable.

## 5. Power Connection

Connect the power adapter to the DC 12V input on the rear of the turntable unit, then plug it into a wall outlet.

# OPERATING INSTRUCTIONS

## 1. Power On/Off

Locate the power switch on the rear of the unit. Flip it to the 'On' position to power on the turntable. Flip to 'Off' when not in use.

## 2. Playing Records

- Place a record on the platter.
- Select the appropriate speed (33 1/3 or 45 RPM) using the speed selector knob. Use the 45 RPM adapter for singles.
- Gently lift the tonearm using the cueing lever and position the stylus over the desired track on the record.
- Lower the tonearm slowly using the cueing lever. The record will begin to play.
- At the end of the record, manually lift the tonearm and return it to its rest.



Image: Front view of the Crosley T150A-WH turntable system, showing the main unit with a record playing and the two stereo speakers.

## 3. Pitch Control

Use the pitch control knob to fine-tune the playback speed of your records. Adjust it slightly to achieve the desired audio pitch.

## 4. Bluetooth Streaming

The turntable features a built-in Bluetooth receiver, allowing you to stream digital music from a compatible device (e.g., smartphone, tablet) to the included speakers. Activate Bluetooth on your device and select 'Crosley T150A' from the list of available devices to pair.

## 5. External Audio System Connection

The built-in, switchable preamp and RCA outputs allow you to connect the turntable to an existing audio system or powered speakers. Connect RCA cables from the 'AUDIO OUT' ports on the turntable to the corresponding input on your external amplifier or receiver.

## MAINTENANCE

### 1. Stylus and Cartridge Care

Regularly inspect the stylus for dust or debris. Use a soft brush to gently clean the stylus from back to front. The cartridge uses a standard 1/2" mount, allowing for replacement or upgrade as needed. Refer to the cartridge manufacturer's instructions for specific replacement procedures.

## 2. Turntable Cleaning

Wipe the turntable unit and speakers with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners. Keep the platter and belt free from dust and oils.

## 3. Belt Maintenance

Periodically check the drive belt for wear or stretching. If the belt appears loose or the platter speed becomes inconsistent, the belt may need to be replaced.

# TROUBLESHOOTING

---

If you encounter issues with your Crosley T150A turntable, consult the following common troubleshooting steps:

- **No Power:** Ensure the power adapter is securely connected to both the turntable and a working wall outlet. Check the power switch on the rear of the unit.
- **No Sound:** Verify that the speakers are correctly connected to the turntable. If using external speakers, ensure they are powered on and the correct input is selected on your amplifier. Check volume levels on both the turntable and any connected devices.
- **Skipping Records:** Ensure the turntable is placed on a stable, level surface. Adjust the tonearm counterweight to achieve the recommended tracking force. Clean the stylus for any debris. Ensure records are clean and free of dust.
- **Inconsistent Playback Speed:** Check that the drive belt is properly seated around the platter and motor pulley. The belt may need to be replaced if it is worn or stretched.
- **Bluetooth Pairing Issues:** Ensure the turntable's Bluetooth receiver is active and your streaming device is within range. Forget the device from your streaming device's Bluetooth settings and attempt to re-pair.

For further assistance, please contact Crosley customer support.

# SPECIFICATIONS

---

Feature	Specification
Model Number	T150A-WH
Product Dimensions	13.25 x 26.5 x 8.25 inches
Item Weight	8.5 pounds
Speeds	2-Speed (33 1/3, 45 RPM)
Motor Type	AC Motor
Connectivity	Bluetooth Receiver, RCA Audio Outputs
Included Speakers Power	30 watts

Feature	Specification
Power Consumption	30 watts
Material	Plastic
Included Components	T150 Unit, Platter, Belt, Speakers, Speaker Wires, 45 RPM Adapter, Power Adapter, User Manual

## WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Crosley website. Crosley provides customer support for product inquiries and technical assistance.


You can find more information and support resources on the [Crosley Brand Store](#).

 
## IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury to persons, including the following:


- Do not use this product near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

## Related Documents - T150A

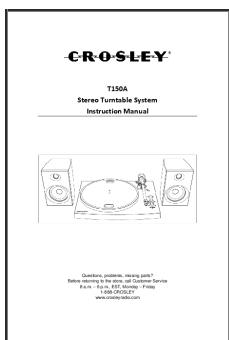	<p><a href="#">Crosley T150A Stereo Turntable System Instruction Manual</a></p> <p>Comprehensive instruction manual for the Crosley T150A Stereo Turntable System, covering safety, setup, operation, maintenance, troubleshooting, and FCC statements.</p>
--	---

 <p><b>CROSLEY</b> C62A Turntable Instruction Manual</p>	<p><a href="#">Crosley C62A Turntable: Official Instruction Manual &amp; User Guide</a></p> <p>Download the official Crosley C62A turntable instruction manual. This guide provides detailed steps for setup, operation, needle replacement, maintenance, troubleshooting, and technical specifications for your Crosley C62A record player.</p>
 <p><b>CROSLEY</b> T150B Stereo Turntable System Instruction Manual</p> <p>Questions, problems, hearing aids? Before returning to the store, call Customer Service 8 a.m. - 5 p.m. EST, Monday - Friday 1-800-CROSLEY <a href="http://www.crosleyradio.com">www.crosleyradio.com</a></p>	<p><a href="#">Crosley T150B Stereo Turntable System: Instruction Manual</a></p> <p>Comprehensive guide for the Crosley T150B Stereo Turntable System, covering setup, operation, and maintenance for optimal vinyl playback.</p>
 <p><b>CROSLEY</b> CR6253B Anthology Turntable Instruction Manual</p> <p>Questions, problems, hearing aids? Before returning to the store, call Customer Service 8 a.m. - 5 p.m. EST, Monday - Friday 1-800-CROSLEY <a href="http://www.crosleyradio.com">www.crosleyradio.com</a></p>	<p><a href="#">Crosley CR6253B Anthology Turntable: User Manual, Setup, and Operation Guide</a></p> <p>Get started with your Crosley CR6253B Anthology Turntable. This comprehensive guide covers setup, operation, Bluetooth connectivity, maintenance, troubleshooting, and safety instructions for your record player.</p>
 <p><b>CROSLEY</b> C72A-W/A Turntable Instruction Manual</p> <p>Questions, problems, hearing aids? Before returning to the store, call Customer Service 8 a.m. - 5 p.m. EST, Monday - Friday 1-800-CROSLEY <a href="http://www.crosleyradio.com">www.crosleyradio.com</a></p>	<p><a href="#">Crosley C72A Turntable Instruction Manual</a></p> <p>This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting the Crosley C72A Turntable. It includes detailed specifications, safety warnings, and component descriptions.</p>
 <p><b>CROSLEY</b> CR8005D Cruiser Deluxe Turntable Instruction Manual</p> <p>Questions, problems, hearing aids? Before returning to the store, call Customer Service 8 a.m. - 5 p.m. EST, Monday - Friday 1-800-CROSLEY <a href="http://www.crosleyradio.com">www.crosleyradio.com</a></p>	<p><a href="#">Crosley CR8005D Cruiser Deluxe Turntable Instruction Manual</a></p> <p>User manual for the Crosley CR8005D Cruiser Deluxe Turntable, providing comprehensive instructions on setup, operation, maintenance, troubleshooting, and safety guidelines.</p>

Documents - Crosley – T150A

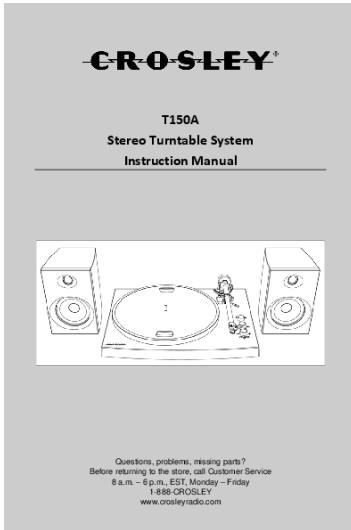

### [Crosley T150A Stereo Turntable System Instruction Manual](#)

Comprehensive instruction manual for the Crosley T150A Stereo Turntable System, covering safety, setup, operation, maintenance, troubleshooting, and FCC statements.

lang:en score:55 filesize: 324.32 K page\_count: 9 document date: 2019-01-18




[\[pdf\]](#)

Русский Kelvin Yang T150A Стерео система инструкция по эксплуатации instrukciya proigryvatel vinilovyh plastinok crosley t150 cdn technopark ru photos 272391 instruction |||

**T150A** , 8-800-700-58-29 8-495-787-5900 10:00-18:00 , www.crosleyofficial.ru . . 1 . . 2 . . 3 . . . . 4 . . 230, 50 . 5 . . . . 6 . . . . 7 . . . . 8 . - -...

lang:it score:41 filesize: 777.42 K page\_count: 11 document date: 2020-04-28

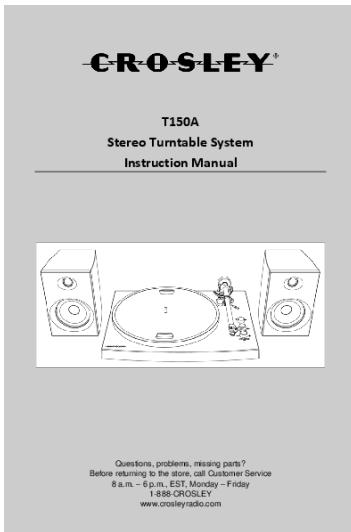


[\[pdf\]](#) User Manual Instructions Label

Kelvin Yang User manual Modern Marketing Concepts Inc T150A Stereo Turntable System AUST150A t150a

**T150A** Stereo Turntable System Instruction Manual Questions, problems, missing parts Before returning to the store, call Customer Service 8 a.m. 6 p.m., EST, Monday Friday 1-888-CROSLEY www.crosleyradio.com English Safety Instructions Read and understand this entire manual before using this prod...

lang:en score:33 filesize: 948.4 K page\_count: 26 document date: 2017-08-24

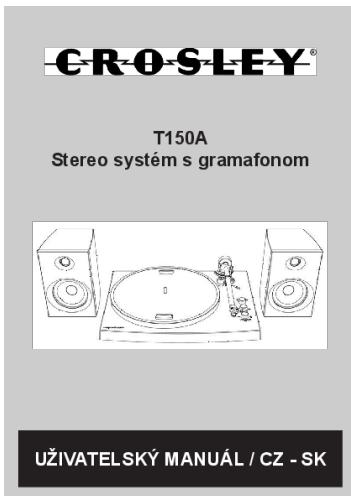


[\[pdf\]](#)

Náhled \* soubor s návodom k obsluze NÁVOD K OBSLUZE Gramofon Crosley T150 bily Databáze návodů v češtině gramofon crosley t150 bily 85669 locked navod cz preview 86 |||

**T150A** Stereo systém s gramafonom UZIVATELSK MANUL / CZ - SK CZ BEZPECNOSTN INSTRUKCE Ped pouzitm tohoto vrobku si pectte tento nvod a ujistte se, ze jste mu porozumli. Tyto pokyny si uschovete pro pozdjs pouzit. 1. Tento vrobek nepouzvejte v blzkosti vody. 2. K provozu tohoto vrobku je nutn pouzv...

lang:hr score:20 filesize: 306.27 K page\_count: 4 document date: 2022-03-21

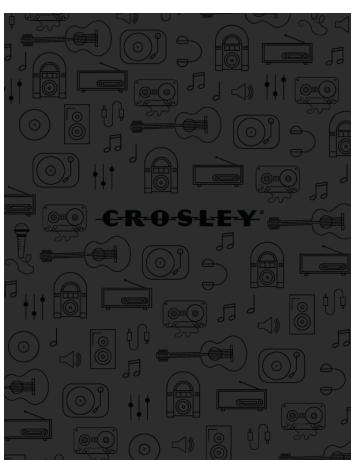

[\[pdf\]](#) Accessories Catalog


CROSLEY PRODUCT CATALOG Cloudinary 3 speed turntable built in bluetooth® receiver usb enabled software suite for ripping and editing audio content headphone jack moving magnet cartridge aux rca out stereo speakers brown executive deluxe cr6019d crosley catalog 2019 res cloudinary crosbit image upload v1580835436

tacbolneteofnts CROSLEY PRODUCT CATALOG 02 PORTABLE TURNTABLES 08 ENTERTAINMENT CENTERS 12 SHELF SY ... DGE PITCH CONTROL AUX IN RCA OUT 2 EXTERNAL MATCHING SPEAKERS NATURAL DISTRIBUTOR EXCLUSIVE **T150A** 2-SPEED TURNTABLE BUILT-IN BLUETOOTH RECEIVER PITCH CONTROL STEREO SPEAKERS WITH BUILT-IN ...

lang:i-klingon score:19 filesize: 3.81 M page\_count: 27 document date: 2019-10-29

**CROSLEY®**

T150A  
Stereo systém s gramafonom

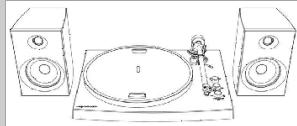

[\[pdf\]](#) Declaration of Conformity

Stáhnout 238 88 kB Gramofon Crosley T150 ÄernÄ½ DATART doc 4221333 datart cz document 3 |||

**T150A** Stereo systém s gramafonom UZIVATELSK MANUL / CZ - SK CZ

BEZPECNOSTN INSTRUKCE Ped pouzitm tohoto vrobku si pectte tento nvod a ujistte se, ze jste mu porozumli. Tyto pokyny si uschovajte pro pozdjs pouzit.

1. Tento vrobek nepouzvejte v blzkosti vody. 2. K provozu tohoto vrobku je nutn pouzv...

lang:hr score:19 filesize: 238.88 K page\_count: 8 document date: 2019-04-29

**UŽIVATELSKÝ MANUÁL / CZ - SK**