

[Manuals.plus](#) /

› [Reebok](#) /

› Reebok RD-ELE-G9-PBIR-BR Digital Watch User Manual

Reebok RD-ELE-G9-PBIR-BR

Reebok RD-ELE-G9-PBIR-BR Digital Watch User Manual

Model: RD-ELE-G9-PBIR-BR

INTRODUCTION

Thank you for choosing the Reebok RD-ELE-G9-PBIR-BR Digital Watch. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new watch. Please read it carefully to ensure optimal performance and longevity of your device.



Image: The Reebok RD-ELE-G9-PBIR-BR digital watch worn on a wrist, showing the time display.

SETUP

1. Initial Inspection

Upon unboxing, ensure all components are present. Your watch comes with a pre-installed CR2 battery.

2. Button Functions Overview

- **MODE Button:** Cycles through different modes (Time, Chronograph, Alarm, Timer, Countdown).
- **SET / LIGHT Button:** Used to enter setting mode and activate the EL backlight.
- **START / PAUSE Button:** Starts and pauses functions like Chronograph, Timer, and Countdown.
- **ADJ Button:** Adjusts values during setting mode and performs split/lap functions in Chronograph mode.



Image: An angled view of the watch, highlighting the digital display and the four control buttons.

3. Setting Time and Date

1. From the Time Display mode, press and hold the **SET / LIGHT** button until the seconds begin to flash.
2. Press the **MODE** button to cycle through the setting options: Seconds > Hours > Minutes > Year > Month > Day > 12/24 Hour Format.
3. Use the **ADJ** button to increase the flashing value. Hold **ADJ** to rapidly advance.
4. Once all settings are correct, press the **SET / LIGHT** button to exit the setting mode.

OPERATING INSTRUCTIONS

1. Mode Navigation

Press the **MODE** button repeatedly to cycle through the following functions:

- Time Display
- Chronograph (Stopwatch)
- Alarm
- Timer
- Countdown





Image: Side view of the watch, illustrating the placement of the red control buttons.

2. Chronograph (Stopwatch)

1. Navigate to Chronograph mode using the **MODE** button. The display will show "00:00:00".
2. Press **START / PAUSE** to begin timing.
3. Press **START / PAUSE** again to pause the timing. Press again to resume.
4. While timing is paused, press **ADJ** to reset the chronograph to zero.
5. **Split/Lap Function:** While the chronograph is running, press **ADJ** to record a split time. The display will show the split time while the chronograph continues to run in the background. Press **ADJ** again to return to the running chronograph display.

3. Alarm

1. Navigate to Alarm mode using the **MODE** button.
2. Press and hold the **SET / LIGHT** button until the alarm hours begin to flash.
3. Use the **ADJ** button to set the desired alarm hour.
4. Press the **MODE** button to move to minutes, then use **ADJ** to set the desired alarm minutes.
5. Press **SET / LIGHT** to confirm and exit setting mode.
6. To activate/deactivate the alarm, press **ADJ** in Alarm mode. An alarm icon will appear/disappear on the display.

4. Timer

The Timer function allows you to set a specific duration for an event.

1. Navigate to Timer mode using the **MODE** button.
2. Press and hold the **SET / LIGHT** button to enter setting mode. The hours will flash.
3. Use the **ADJ** button to set the desired hours. Press **MODE** to move to minutes, then seconds, setting each with **ADJ**.
4. Press **SET / LIGHT** to confirm the timer duration.
5. Press **START / PAUSE** to begin the timer countdown. Press again to pause/resume.
6. When paused, press **ADJ** to reset the timer to its set duration.

5. Countdown

The Countdown function operates similarly to the Timer, counting down from a set time to zero.

1. Navigate to Countdown mode using the **MODE** button.

2. Follow the same steps as the Timer function to set the duration and start/pause/reset the countdown.

6. EL Light (Backlight)

Press the **SET / LIGHT** button briefly in any mode to illuminate the display for a few seconds, improving visibility in low-light conditions.

MAINTENANCE

1. Water Resistance

Your Reebok RD-ELE-G9-PBIR-BR watch is water-resistant up to 10 ATM (100 meters). This means it is suitable for swimming, showering, and snorkeling. However, it is **not** suitable for scuba diving or high-impact water sports. Avoid operating buttons underwater to prevent water ingress.

2. Cleaning

Clean your watch regularly with a soft, damp cloth. For the silicone strap, mild soap and water can be used. Avoid harsh chemicals or abrasive materials that could damage the watch's finish or strap.

3. Battery Replacement

The watch uses one CR2 battery. When the display becomes dim or unresponsive, it may be time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and maintain water resistance.



Image: The back of the watch, showing the stainless steel case back with engravings.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery (CR2).
Buttons are unresponsive.	Temporary software glitch or low battery.	Try a soft reset (if applicable, by holding all buttons for a few seconds) or replace battery.
Time is incorrect.	Time not set correctly or watch was reset.	Re-set the time and date as per the Setup section.
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, seal damage).	Immediately take the watch to a professional watch repair service. Do not attempt to dry it yourself.

SPECIFICATIONS

Model Number: RD-ELE-G9-PBIR-BR

Display Type: Digital

Case Material: ABS

Strap Material: Silicone

Strap Color: Red

Movement: Quartz 13801

Case Diameter: 43.5 mm

Water Resistance: 10 ATM (100 Meters)

Functions: Time, Chronograph, Split/Lap, Alarm, Timer, Countdown, EL Light

Battery: 1 x CR2 (included)

Item Weight: 65 Grams

Product Dimensions (L x W x H): 4.35 x 2.2 x 1.35 cm

Connectivity Technology: Bluetooth (for potential smartphone compatibility/activity tracking)

Compatible Devices: Smartphone (iOS and Android devices)

Wearable Type: Activity Tracker

WARRANTY

This Reebok RD-ELE-G9-PBIR-BR Digital Watch comes with a **2-year warranty** from the date of purchase. The warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, product information, or warranty service, please visit the official Reebok store or contact Reebok customer support.

Official Reebok Store: [Reebok Store on Amazon](#)