

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [DASH](#) /
- › [DASH Fresh Pop Popcorn Maker \(Model DAPP150V2RD04\) Instruction Manual](#)

DASH DAPP150V2RD04

DASH Fresh Pop Popcorn Maker

MODEL: DAPP150V2RD04

Introduction

The DASH Fresh Pop Popcorn Maker is an electric appliance designed to produce fresh, oil-free popcorn using hot air technology. This unit is suitable for preparing up to 16 cups of popcorn, making it ideal for various occasions. It features a compact design, non-slip feet for stability, and an integrated measuring cup that also functions as a butter melting tray.



Image: The red DASH Fresh Pop Popcorn Maker, ready to make delicious popcorn.

Safety Instructions

Please read all instructions before operating this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.

Components

Your DASH Fresh Pop Popcorn Maker comes with the following components:

- **Main Unit:** The base of the popcorn maker containing the heating element and motor.
- **Clear Top Cover:** Sits on top of the main unit, directing popped corn into a bowl.
- **Measuring Cup / Butter Melting Tray:** Used to measure popcorn kernels and can be placed on the top cover to melt butter during operation.



Image: The main components of the popcorn maker, including the base, clear cover, and measuring cup.

Setup

1. Unpack all components and remove any packaging materials.
2. Wipe down the main unit with a damp cloth. Wash the clear top cover and measuring cup with warm, soapy water, then rinse and dry thoroughly.
3. Place the main unit on a stable, heat-resistant, and dry countertop. Ensure there is enough space around the unit for proper ventilation.
4. Place a large bowl (not included) directly in front of the popcorn maker's chute to collect the popped corn.

Operating Instructions

Follow these steps to make delicious, oil-free popcorn:

1. Using the included measuring cup, fill it with popcorn kernels. Do not overfill or underfill.
2. Remove the clear top cover and pour the measured kernels directly into the popping chamber of the main unit.

3. Replace the clear top cover securely onto the main unit.
4. If desired, place a small amount of butter (up to 1 tablespoon) into the measuring cup and place the cup on top of the clear cover. The heat from the popping process will melt the butter.
5. Plug the popcorn maker into a standard electrical outlet.
6. Press the ON/OFF switch to the 'ON' position. The popping process will begin immediately.
7. Popcorn will begin to emerge from the chute in approximately 2-3 minutes. Allow all kernels to pop.
8. Once popping stops, immediately press the ON/OFF switch to the 'OFF' position and unplug the unit.
9. Carefully remove the measuring cup with melted butter (if used) and pour it over the freshly popped corn. Add any desired seasonings.

Your browser does not support the video tag.

Video: A demonstration of the Dash Popcorn Machine in operation, showing the popping process and butter melting.

Your browser does not support the video tag.

Video: A review highlighting the ease of use and efficiency of the DASH Hot Air Popcorn Popper Maker.

NEVER BEEN EASIER

✧✧ To *party* like a pop star!

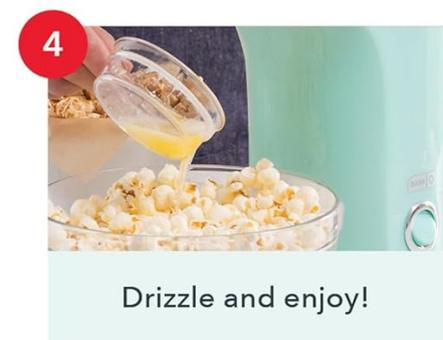
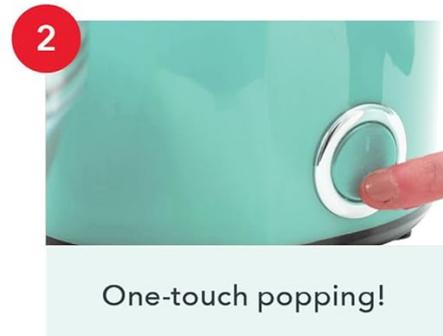


Image: Step-by-step guide on how to use the popcorn maker, from adding kernels to drizzling butter.

Cleaning and Maintenance

Proper cleaning and maintenance will ensure the longevity of your popcorn maker.

- Always unplug the appliance and allow it to cool completely before cleaning.
- The clear top cover and measuring cup are top-rack dishwasher safe or can be hand-washed with warm, soapy water.
- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surfaces.
- Ensure all parts are completely dry before storing or next use.

Troubleshooting

If you encounter any issues with your popcorn maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Popcorn not popping	Unit not plugged in; ON/OFF switch not activated; kernels are old or dry.	Ensure unit is plugged in and switched ON. Use fresh, high-quality popcorn kernels.
Many unpopped kernels	Too many kernels added; kernels are old or dry.	Do not exceed the recommended amount of kernels (one measuring cup). Use fresh kernels.
Popcorn tastes burnt	Unit left on too long after popping; old kernels.	Turn off the unit immediately after popping stops. Use fresh kernels.
Popcorn flying out of the machine	No collection bowl in place; unit not properly assembled.	Ensure a large bowl is positioned correctly under the chute. Verify the clear top cover is securely in place.

Specifications

Feature	Detail
Brand	DASH
Model Number	DAPP150V2RD04
Color	Red
Capacity	16 Cups (popped)
Special Feature	Oil-Free, Hot Air Popping, Manual Operation
Material	Metal, Plastic
Product Dimensions	8.4"L x 4.8"W x 13.5"H
Item Weight	0.8 Pounds (12.8 ounces)
Included Components	Popcorn Maker, Measuring Cup, Manual
Is Electric	Yes
UPC	850004115008

Feature	Detail
Manufacturer	StoreBound LLC

Warranty and Support

For warranty information or product support, please refer to the contact details provided in the original product packaging or visit the official DASH website. Keep your purchase receipt for warranty claims.

