

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DASH](#) /

› [Dash Fresh Pop Popcorn Maker DAPP150V2AQ04 Instruction Manual](#)

DASH DAPP150V2AQ04

Dash Fresh Pop Popcorn Maker DAPP150V2AQ04 Instruction Manual

Model: DAPP150V2AQ04 | Brand: DASH

INTRODUCTION

Thank you for choosing the Dash Fresh Pop Popcorn Maker. This instruction manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The Dash Fresh Pop Popcorn Maker in aqua, actively popping corn into a large clear bowl.

SETUP

- 1. Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present: the main unit (base), the transparent popping chute, and the measuring cup/butter melting tray.
- 2. Initial Cleaning:** Before first use, wipe the exterior of the main unit with a damp cloth. Wash the transparent popping chute and the measuring cup/butter melting tray in warm, soapy water. Rinse thoroughly and dry completely. Do not immerse the main unit in water.
- 3. Placement:** Place the popcorn maker on a stable, flat, heat-resistant surface. Ensure there is adequate clearance around the unit for proper ventilation.

OPERATING INSTRUCTIONS

- Measure Kernels:** Use the provided measuring cup to measure popcorn kernels. Do not overfill. The maximum capacity is 16 cups of popped popcorn, which corresponds to the measuring cup's capacity for unpopped kernels.
- Add Kernels:** Pour the measured kernels into the main popping chamber of the unit.
- Position Chute:** Place the transparent popping chute securely onto the main unit. Ensure it is properly aligned to direct popped corn into a serving bowl.
- Optional Butter Melting:** If desired, place butter in the measuring cup and position it on top of the popping chute. The heat from the popping process will melt the butter.
- Start Popping:** Plug the unit into a standard electrical outlet. Press the one-touch power button located on the front of the unit to begin popping.
- Collect Popcorn:** Place a large, heat-resistant bowl under the popping chute to collect the popped corn.
- Finish Popping:** The unit will automatically stop popping once all kernels are popped. Turn off the unit by pressing the power button and unplug it from the outlet.
- Serve:** Carefully remove the measuring cup (if used for butter) and pour the melted butter over the popcorn. Add any desired seasonings.

NEVER BEEN EASIER

★ To *party* like a pop star!

1



Measuring cup for adding kernels.

2



One-touch popping!

3



Measuring cup melts butter during cooking.

4



Drizzle and enjoy!

Image: A visual guide illustrating the four simple steps to operate the popcorn maker: adding kernels, activating with the one-touch button, melting butter, and serving.

Your browser does not support the video tag.

Video: A short demonstration of the Dash Fresh Pop Popcorn Maker in operation, showing kernels popping and flowing into a bowl.

MAINTENANCE

Cleaning

- Always unplug the popcorn maker and allow it to cool completely before cleaning.
- The transparent popping chute and measuring cup/butter melting tray are dishwasher safe (top rack only) or can be hand-washed with warm, soapy water.
- Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
- Ensure all parts are thoroughly dry before storing or next use.

Storage

The compact design of the Dash Fresh Pop Popcorn Maker allows for easy storage. Ensure the unit is clean and dry before storing. The power cord can be wrapped around the base for neat storage.



Image: The compact Dash Fresh Pop Popcorn Maker positioned on a kitchen countertop, demonstrating its

space-saving design.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Many unpopped kernels	Old or dry kernels; too many kernels added.	Use fresh popcorn kernels. Do not exceed the recommended amount (one measuring cup).
Popcorn flying out of chute	Small serving bowl; unit not positioned correctly.	Use a larger, deep serving bowl. Ensure the unit is on a stable surface and the bowl is directly under the chute.
Popcorn tastes burnt	Overloading the unit.	Do not add more than one measuring cup of kernels at a time.
Unit not turning on	Not plugged in; power button not pressed.	Ensure the unit is securely plugged into a working outlet. Press the power button firmly.
Unit stops working during consecutive batches	Overheating protection activated.	Allow the unit to cool for at least 10-15 minutes between consecutive batches.

SPECIFICATIONS

Brand: DASH

Model: DAPP150V2AQ04

Capacity: 16 Cups (popped popcorn)

Special Feature: Manual (operation)

Material: Plastic

Product Dimensions: 8.4" L x 4.8" W x 13.5" H

Item Weight: 1.76 pounds

Power: 1400W

Technology: Hot Air Popping (Oil-Free)



Quick and easy assembly so you never have to hit pause on Movie Night!

SERVE 16 CUPS OF FRESH POPCORN!

Making *movie magic* sized for date night or a full-on film festival!



Image: The Dash Fresh Pop Popcorn Maker with key dimensions highlighted for reference.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the warranty card included with your purchase or contact DASH customer service directly. Contact details are typically available on the product packaging or the official DASH website.

Related Documents - DAPP150V2AQ04



[Dash Fresh Pop Popcorn Maker Instruction Manual and Recipe Guide](#)

Comprehensive instruction manual and recipe guide for the Dash Fresh Pop Popcorn Maker (Model #DAPP150V2), featuring operating instructions, safety precautions, cleaning tips, and a variety of popcorn recipes.

 FRESH POP POPCORN MAKER Instruction Manual Recipe Guide	<p><u>Dash Fresh Pop Popcorn Maker: Instruction Manual & Recipe Guide</u></p> <p>Learn how to use and maintain your Dash Fresh Pop Popcorn Maker (Model DAPP150V2) with this comprehensive instruction manual and recipe guide, featuring safety tips and delicious popcorn recipes.</p>
 SMARTSTORE™ STIRRING POPCORN MAKER Instruction Manual Recipe Guide	<p><u>Dash DSSP300 SmartStore Stirring Popcorn Maker Instruction Manual and Recipe Guide</u></p> <p>Comprehensive guide for the Dash DSSP300 SmartStore Stirring Popcorn Maker, including important safety precautions, parts identification, operating instructions, cleaning and maintenance tips, and a variety of popcorn recipes.</p>
 MINI MAKER SYSTEM REMOVABLE PLATE REMOVABLE PLATE QUICKSTART GUIDE BEFORE FIRST USE  INSTALLING THE REMOVABLE PLATES 	<p><u>Dash Mini Maker System Removable Plate Quickstart Guide</u></p> <p>A quickstart guide for the Dash Mini Maker System with removable plates, covering safety precautions, installation of plates, and cooking instructions.</p>
 MINI WAFFLE MAKER Instruction Manual Recipe Guide	<p><u>Dash Mini Waffle Maker DMW001: Instruction Manual and Recipe Guide</u></p> <p>Comprehensive instruction manual and recipe guide for the Dash Mini Waffle Maker (Model DMW001). Learn how to safely operate, clean, troubleshoot, and make delicious waffles and chaffles with step-by-step instructions and recipes.</p>
 DREIDEL MINI WAFFLE MAKER Instruction Manual Recipe Guide	<p><u>Dash Dreidel Mini Waffle Maker Instruction Manual and Recipe Guide</u></p> <p>Comprehensive guide for the Dash Dreidel Mini Waffle Maker (#DMWD001), covering safety instructions, operation, maintenance, troubleshooting, and a variety of recipes. Learn how to make classic waffles, pizza chaffles, latkes, and more with this versatile mini appliance.</p>