

ECONTROLLY GA841WJSA

ECONTROLLY GA841WJSA Remote Control User Manual

For Sharp Aquos TV Models

1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY GA841WJSA remote control. This remote is designed as a replacement or secondary control unit for various Sharp Aquos TV models. It offers direct functionality without the need for complex programming.

Compatible Sharp TV Models include:

- LC-40LE820, LC-40LE821, LC-40LE822, LC-40LE810E, LC40LE812E, LC-40LE812ERU, LC40LE820E, LC-40LE822E, LC-40LE822ERU, LC40LU820E, LC-40LU822E, LC40LX810E, LC-40LX812E, LC-40LX812ERU
- LC-46LE820, LC-46LE821, LC-46LE822, LC-46LE810E, LC46LE812E, LC-46LE812ERU, LC46LE820E, LC-46LE822E, LC-46LE822ERU, LC46LU820E, LC-46LU822E, LC46LX810E, LC-46LX812E, LC-46LX812ERU
- LC-52LE820, LC-52LE822E, LC-52LE822ERU
- LC-60LE822, LC-60LE822E

2. PRODUCT OVERVIEW

The ECONTROLLY GA841WJSA remote control features a standard layout for intuitive operation of your Sharp Aquos TV. Familiarize yourself with the button functions below.





Image: Front view of the ECONTROLLY GA841WJSA remote control, displaying all buttons and their labels.

Button Functions:

TV (Power): Turns the TV on or off.

P.INFO: Displays program information.

ATV / DTV / SAT / RADIO: Selects different input sources or modes (Analog TV, Digital TV, Satellite, Radio).

SOURCE: Cycles through available input sources.

AQUOS LINK: Activates Sharp's AQUOS Link function for connected devices.

OPTION: Accesses additional options or settings.

REC / REC STOP: Controls recording functions (if supported by TV/connected device).

TIME SHIFT: Activates or controls time shift functions.

Number Buttons (0-9): Directly selects channels or enters numerical values.

I/II/I+II: Selects audio modes or languages.

AV MODE: Cycles through various audio/video modes.

ECO: Activates or deactivates power-saving (Eco) mode.

▼ / ▲ (Channel Up/Down): Changes TV channels.

◀ / ▶ (Volume Up/Down): Adjusts TV volume.

Mute: Mutes or unmutes the TV audio.

MENU: Opens the TV's main menu.

CONTROL: Accesses control panel functions.

EPG: Displays the Electronic Program Guide.

Navigation Pad (Up, Down, Left, Right, OK): Navigates through menus and confirms selections.

END: Exits menus or returns to the previous screen.

Colored Buttons (Red, Green, Yellow, Blue): Used for specific functions within menus or interactive services, as indicated on the TV screen.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Important: This remote control does not require any programming or setup. Once new alkaline batteries are installed correctly, it is ready for immediate use with compatible Sharp TVs.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.

4.1 Basic TV Control

- **Power On/Off:** Press the **TV** button.
- **Volume Adjustment:** Press the **◀** (Volume Up) or **▶** (Volume Down) buttons.
- **Mute/Unmute:** Press the **Mute** button.
- **Channel Change:** Press the **▼** (Channel Up) or **▲** (Channel Down) buttons.
- **Direct Channel Entry:** Use the **Number Buttons (0-9)** to enter a channel number directly.

4.2 Input Source Selection

- Press the **SOURCE** button to cycle through available input sources (e.g., HDMI 1, HDMI 2, AV, Component).
- Alternatively, use the dedicated **ATV**, **DTV**, **SAT**, or **RADIO** buttons to switch to those specific modes directly.

4.3 Menu Navigation

- Press the **MENU** button to open the TV's main menu.
- Use the **Up**, **Down**, **Left**, **Right** arrow buttons on the navigation pad to move through menu options.
- Press the **OK** button to confirm a selection.
- Press the **END** button to exit the current menu or return to the previous screen.

4.4 Special Functions

- **P.INFO**: Displays information about the current program or input.
- **AQUOS LINK**: Activates or controls devices connected via AQUOS Link (HDMI-CEC).
- **REC / REC STOP / TIME SHIFT**: These buttons control recording and time-shifting features if your TV or connected recording device supports them.
- **AV MODE**: Cycles through preset audio/video modes (e.g., Standard, Movie, Game).
- **ECO**: Toggles energy-saving modes for reduced power consumption.
- **EPG**: Opens the Electronic Program Guide to view TV listings.
- **Colored Buttons (Red, Green, Yellow, Blue)**: These buttons perform specific functions that are usually indicated on-screen within certain menus or interactive applications.

5. TROUBLESHOOTING

Remote Control Not Responding:

- **Check Batteries**: Ensure new alkaline batteries are installed correctly with the proper polarity (+/-). Weak or dead batteries are the most common cause of remote control issues.
- **Line of Sight**: Make sure there are no obstructions between the remote control and the TV's infrared sensor. The remote requires a clear line of sight to operate.
- **Distance**: Ensure you are within the effective operating range of the remote control (typically up to 20 feet).
- **TV Sensor**: Verify that the TV's infrared sensor is not blocked or dirty.
- **Interference**: Strong light sources (like direct sunlight or fluorescent lights) can sometimes interfere with infrared signals. Try operating the remote in different lighting conditions.

If the issue persists after checking these points, the remote control may be faulty, or there might be an issue with the TV's infrared receiver.

6. SPECIFICATIONS

Feature	Description
Brand	ECONTROLLY
Model	GA841WJSA

Compatible Devices	Sharp Aquos Televisions (various models)
Connectivity Technology	Infrared (IR)
Special Feature	Ergonomic design
Max Number of Supported Devices	1 (Dedicated to one TV at a time)

7. WARRANTY AND SUPPORT

This product is typically covered by a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact the seller directly.

If you encounter any issues not covered in this manual or require further assistance, please reach out to the ECONTROLLY customer support or the retailer from whom you purchased the remote control.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07NWCVVW7>

More documents and user manuals: <https://manuals.plus/>