

KEMEI KM-189A

Kemei KM-189A Epilator User Manual

Model: KM-189A

1. INTRODUCTION

This user manual provides detailed instructions for the safe and effective operation, maintenance, and troubleshooting of your Kemei KM-189A Epilator. Please read this manual thoroughly before first use and retain it for future reference.

The Kemei KM-189A is a mini rechargeable hair removal device designed for efficient hair removal from various body areas, including legs, face, underarms, and bikini area. It features a smart LED light and dual speed settings for a customized epilation experience.

2. SAFETY INFORMATION

To reduce the risk of electric shock, burns, fire, or injury, always follow these basic safety precautions:

- Do not use the device if it is damaged or malfunctioning.
- Keep the device dry. This product is **not water resistant**. Do not use it in the shower or bath, or immerse it in water.
- Keep out of reach of children.
- Do not use on irritated skin, varicose veins, moles, or sunburned skin. Consult a doctor if you have any skin conditions.
- Only use the provided USB charging line for charging.
- Unplug the device before cleaning.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Kemei KM-189A Epilator:



Figure 3.1: Kemei KM-189A Epilator with key components labeled. Labels include Charging hole, Switch, Illuminating light, Cutter head, Comb, and Charging display.

- **Cutter Head:** The epilating mechanism that removes hair from the root.
- **Illuminating Light:** An LED light that provides visibility for fine hairs.
- **Switch:** Controls power and speed settings (0 - Off, 1 - Low Speed, 2 - High Speed).
- **Charging Hole:** Port for connecting the USB charging cable.
- **Charging Display:** Indicator light for charging status.
- **Comb:** Attachment for guiding hair into the epilator.

4. SETUP

4.1. Initial Charge

Before first use, fully charge the epilator. A full charge provides approximately 40 minutes of operating time.

1. Insert the small end of the provided USB charging line into the charging hole on the epilator.
2. Connect the other end of the USB cable to a 5V adapter, computer, power bank, or car charger.
3. The charging display light will indicate charging status. Once fully charged, disconnect the cable.

4.2. Preparing for Use

Ensure your skin is clean and dry before epilation. For best results, hair should be between 0.5mm and 3mm in length.

5. OPERATING INSTRUCTIONS

5.1. Powering On and Speed Settings

1. Slide the switch to position "1" for low speed or "2" for high speed.
2. The illuminating light will turn on, providing better visibility of fine hairs.
3. **Low Speed (1):** Recommended for sensitive areas such as lips, face, armpits, and bikini area, offering less pain.
4. **High Speed (2):** Suitable for faster epilation of thicker hair on arms and legs.

5.2. Epilation Technique

Hold the epilator at a 90-degree angle to your skin, ensuring the epilator head is flat against the skin. Gently glide the epilator against the direction of hair growth. Do not press too hard.

Easy operation

One hand can also be easily operated
And no security risks



Figure 5.1: Demonstrating the ergonomic grip and ease of operation. The device is held comfortably in one hand.

5.3. Recommended Usage Areas

The Kemei KM-189A Epilator is suitable for various body parts:



Figure 5.2: Visual guide to recommended epilation areas including legs, lip hair, underarms, arms, and bikini area.

- **Legs:** Use high speed for efficient removal.
- **Arms:** Use high speed for efficient removal.
- **Underarms:** Use low speed due to sensitivity. Stretch the skin taut.
- **Bikini Area:** Use low speed due to sensitivity. Stretch the skin taut.
- **Face (e.g., Lip Hair):** Use low speed and exercise caution.

After epilation, your skin may appear slightly red. This is normal and should subside quickly. Applying a soothing lotion can help.

6. MAINTENANCE

Regular cleaning ensures optimal performance and hygiene of your epilator.

6.1. Cleaning the Epilator Head

1. Ensure the device is switched off and unplugged from the charging cable.
2. Use the provided cleaning brush to remove any trapped hairs from the epilator head.
3. For thorough cleaning, the epilator head can be detached (refer to product diagram for release mechanism if applicable, though not explicitly stated in provided data). Rinse the detached head

under running water. Ensure it is completely dry before reattaching.

4. Do not rinse the main body of the epilator as it is not water resistant.

6.2. Storage

Store the epilator in a dry place, away from direct sunlight and extreme temperatures. Keep it in its original packaging or a protective pouch when not in use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB cable.
Device stops during use.	Battery is low.	Recharge the device.
Poor hair removal performance.	Epilator head is clogged with hair. Hair length is too short or too long.	Clean the epilator head thoroughly. Ensure hair length is optimal (0.5mm - 3mm).
Skin irritation after use.	Sensitive skin. Incorrect technique (pressing too hard).	Use low speed setting for sensitive areas. Apply soothing lotion after use. Ensure gentle gliding motion.

8. SPECIFICATIONS

Feature	Detail
Model Name	KM-189A
Brand	KEMEI
Power Source	Battery Powered (USB Rechargeable)
Operating Time	Approx. 40 minutes (after full charge)
Water Resistance Level	Not Water Resistant
Included Components	USB charging line
Item Weight	0.15 Kilograms
Color	Pink

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the purchase documentation or contact your retailer. Keep your proof of purchase for any warranty claims.

Manufacturer: Kemei

Item Model Number: KM-189A

