

RIF6 XTV000212UK

RIF6 XTV000212UK 61-Key Electronic Piano Keyboard Instruction Manual

Model: XTV000212UK | Brand: RIF6

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your RIF6 XTV000212UK 61-Key Electronic Piano Keyboard. Please read this manual thoroughly before using the product to ensure proper function and longevity.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- RIF6 61-Key Electronic Piano Keyboard
- Adjustable X-Style Keyboard Stand
- Adjustable Padded Stool
- Over-Ear Headphones (3.5mm jack)
- Music Stand (detachable)
- Sustain Pedal
- Power Adapter
- Microphone
- Instruction Manual

Package Contents

Included: Keyboard, sheet holder, X stand, stool, headphones.

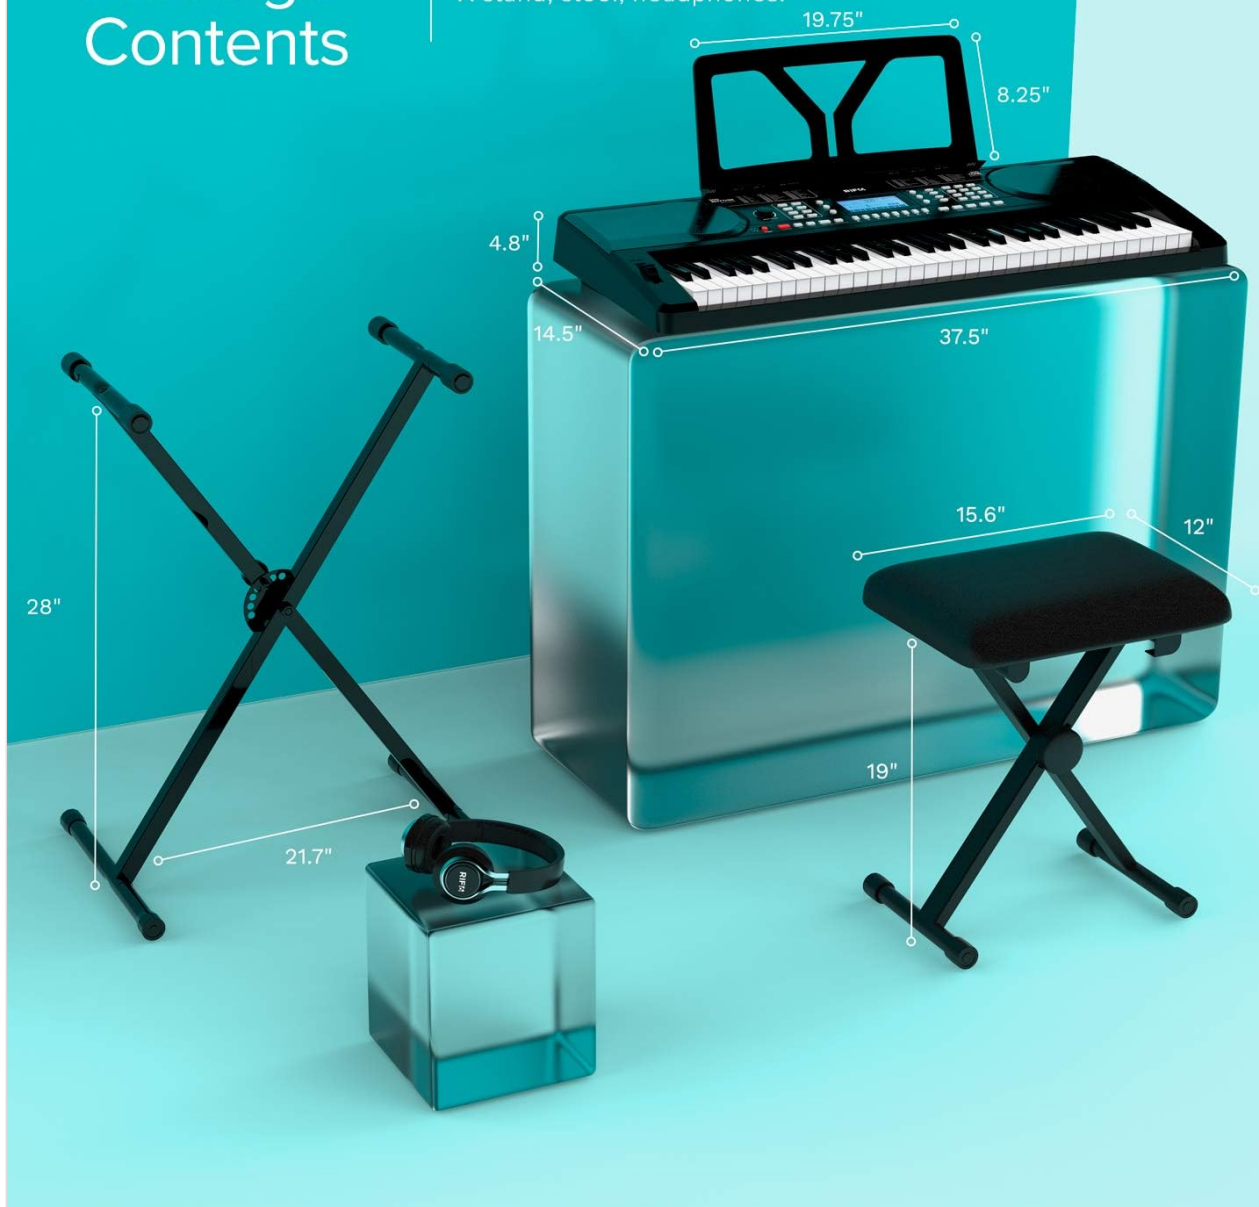


Image: Package contents of the RIF6 61-Key Electronic Piano Keyboard, showing the keyboard, X-stand, stool, headphones, and music stand with their respective dimensions.

SETUP

1. Assembling the Keyboard Stand and Stool

1. Unfold the X-style keyboard stand. Adjust the height to your preference using the locking mechanism.
2. Place the RIF6 61-Key Electronic Piano Keyboard securely on the stand. Ensure it is stable.
3. Unfold the padded stool and adjust its height for comfortable playing.

Play At Your Comfort

Create music comfortably.
Our stand & stool have
multiple height options.



Image: The adjustable X-style keyboard stand and padded stool, illustrating various height settings for user comfort.

2. Connecting Power and Accessories

1. Connect the power adapter to the DC 12V input jack on the rear panel of the keyboard. Plug the adapter into a standard electrical outlet.
2. For portable use, the keyboard can also be powered by 8 x 1.5V 'D' batteries (not included). Insert batteries into the compartment on the underside of the keyboard.
3. Plug the sustain pedal into the 'SUSTAIN' jack on the rear panel.
4. For private practice, connect the over-ear headphones to the 'PHONES OUTPUT' jack.
5. To use the microphone, plug it into the 'MIC IN' jack.
6. Attach the music stand to the designated slots on the top panel of the keyboard.

Flexible Control

Easily create & control your sound with our LED panel and soundboard.



Image: The RIF6 keyboard highlighting its power options, demonstrating both AC adapter connection and the battery compartment for portable use.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the **POWER** button located on the left side of the control panel to turn the keyboard on or off. The LCD display will illuminate upon power-on.

2. Volume Control

Adjust the overall volume using the **MASTER VOLUME** knob. Use the **VOLUME +/-** buttons for fine adjustments to accompaniment volume.

3. Tone/Voice Selection

The keyboard features 300 different tones. Press the **TONE** button, then use the numeric keypad (0-9) to enter the desired tone number. Refer to the tone list in the full instruction manual for available options.

4. Rhythm Selection

Select from 300 rhythms by pressing the **RHYTHM** button and entering the corresponding number via the numeric keypad. Use the **START/STOP** button to begin or end the rhythm.

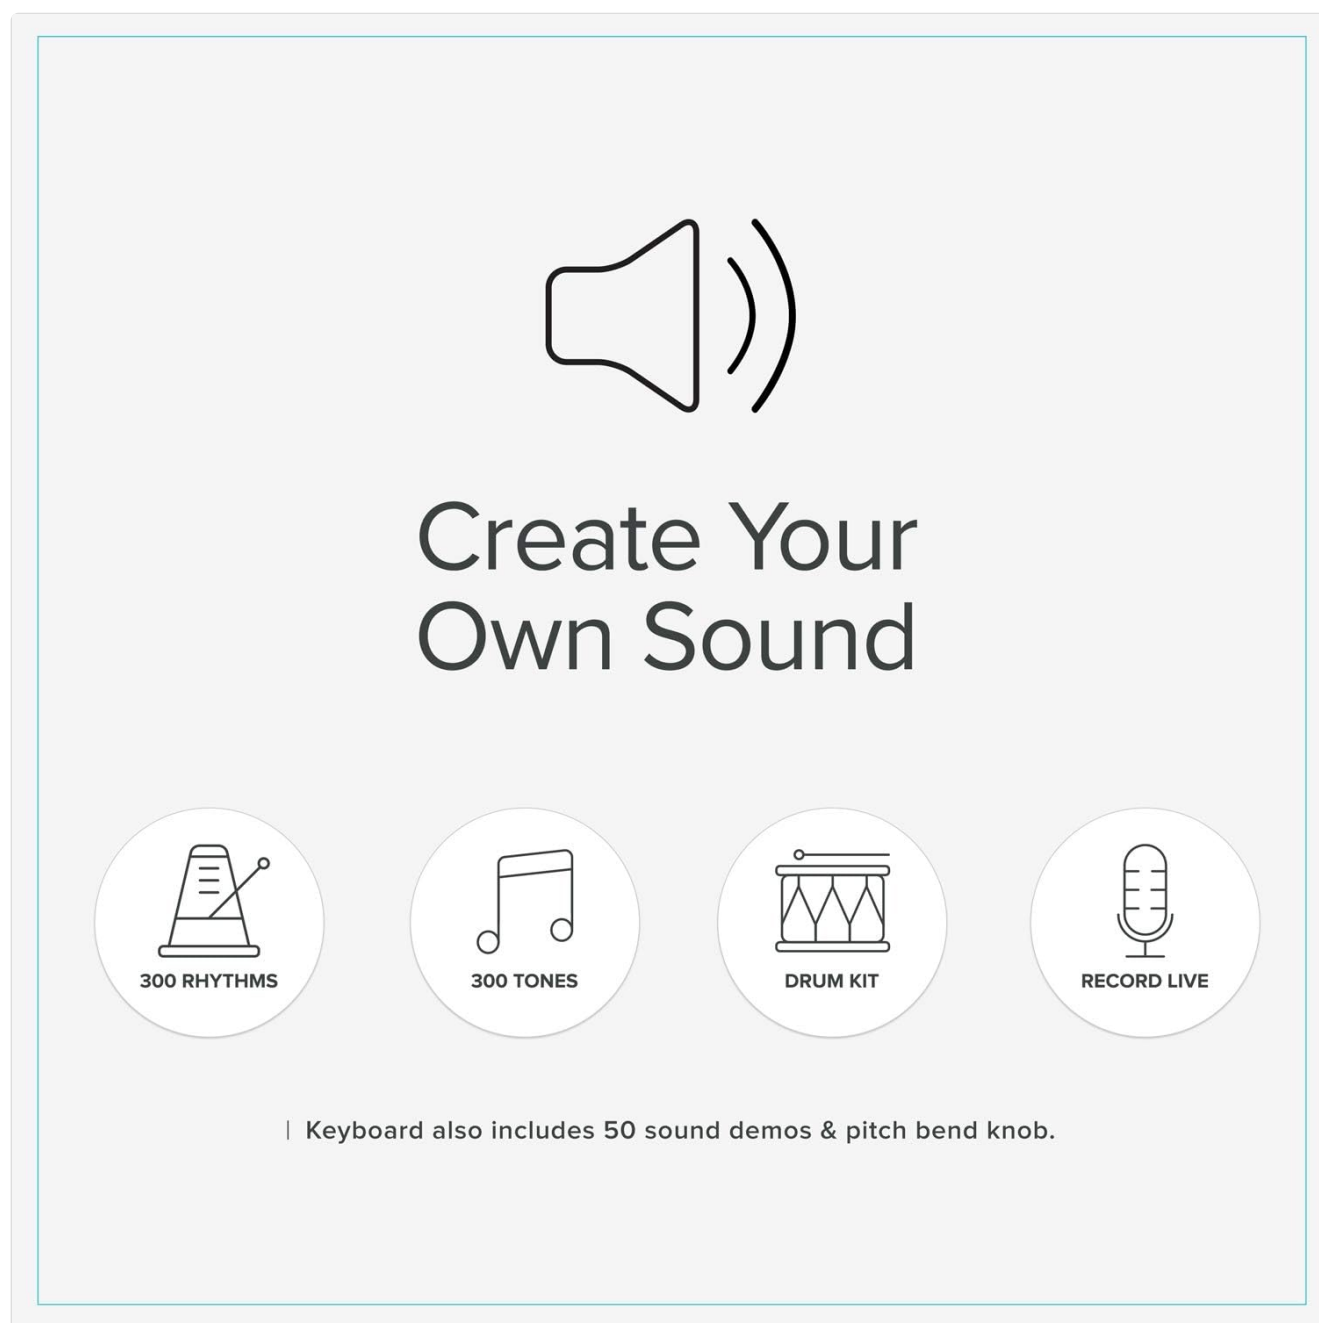


Image: The RIF6 keyboard's control panel, highlighting features such as 300 rhythms, 300 tones, drum kit, and live recording capabilities.

5. Demo Songs

The keyboard includes 50 demo songs. Press the **DEMO** button to cycle through and play the pre-loaded songs.

6. Teaching Modes

The RIF6 keyboard offers three teaching modes to assist with learning:

- **Teach 1 (One Key):** Allows you to play any key to advance the melody. Focuses on rhythm and timing without requiring correct notes.
- **Teach 2 (Follow):** The keyboard waits for you to play the correct note before advancing the melody. This helps with note recognition.

- **Teach 3 (Ensemble):** The keyboard plays the accompaniment, and you play the melody. If you don't play the correct note within 3 seconds, the keyboard will play it for you.

To activate a teaching mode, press the corresponding **TEACH 1**, **TEACH 2**, or **TEACH 3** button, then select a song using the numeric keypad.

7. Recording and Playback

Press the **REC** button to enter recording mode. Play your desired melody. Press **PLAY** to listen to your recorded performance.

8. Sustain Pedal

Connect the sustain pedal to the 'SUSTAIN' jack. Pressing the pedal will sustain the notes played, similar to an acoustic piano.

9. Headphones and Microphone

Plug headphones into the 'PHONES OUTPUT' for silent practice. Connect the microphone to the 'MIC IN' jack to sing along while playing.

Power Up Your Way

Plug in and play or use
8 1.5V D batteries for
portable playing.



Image: Close-up of the RIF6 keyboard's control panel, detailing buttons for volume, accompaniment, tempo, transpose, percussion, sustain, vibrato, split, metronome, demo songs, record, play, and teaching modes.

MAINTENANCE

To ensure the longevity and optimal performance of your RIF6 keyboard, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the keyboard. Avoid using abrasive cleaners, solvents, or waxes, as these can damage the finish.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If storing for an extended period, remove batteries to prevent leakage.
- **Handling:** Always handle the keyboard with care. Avoid dropping it or subjecting it to strong impacts.
- **Power:** Disconnect the power adapter when the keyboard is not in use for prolonged periods.

TROUBLESHOOTING

If you encounter any issues with your RIF6 keyboard, refer to the following common problems and solutions:

- **No Sound:**

- Check if the keyboard is powered on.
- Ensure the master volume is turned up.
- If headphones are plugged in, unplug them to check speaker output.
- Verify that the power adapter is securely connected or batteries are correctly inserted and charged.

- **Keys Not Responding:**

- Ensure the keyboard is powered on.
- If in a teaching mode, ensure you are pressing the correct keys as indicated.

- **Distorted Sound:**

- Lower the volume to see if distortion reduces.
- Check headphone connection if using headphones.

For further assistance, please consult the full instruction manual or contact RIF6 customer support.


SPECIFICATIONS


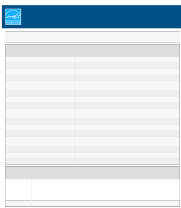

Model Number	XTV000212UK
Number of Keys	61
Item Weight	12.13 Pounds
Product Dimensions	3.76 x 1.48 x 0.49 inches
Body Material	Plastic
Power Source	AC Adapter (included) or 8 x 1.5V 'D' Batteries (not included)
Connectivity Technology	3.5mm Audio Jack
Headphones Jack	3.5mm Jack
Skill Level	Beginner
Age Range	Adults, Kids

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact details provided in the original product packaging or visit the official RIF6 website. Keep your purchase receipt as proof of purchase.

Related Documents - XTV000212UK

	RIF6 Sound Bar User Manual User manual for the RIF6 Sound Bar, covering safety instructions, parts description, remote control functions, installation, operation, troubleshooting, specifications, and warranty information.
---	--

	<p>RIF6 L-Shaped Computer Desk Installation and Assembly Guide</p> <p>Comprehensive installation, assembly, and warranty guide for the RIF6 L-shaped computer desk (model RIF090408N). Includes safety instructions, parts list, step-by-step assembly, and contact information.</p>
	<p>ENERGY STAR Certified Audio/Video: RIF6 - RIF030079N Specifications</p> <p>Detailed specifications for the ENERGY STAR certified RIF6 - RIF030079N Audio/Video product, including its energy efficiency, technical features, and market availability.</p>
	<p>RIF6 Warranty and Exchange Policy</p> <p>Details the RIF6 warranty and exchange policy, including the 30-day exchange period and 1-year product warranty.</p>