

[Manuals.plus](#) /

> [Dyson](#) /

> Dyson V11 Animal Cordless Vacuum Cleaner Instruction Manual

Dyson V11 Animal

Dyson V11 Animal Cordless Vacuum Cleaner Instruction Manual

Brand: **Dyson** | Model: **V11 Animal (332037-01)**

INTRODUCTION AND OVERVIEW

The Dyson V11 Animal Cordless Vacuum Cleaner is a powerful and versatile cleaning solution designed for optimal performance in homes with pets. Its intelligent features and adaptable design make it suitable for various cleaning tasks, from deep cleaning carpets to quick spot clean-ups.





The Dyson V11 Animal Cordless Vacuum Cleaner in purple, shown in its upright stick configuration.

WHAT'S IN THE BOX

Your Dyson V11 Animal Cordless Vacuum Cleaner package includes the following components:

- **Torque Drive Head:** Automatically adapts suction and power for different floor types.
- **Mini-Motorized Tool:** Ideal for removing pet hair from upholstery and tight spaces.
- **Crevice Tool:** For cleaning in narrow gaps and hard-to-reach areas.
- **Stubborn Dirt Brush:** Designed for tackling ground-in dirt.
- **Combination Tool:** A two-in-one tool for dusting and cleaning larger debris.
- **Wand Storage Clip:** For convenient storage of attachments on the wand.
- **Docking Station:** For charging and storing the vacuum and its attachments.
- **Charger:** Power adapter for the docking station.

SETUP

Assembly

The Dyson V11 Animal is designed for easy assembly. Simply align the main unit with the wand and click them into place. Attach your desired cleaner head (e.g., Torque Drive Head) to the end of the wand until it clicks securely. For handheld use, detach the wand and attach accessories directly to the main unit.

Charging

Install the wall-mounted docking station in a convenient location near a power outlet. Connect the charger to the docking station. Place your Dyson V11 Animal onto the docking station to charge. The LCD screen will display the charging status and remaining battery life.

OPERATING INSTRUCTIONS

Power Modes

The Dyson V11 Animal features three distinct power modes, selectable via the LCD screen:

- **Eco Mode:** Provides the longest run time for everyday cleaning on all floor types.
- **Auto Mode:** Intelligently optimizes suction and run time across all floor types using the Dynamic Load Sensor (DLS) system.
- **Boost Mode:** Delivers maximum suction power for intensive spot cleaning and ground-in dirt.

Dynamic Load Sensor (DLS) System

In Auto mode, the DLS system automatically detects the floor type and adjusts the motor speed accordingly. This ensures optimal cleaning performance on both carpets and hard floors without manual intervention.

Handheld Conversion and Attachment Usage

To convert to a handheld vacuum, simply press the release button to detach the wand from the main unit. You can then attach any of the included tools directly to the main unit for specialized cleaning tasks. The mini-motorized tool is particularly effective for pet hair on upholstery, while the crevice tool is perfect for tight spaces in your car or home.

MAINTENANCE

Emptying the Dustbin

To empty the dustbin, hold the main unit over a trash can and push the red lever forward. The bin will open, and the dirt and debris will be hygienically ejected. Close the bin securely after emptying.

Filter Cleaning

The Dyson V11 Animal features whole-machine filtration. For optimal performance, regularly check and clean the filter as indicated by the LCD screen or manual instructions. A clean filter ensures consistent suction and expels cleaner air.

TROUBLESHOOTING

If you experience any issues with your Dyson V11 Animal, first check the LCD screen for any error messages or battery status indicators. Ensure the dustbin is empty and the filter is clean and properly installed. For persistent issues, refer to the detailed troubleshooting section in your full product manual or contact Dyson customer support.

SPECIFICATIONS

- **Brand:** Dyson
- **Model Name:** V11 Animal
- **Model Number:** 332037-01
- **Color:** Purple
- **Form Factor:** Handheld / Stick
- **Special Feature:** Lightweight
- **Filter Type:** Disk (Whole-machine filtration)
- **Is Cordless?:** Yes
- **Capacity:** 0.2 Gallons
- **Wattage:** 120 watts
- **Runtime:** Up to 60 minutes (actual runtime varies by mode/attachments)
- **Charging Time:** 4.5 Hours
- **Recommended Uses:** Carpet, Hardwood, Car, Upholstery
- **Product Dimensions:** 49.65"L x 9.84"W x 10.28"H
- **Item Weight:** 6.68 pounds
- **Battery Type:** Lithium-Ion

WARRANTY & SUPPORT

Your Dyson V11 Animal Cordless Vacuum Cleaner comes with a **2-year warranty** covering parts and labor (excluding filters) from the date of purchase. To register your warranty or for any questions about your Dyson machine, please contact the Dyson Helpline. Most questions can be resolved over the phone by trained staff.