

Walk H103

Walk H103 Hexagonal Bluetooth Wireless Speaker User Manual

Model: H103

INTRODUCTION

Thank you for choosing the Walk H103 Hexagonal Bluetooth Wireless Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read it thoroughly before use.

PACKAGE CONTENTS

Ensure all items are present in the box:

- Walk H103 Hexagonal Bluetooth Wireless Speaker
- Charging Cable (Power cable)
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Walk H103 speaker.



Image 1: Front View. This image shows the front of the Walk H103 speaker, featuring its hexagonal shape and mesh fabric finish.



Image 2: Back View. The back of the speaker displays the Walk brand logo, product information label (Model No. H-103), and the integrated stand.



Image 3: Top View. This image provides a view of the top surface of the speaker, showing its hexagonal design.

Controls and Ports

The speaker features a touch control pad for various functions and standard ports for connectivity.

- **Power Button:** To turn the speaker on or off.
- **Volume Controls:** To adjust the playback volume.
- **Play/Pause Button:** To control audio playback.
- **Microphone:** For hands-free calling.
- **Charging Port:** For connecting the power cable to recharge the battery.

SETUP

1. Charging the Speaker

Before first use, fully charge your speaker. The Walk H103 is equipped with a 2000 mAh rechargeable lithium battery.

1. Connect the provided charging cable to the speaker's charging port.
2. Connect the other end of the cable to a suitable USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate.
4. Charging typically takes approximately 4 hours. The indicator light will change or turn off once fully charged.

2. Powering On/Off

- **To Power On:** Press and hold the Power button for a few seconds until you hear an audible prompt or see an indicator light.
- **To Power Off:** Press and hold the Power button again for a few seconds until the speaker powers down.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

The Walk H103 speaker uses Bluetooth V4.2 for wireless connectivity. It can easily connect to any Bluetooth-enabled device such as your phone, tablet, or laptop.

1. Ensure the speaker is powered on and in pairing mode (usually indicated by a flashing LED light). If it doesn't enter pairing mode automatically, refer to the device's specific instructions for manual pairing mode activation.
2. On your device (phone, tablet, etc.), go to the Bluetooth settings.
3. Search for available Bluetooth devices. You should see "Walk H103" or a similar name in the list.
4. Select "Walk H103" to connect. Once paired, the speaker will usually provide an audible confirmation, and the LED indicator will stop flashing.
5. The speaker will automatically attempt to reconnect to the last paired device when powered on.

2. Playing Audio

Once paired, you can play music or other audio from your connected device. Use the touch control pad on the speaker or your device to manage playback.

- **Play/Pause:** Tap the Play/Pause button.
- **Volume Up/Down:** Use the dedicated volume buttons or the touch pad controls.
- **Next/Previous Track:** Refer to the specific touch pad gestures for skipping tracks, if available.

3. Hands-Free Calling

The integrated microphone allows you to answer calls directly through the speaker when connected to your phone.

- **Answer Call:** Tap the Play/Pause button when a call comes in.
- **End Call:** Tap the Play/Pause button again to end the call.
- **Reject Call:** Press and hold the Play/Pause button for a few seconds.

MAINTENANCE

To ensure the longevity and optimal performance of your speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** This speaker is not waterproof. Avoid exposing it to water or high humidity.
- **Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. Recharge it regularly.

TROUBLESHOOTING

If you encounter issues with your Walk H103 speaker, refer to the following common problems and solutions:

Problem	Solution
Speaker does not turn on.	Ensure the battery is charged. Connect the speaker to a power source using the charging cable.
Cannot pair with a Bluetooth device.	Make sure the speaker is in pairing mode (flashing LED). Ensure Bluetooth is enabled on your device. Move the speaker closer to your device. Forget "Walk H103" from your device's Bluetooth list and try pairing again. Restart both the speaker and your device.
No sound or low volume.	Increase the volume on both the speaker and your connected device. Ensure the speaker is properly paired and connected. Check if the audio source on your device is playing.
Poor sound quality.	Move the speaker closer to your device to avoid interference. Ensure there are no obstructions between the speaker and your device. Try playing a different audio source.

SPECIFICATIONS

Detailed technical specifications for the Walk H103 Hexagonal Bluetooth Wireless Speaker:

Model Name	Hexagonal
Model Number	H103
Connectivity Technology	Bluetooth V4.2
Speaker Output Power	2 x 5W (with passive bass radiator)
Special Features	Integrated Microphone, Wireless
Control Type	Touch Pad
Battery Type	1 Lithium-ion (included)
Battery Capacity	2000 mAh
Charging Time	Approximately 4 hours
Play Time	3-4 hours (average battery life: 3 hours)

Product Dimensions	18.2 x 18.2 x 6.5 cm
Product Weight	520 grams
Manufacturer	Walk
Country of Origin	Germany
EAN/UPC	05060450970570

WARRANTY AND SUPPORT

For warranty information, please refer to the retailer's return policy or contact the point of purchase. This product is subject to a 30-day refund/replacement return policy.

For technical support or further assistance, please visit the official Walk Audio website or contact their customer service department.

Manufacturer: Walk

© 2024 Walk Audio. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

