



[Manuals.plus](#) /

> [CedarCraft](#) /

> CedarCraft Elevated Cedar Planter with Greenhouse Cover Instruction Manual

CedarCraft Elevated Cedar Planter 23x72x30H with Greenhouse Cover

CedarCraft Elevated Cedar Planter with Greenhouse Cover

Model: Elevated Cedar Planter 23x72x30H with Greenhouse Cover

INTRODUCTION

Thank you for choosing the CedarCraft Elevated Cedar Planter with Greenhouse Cover. This product is designed to provide an optimal environment for growing a variety of plants, vegetables, and herbs, extending your growing season and protecting your plants from adverse conditions. This manual provides detailed instructions for assembly, operation, and maintenance to ensure long-lasting enjoyment and successful gardening.



Image: CedarCraft Elevated Cedar Planter with a variety of thriving plants.

SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep small parts away from children during assembly.
- Ensure all connections are secure before filling the planter with soil.
- Do not overload the planter with excessive weight beyond its intended capacity.
- Place the planter on a level, stable surface to prevent tipping.
- Exercise caution when handling tools during assembly.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Cedar planter panels (sides, ends, bottom supports)
- Legs and corner posts
- Hardware pack (screws, bolts, nuts)
- Greenhouse cover frame components

- Polyethylene greenhouse cover
- Assembly instructions

SETUP AND ASSEMBLY

Assembly typically requires a Phillips head screwdriver and a wrench. It is recommended to assemble the planter on a soft, clean surface to prevent scratching the cedar wood.

Step 1: Assemble the Planter Box

Connect the cedar side and end panels using the provided hardware. Ensure the tongue and groove construction aligns properly for a secure fit. Attach the corner posts to form the main planter box structure.



Image: Elevated Cedar Planter dimensions (72"L x 23"W x 30"H).

Step 2: Attach the Legs

Securely attach the four legs to the corner posts of the planter box using the designated hardware. Ensure all connections are tightened to provide a stable base for the elevated planter.

Step 3: Install the Greenhouse Cover Frame

Assemble the frame for the greenhouse cover according to the diagrams. This typically involves connecting arched poles and horizontal supports. Place the assembled frame onto the top edges of the planter box.



Image: Elevated Cedar Planter with greenhouse cover, showing key features.

Step 4: Attach the Greenhouse Cover

Drape the polyethylene cover over the assembled frame. Secure the cover to the planter box using the integrated Velcro straps or other fastening mechanisms. Ensure the zipper closure is functional for easy access.



Image: Elevated Cedar Planter with greenhouse cover dimensions (72"L x 23"W x 53"H).

OPERATING INSTRUCTIONS

Using the Planter

- **Filling with Soil:** Line the bottom of the planter with a breathable landscape fabric or similar material to prevent soil loss while allowing drainage. Fill the planter with a high-quality potting mix suitable for your chosen plants.
- **Planting:** Plant your desired vegetables, herbs, or flowers according to their specific spacing and depth requirements.
- **Watering:** Water regularly, ensuring adequate drainage. The elevated design helps prevent overwatering and improves aeration.

Using the Greenhouse Cover

- **Extending Growing Season:** The greenhouse cover helps retain heat and humidity, allowing for earlier planting in spring and later harvesting in fall.
- **Plant Protection:** The cover protects plants from pests, harsh weather conditions (wind, heavy rain, light frost), and excessive sun exposure.
- **Ventilation:** Utilize the zipper opening to regulate temperature and humidity. Open the cover partially or fully on warm days to prevent overheating and ensure proper air circulation for plant health.
- **Securing the Cover:** Ensure the cover is securely fastened with Velcro straps, especially during windy

conditions, to prevent it from being dislodged.

MAINTENANCE

- **Cedar Wood Care:** Cedar is naturally rot-resistant. To maintain its appearance and prolong its life, you may apply a non-toxic, food-safe wood sealant annually. Avoid harsh chemical cleaners.
- **Greenhouse Cover Cleaning:** Clean the polyethylene cover periodically with mild soap and water. Rinse thoroughly and allow to air dry. Avoid abrasive cleaners or brushes that could damage the material.
- **Winter Storage:** In regions with harsh winters, consider removing the greenhouse cover and storing it indoors to prevent damage from heavy snow or extreme cold. The cedar planter can typically remain outdoors.
- **Drainage:** Periodically check the planter's drainage to ensure it is not clogged.

TROUBLESHOOTING

- **Wobbly Planter:** Check all screws and bolts to ensure they are tightened securely. Ensure the planter is on a level surface.
- **Greenhouse Cover Not Staying On:** Verify that all Velcro straps are properly fastened. In very windy conditions, additional weights or anchors may be needed (not included).
- **Poor Plant Growth:** This is often related to soil quality, watering, sunlight, or plant nutrition, not the planter itself. Consult gardening resources for specific plant care.
- **Water Accumulation in Planter:** Ensure drainage holes are clear and not blocked by soil or debris. Consider adding a layer of gravel at the bottom before soil if drainage is a persistent issue.

SPECIFICATIONS

Product Dimensions (L x W x H)	72" x 23" x 30" (Planter only)
Product Dimensions with Cover (L x W x H)	72" x 23" x 53" (Approximate)
Frame Material	Cedar
Cover Material	Polyethylene (PE)
Color	Red (referring to cover accents/trim)
Closure Type	Zipper
GTIN / UPC	857693008062
ASIN	B07NXWFF28

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official CedarCraft website. Keep your purchase receipt for warranty claims.

