

Manuals.plus /

› Aucma /

› Aucma Stand Mixer, 6.5-Qt 660W 6-Speed Tilt-Head Food Mixer, Kitchen Electric Mixer with Dough Hook, Wire Whip & Beater (6.5Qt, Blue) 6.5Qt Blue User Manual

Aucma PCSTD-517

Aucma Stand Mixer User Manual

Model: PCSTD-517

Brand: Aucma

INTRODUCTION

Thank you for choosing the Aucma 6.5-Qt 660W 6-Speed Tilt-Head Food Mixer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new stand mixer.

Please read all instructions carefully before first use and retain this manual for future reference.

The Aucma Stand Mixer is designed to simplify your baking and cooking tasks with its powerful motor and versatile attachments, making it an indispensable tool in any kitchen.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the mixer.
- To protect against risk of electrical shock, do not immerse the mixer base, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beaters during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.

- Do not let cord contact hot surfaces, including the stove.
- Always ensure the mixer is securely locked in place before operation.

PARTS AND FEATURES

Familiarize yourself with the components of your Aucma Stand Mixer:

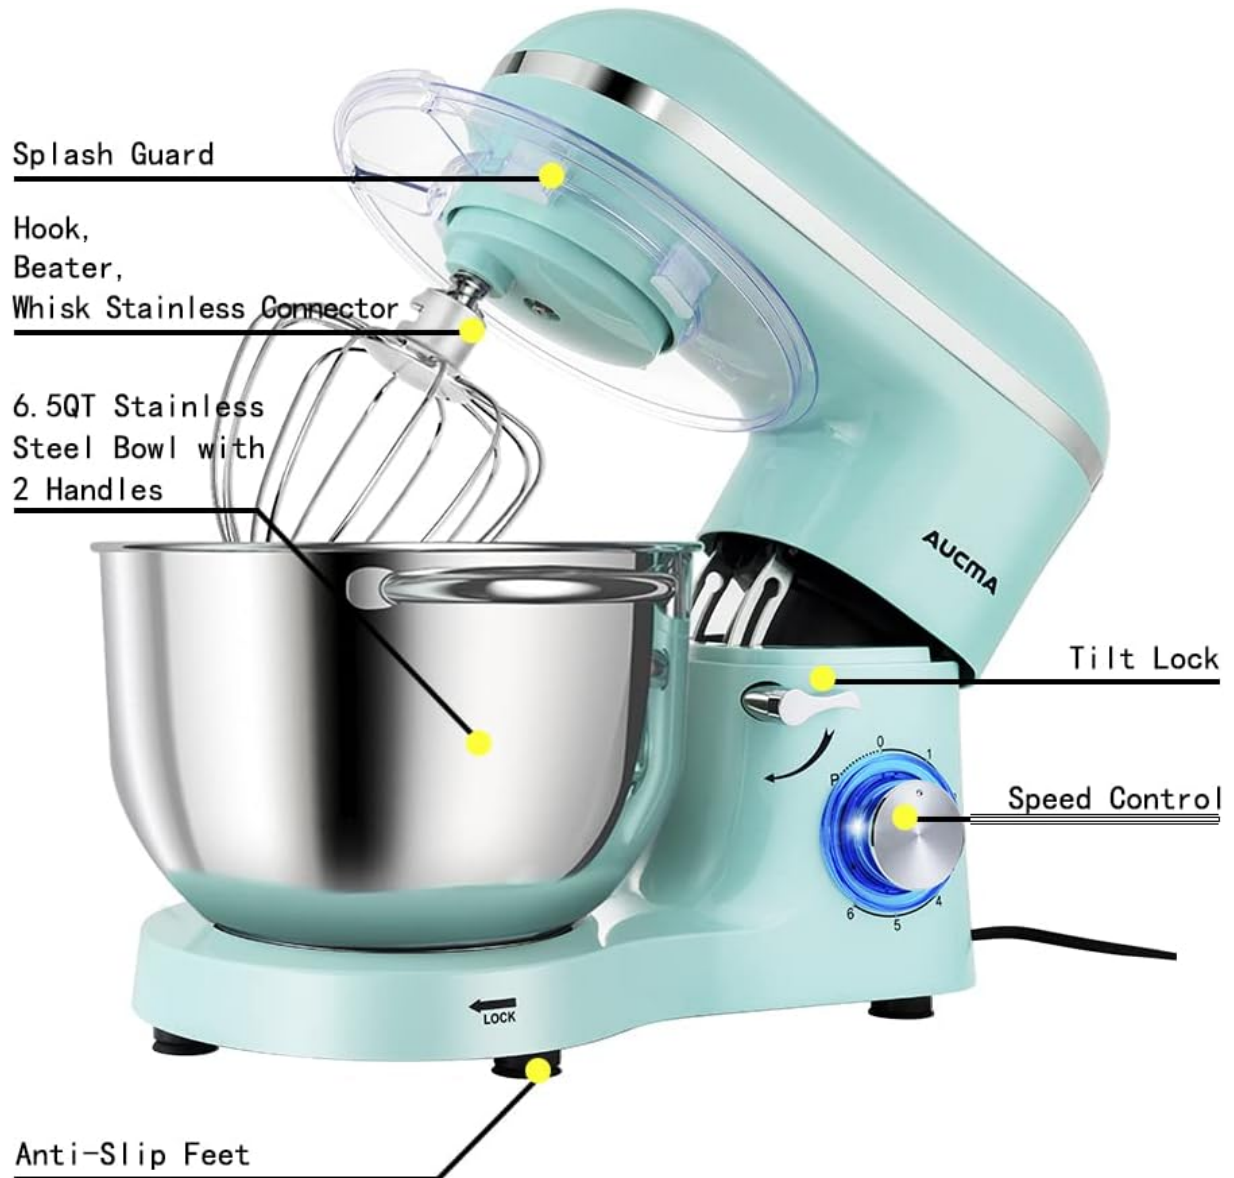


Figure 1: Overview of the Aucma Stand Mixer with key components labeled, including the splash guard, tilt lock, speed control, anti-slip feet, 6.5QT stainless steel bowl with handles, and attachment points for the hook, beater, and whisk.

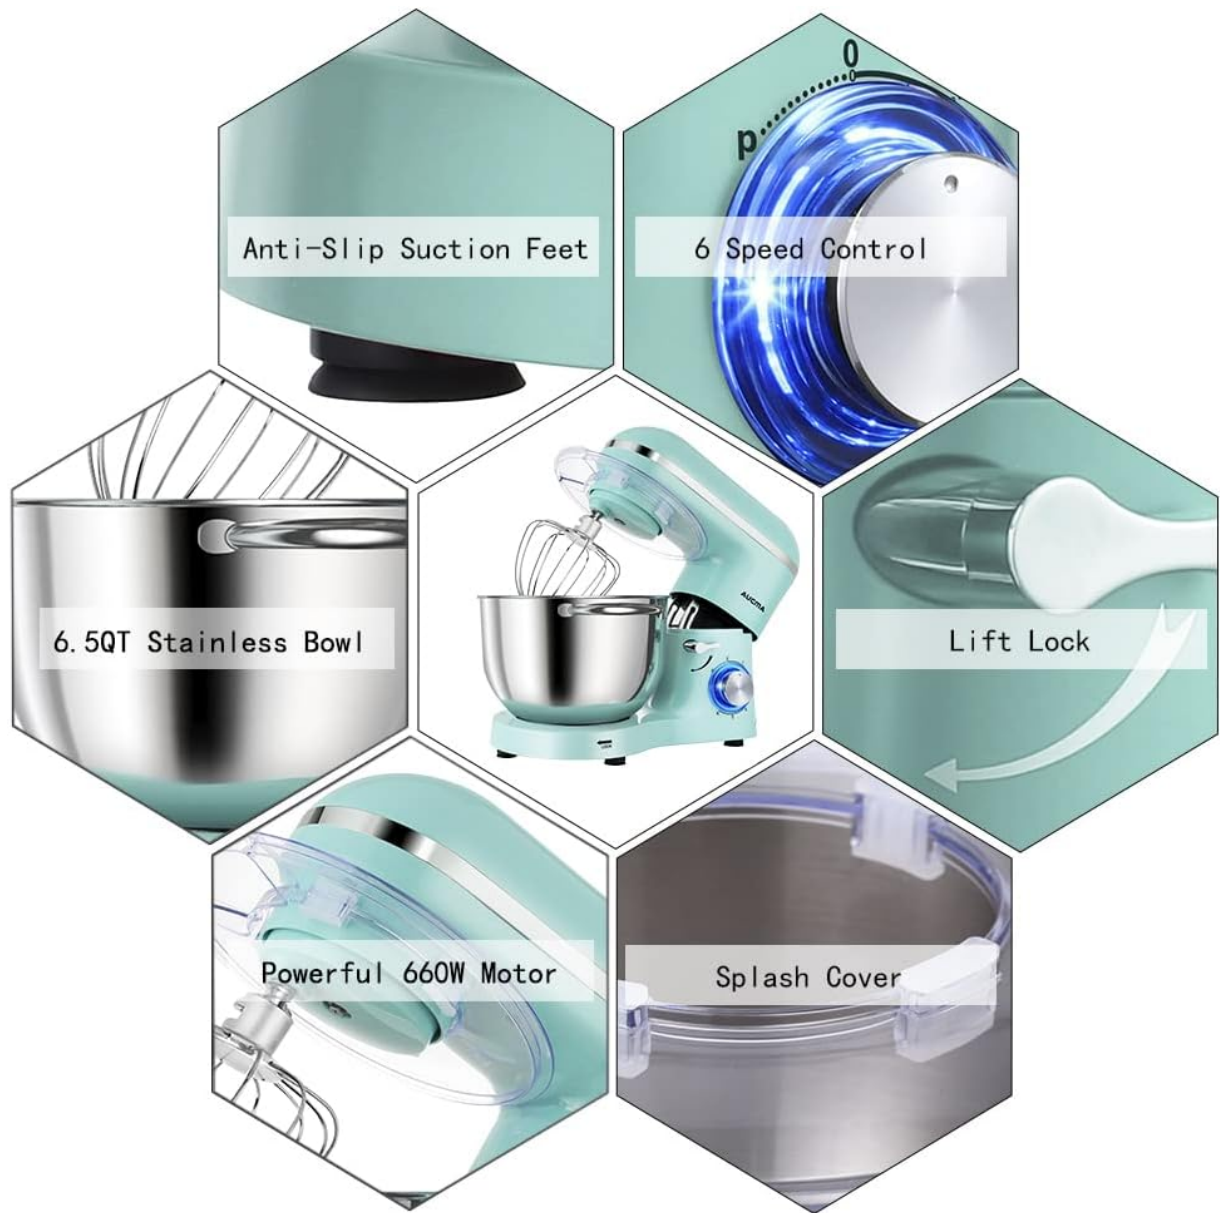


Figure 2: Close-up view of various features: anti-slip suction feet for stability, 6-speed control dial, 6.5QT stainless steel bowl, lift lock mechanism, powerful 660W motor, and splash cover.

Attachments

Your mixer comes with three essential mixing accessories:

- **Whisk:** Ideal for light mixtures such as cream, egg whites, cakes, and sauces.
- **Dough Hook:** Designed for heavy mixtures like bread dough, pizza dough, and spaghetti.
- **Beater:** Suitable for medium-heavy mixtures including salads, cookies, and crepes.



Whisk

Light mixtures – Cream, Egg White, Cake, Sauces.

Dough Hook

Heavy mixtures – Bread, Pizza, Spaghetti.

Beater

Medium-heavy mixtures –Salad, Cookie, Crepes.



Figure 3: The three primary attachments: Whisk for light mixtures, Dough Hook for heavy mixtures, and Beater for medium-heavy mixtures.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Clean:** Before first use, wash the stainless steel bowl, whisk, dough hook, and beater in warm, soapy water. Rinse thoroughly and dry. The main unit should be wiped with a damp cloth.
3. **Placement:** Place the mixer on a clean, dry, flat, and stable surface. Ensure the anti-slip feet are firmly suctioned to the countertop for stability during operation.
4. **Attach Bowl:** Place the 6.5QT stainless steel bowl onto the base, aligning the grooves, and twist clockwise until it locks securely.
5. **Install Attachment:** Ensure the mixer head is tilted up. Select the appropriate attachment (whisk, dough hook, or beater) for your recipe. Insert the attachment into the shaft, pushing upwards and twisting slightly until it clicks into place.
6. **Lower Head:** Gently lower the mixer head until it locks into the operating position.

OPERATING INSTRUCTIONS

The Aucma Stand Mixer features 6 optimized speeds with a pulse function for precise control over your mixing tasks.

1. **Add Ingredients:** With the mixer head tilted up or the splash guard in place, add your ingredients to the mixing bowl. The splash guard with access hatch allows for adding ingredients without making a mess during operation.
2. **Select Speed:** Turn the speed control knob to the desired setting (1-6). Start with a lower speed and gradually increase as needed to prevent splashing and ensure thorough mixing.
3. **Pulse Function:** For short bursts of power or quick mixing, turn the knob to the 'P' (Pulse) setting and release. The mixer will operate at maximum speed as long as the knob is held in the 'P' position.
4. **Monitor Mixing:** Observe the mixing process. If necessary, stop the mixer, tilt the head, and scrape down the sides of the bowl with a spatula.
5. **Finish Mixing:** Once mixing is complete, turn the speed control knob to '0' (Off) and unplug the mixer from the power outlet.
6. **Remove Attachment and Bowl:** Tilt the mixer head up, remove the attachment by pushing upwards and twisting, then unlock and remove the mixing bowl.

Recommended Speed Settings

Speed Setting	Recommended Use	Attachment
1-2 (Low)	Mixing dry ingredients, starting heavy batters, mashing potatoes.	Beater, Dough Hook
3-4 (Medium)	Mixing cakes, cookies, creaming butter and sugar, kneading dough.	Beater, Dough Hook
5-6 (High)	Whipping cream, egg whites, light batters, frosting.	Whisk
P (Pulse)	Quick bursts for chopping, blending, or incorporating ingredients.	All attachments

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Aucma Stand Mixer.

- **Always unplug the mixer** before cleaning.
- **Mixer Base:** Wipe the exterior of the mixer base with a soft, damp cloth. Do not immerse the base in water or any other liquid.
- **Mixing Bowl:** The 6.5QT stainless steel bowl is dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
- **Attachments (Whisk, Dough Hook, Beater):** These attachments are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry immediately to prevent water spots or corrosion.
- **Splash Guard:** The splash guard can be washed by hand with warm, soapy water or placed in the dishwasher.
- **Storage:** Store the mixer and its accessories in a clean, dry place when not in use.

TROUBLESHOOTING

If you encounter any issues with your Aucma Stand Mixer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet issue; speed knob not at '0'.	Ensure plug is fully inserted. Check power outlet with another appliance. Turn speed knob to '0' before turning on.
Attachments do not reach ingredients at the bottom of the bowl.	Attachment not fully inserted; small quantity of ingredients.	Ensure attachment is securely locked into place. Increase ingredient quantity or use a spatula to push ingredients towards the center.
Mixer is excessively loud or vibrates.	Overload; unstable surface; internal issue.	Reduce load if mixing heavy dough. Ensure mixer is on a flat, stable surface with suction feet engaged. If problem persists, contact customer support.
Mixer stops during operation.	Overheating protection activated.	Unplug the mixer and let it cool down for at least 20-30 minutes before resuming use. Reduce mixing time for heavy loads.

If the problem persists after attempting these solutions, please contact Aucma customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	Aucma
Model Name	stand mixer
Item Model Number	PCSTD-517
Color	Blue
Product Dimensions	15.2"D x 9.4"W x 12.4"H
Item Weight	11.7 Pounds (approx. 5.3 kg)
Capacity	6.5 Quarts
Motor Power	660W (Pure copper motor)
Speed Control	Rotary 6 speeds + Pulse function
Noise Level	Low operation noise ≤ 76 dB
Housing Material	Sturdy ABS housing
Bowl Material	Stainless Steel
Blade Material	Stainless Steel
Special Features	Tilt Head, Anti-slip pad, Blue LED light power indicator
Is Dishwasher Safe	No (for main unit); Yes (for bowl and attachments)
Country of Origin	China

WARRANTY AND SUPPORT

Aucma provides a warranty for this product. Please refer to the product packaging or the official Aucma website for specific warranty terms and conditions.

For any questions, technical support, or warranty claims, please contact Aucma customer service. Contact information can typically be found on the product packaging or on the official Aucma brand store page.

Online Support: Visit the Aucma Store on Amazon for FAQs and additional product information.