

## Pyle PKBRD4112

# PYLE Electric Piano, Music Keyboard - 49 Keys

Model: PKBRD4112

## INTRODUCTION

The PYLE PKBRD4112 is a versatile 2-in-1 Karaoke Keyboard designed for musical exploration and entertainment. This portable electronic piano features 49 keys, built-in stereo speakers, and a rechargeable battery, making it suitable for various settings. With its integrated drum pad, multiple preset tones, and rhythms, it offers a wide range of possibilities for musical expression. The auxiliary input allows connection to external devices for an enhanced audio experience. This keyboard is ideal for learning, practicing, and performing at home.

## IMPORTANT SAFETY INFORMATION

- Read all instructions carefully before operating the device.
- Keep the keyboard away from water, moisture, and extreme temperatures.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- Use only the specified power adapter or USB cable for charging.
- Avoid placing heavy objects on the keyboard.
- Keep out of reach of small children due to small parts.

## PACKAGE CONTENTS



The image displays the Pyle PKBRD4112 keyboard packaged in its retail box, accompanied by a microphone. This illustrates the primary components included in the product package.

- PYLE PKBRD4112 Electric Piano Keyboard

- Microphone
- USB Charging Cable
- Auxiliary Audio Cable

## PRODUCT OVERVIEW

---



This image provides a clear top-down view of the Pyle PKBRD4112 49-key electric piano keyboard, showcasing its layout including the keys, control panel, and built-in speakers.



The image highlights the key features of the Pyle PKBRD4112 keyboard through illustrative icons. These include 49 keys, 16 preset tones, 8 audio rhythms, an auxiliary input, a drum pad, microphone input, volume control, USB power capability, record and playback functions, an LED indicator, and an auto power-off feature.

The PKBRD4112 features a compact design with 49 standard piano keys. The control panel is centrally located above the keys, providing access to various functions:

- **Power Button:** Turns the keyboard on/off.
- **Volume Control:** Adjusts the overall sound output.
- **Tone Selection:** Buttons to choose from 16 preset tones (e.g., Piano, Organ, Violin).
- **Rhythm Selection:** Buttons to choose from 8 preset rhythms (e.g., Rock, Disco, Waltz).

- **Drum Pad:** Dedicated buttons for drum sounds.
- **Record/Playback:** Functions to record and listen to your performances.
- **Auxiliary Input:** For connecting external audio devices.
- **Microphone Input:** For connecting the included microphone.

## SETUP

 
---

### Powering the Keyboard

The PKBRD4112 can be powered via its built-in rechargeable battery or through a USB connection.

1. **Battery Power:** Ensure the internal rechargeable battery is charged. A full charge provides portable use.
2. **USB Power:** Connect the provided USB charging cable to the keyboard's USB port and to a standard USB power adapter (not included) or a computer USB port. The keyboard can be operated while charging.

### Connecting External Devices

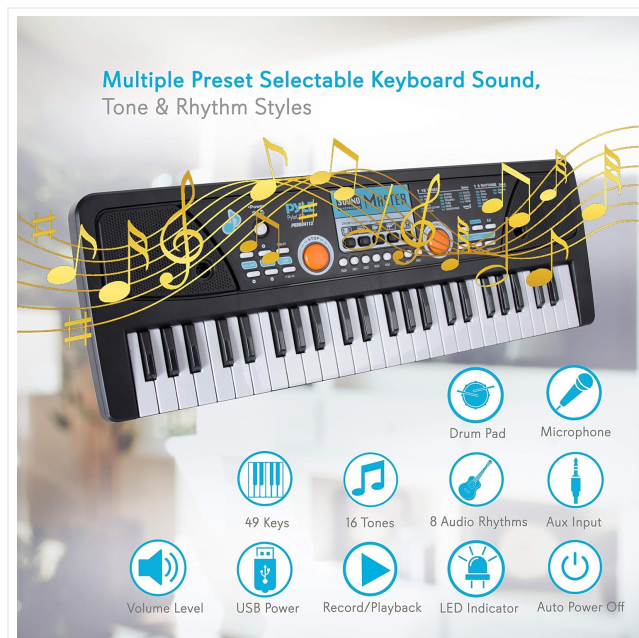

This image illustrates the auxiliary input port on the Pyle PKBRD4112 keyboard, demonstrating its capability to connect and stream audio from various external devices such as smartphones, tablets, and laptops.

- **Auxiliary Input:** Use the provided auxiliary audio cable to connect smartphones, tablets, or other audio playback devices to the keyboard's "Aux In" port. This allows you to play along with your favorite music through the keyboard's speakers.
- **Microphone:** Plug the included microphone into the dedicated microphone input jack for karaoke or vocal performances.

## OPERATING INSTRUCTIONS

---

### Basic Playback

1. Press the **Power** button to turn on the keyboard.
2. Adjust the **Volume** to a comfortable level.
3. Select a desired **Tone** by pressing the corresponding button (e.g., Piano, Guitar).
4. Begin playing on the 49 keys.

Using Rhythms

The keyboard includes 8 preset rhythms to accompany your playing.

- 1. Press a **Rhythm** button (e.g., Rock, Disco) to start the rhythm.
- 2. Adjust the rhythm tempo if available (refer to specific button labels on your unit).
- 3. Press the **Stop** button to stop the rhythm.

Recording and Playback

The record function allows you to capture your performances and listen back to them.

- 1. Press the **Record** button. The indicator light may illuminate.
- 2. Play your desired melody on the keys.
- 3. Press the **Stop** button to end the recording.
- 4. Press the **Playback** button to listen to your recorded performance.

Karaoke Mode



This image shows a mother and child engaging in a karaoke session using the Pyle PKBRD4112 keyboard and its accompanying microphone. The mother is wearing headphones, indicating a private listening or monitoring setup while singing.

Connect the microphone to the microphone input jack. You can sing along while playing the keyboard or while streaming music through the auxiliary input. Adjust the microphone volume using the dedicated control if available, or the main volume control.

MAINTENANCE

- **Cleaning:** Wipe the keyboard surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the battery regularly, even if the keyboard is not used for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound from keyboard.	Volume is too low or muted. Keyboard is not powered on.	Increase the volume. Ensure the keyboard is powered on and charged.
Microphone not working.	Microphone not properly connected. Microphone volume too low.	Ensure microphone is fully plugged into the correct jack. Adjust microphone volume.
Keyboard not charging.	USB cable faulty. Power source not providing enough power.	Try a different USB cable. Connect to a different USB port or power adapter.
Rhythm/Tone buttons not responding.	Temporary software glitch.	Turn the keyboard off and then on again to reset.

## SPECIFICATIONS

Feature	Detail
Model Name	PKBRD4112
Number of Keys	49
Preset Tones	16
Preset Rhythms	8
Connectivity	Auxiliary (3.5mm Jack), USB
Power Source	Rechargeable 3.7V Battery, Corded Electric (USB)
Built-in Speakers	Yes
Max Sound Level	98 dB
Product Dimensions (D x W x H)	2.1" x 7.1" x 2.13" (5.33cm x 18.03cm x 5.41cm)
Item Weight	2.16 pounds (0.98 kg)
Material Type	Acrylonitrile Butadiene Styrene (ABS)





 
## WARRANTY AND SUPPORT

Pyle products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Pyle website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Pyle customer service. Contact information can typically be found on the Pyle website or in the product packaging.


**Online Resources:**

- [Pyle Official Website](#)
- [Pyle Store on Amazon](#)

## Related Documents - PKBRD4112

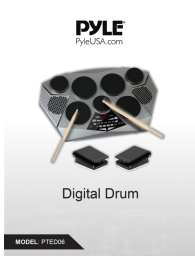	<p><a href="#">Pyle PTEDK50 Electronic Drum Kit User Manual &amp; Guide</a></p> <p>Comprehensive user guide for the Pyle PTEDK50 Electronic Drum Kit. Learn about setup, operation, features, connections, and troubleshooting for this compact, portable MIDI drum machine.</p>
	<p><a href="#">Pyle Professional Steel Tongue Drum User Guide and Care Instructions</a></p> <p>Comprehensive user guide for the Pyle Professional Steel Tongue Drum, covering how to play, safety precautions, tuning, maintenance, and troubleshooting. Includes musical scores for popular songs.</p>
	<p><a href="#">Pyle AW-DD315 Digital Drum Instruction Manual</a></p> <p>Comprehensive instruction manual for the Pyle AW-DD315 Digital Drum Kit. Covers setup, safety, panel controls, operation, input/output, voice lists, kit lists, song lists, MIDI implementation, and specifications.</p>
	<p><a href="#">Pyle PDRMKIT72 13\"</a></p> <p>A comprehensive user guide for the Pyle PDRMKIT72 13" 3-Piece Kids/Junior Drum Set, detailing contents, assembly instructions, and mute mat setup.</p>
	<p><a href="#">Pyle PTED06 Digital Drum User Manual and Specifications</a></p> <p>Comprehensive user manual for the Pyle PTED06 Digital Drum, covering safety information, features, panel descriptions, operation guides, software downloads, troubleshooting, and detailed specifications.</p>






**Pyle**  
PTEDK86  
Electronic Drum Kit  
USER GUIDE

[Pyle PTEDK86 Electronic Drum Kit User Guide](#)

Comprehensive user guide for the Pyle PTEDK86 Electronic Drum Kit, covering features, assembly, connections, operation, and troubleshooting.

Documents - Pyle – PKBRD4112



**PYLE**  
PyleUSA.com

PKBRD4113  
Digital Musical Karaoke Keyboard  
Portable Electronic Piano Keyboard with Built-in Rechargeable Battery and Wired Microphone (49 Keys)

PKBRD4912PK  
Children's Musical Karaoke Keyboard  
Portable Kids Electronic Piano Keyboard with Built-in Rechargeable Battery & Wired Microphone (49 Keys)

PKBRD6112  
Digital Musical Karaoke Keyboard  
Portable Electronic Piano Keyboard with Built-in Rechargeable Battery and Wired Microphone (61 Keys)

Digital Musical Karaoke Keyboard  
USER GUIDE

[\[pdf\]](#) User Manual Specifications

PYLE PKBRD4113 Digital Musical Karaoke Keyboard Instruction Manual 637c7962922383618adf928c manualfiles yappe in manuals |||

Digital Musical Karaoke Keyboard IMPORTANT NOTICE FOR SAFETY USE Please read below information bef ... s mode. Then play one of any 1-14 keys on the left hand side to start the chord. 9. Fingered Chord **PKBRD4112** do not have this function Press R01-R10 to choose the rhythm, and press FINGER to enter t...

lang:en score:42 filesize: 335.86 K page\_count: 12 document date: 2021-09-18



**PYLE**  
PyleUSA.com

PKBRD4112

PKBRD6111/PKBRD6111.5

PKBRD4911PK

PKBRD4112 - PKBRD6111 - PKBRD4911PK  
Digital Musical Karaoke Keyboard  
USER GUIDE

[\[pdf\]](#) User Manual Owner's Manual Instructions Guide

PKBRD4911PK Manuals Portable Kids Piano Keyboard Mic Kit Pyle USA manuals pyleusa |||

Visit Our Website SCAN ME PyleUSA.com **PKBRD4112** PKBRD6111/PKBRD6111.5 PKBRD4911PK **PKBRD4112** - PKBRD6111 - PKBRD4911PK Digital Musical Karaoke Keyboard USER GUIDE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT. RETAIN THIS OWNER S MANUAL FOR FUTURE REFERENCE. IMPORTANT NOTICE FOR SAFETY ...

lang:en score:31 filesize: 2.7 M page\_count: 16 document date: 2024-06-26



[\[pdf\]](#)


PKBRD4113 PKBRD4912PK PKBRD6112 Manuals Portable Piano Keyboard Microphone Pyle USA  
51c48591 8631 41ac 8437 6be5f0b270b1 manuals pyleusa |||

Digital Musical Karaoke Keyboard IMPORTANT NOTICE FOR SAFETY USE Please read below information before use. 1. This product DO NOT include power... s mode. Then play one of any 1-14 keys on the left hand side to start the chord. 9. Fingered Chord **PKBRD4112** do not have this function Press R01-R10 to choose the rhythm, and press FINGER to enter t...  
lang:en score:26 filesize: 1.56 M page\_count: 12 document date: 2021-04-21



[\[pdf\]](#) User Manual

 PKBRD6111 Digital Piano Kids Keyboard Portable 61 Key Learning for Beginners w Drum Pad Recording Microphone Music Sheet Stand Built in Speaker Pyle Black User Manual Pro B07V9PK3J6 B07P2DW2KW B07P19KNMD B07P1DLJH A1mEchNmWLS m media amazon images I  
**PKBRD4112** PKBRD6111 PKBRD4911PK **PKBRD4112** - PKBRD6111 - PKBRD4911PK Digital Musical Karaoke Keyboard Portable Electronic Piano Keyboard with Built-in Rechargeable Battery Wired Microphone IMPORTANT NOTICE FOR SAFETY USE Please read below information before use. 1. This product DO NOT include power...  
lang:en score:25 filesize: 1.43 M page\_count: 12 document date: 2018-11-26

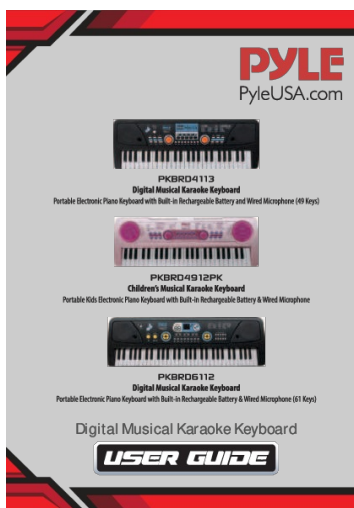

[\[pdf\]](#) Specifications

PKBRD4113 PKBRD4912PK PKBRD6112 Pyle USA 19 июн 2020 г — 0cd1329d 1456 4288 9aba 245e0b4d31c0 manuals pyleusa

Digital Musical Karaoke Keyboard IMPORTANT NOTICE FOR SAFETY USE Please read below information before use. 1. This product DO NOT include power... s mode. Then play one of any 1-14 keys on the left hand side to start the chord. 9. Fingered Chord **PKBRD4112** do not have this function Press R01-R10 to choose the rhythm, and press FINGER to enter t...  
lang:en score:24 filesize: 1.56 M page\_count: 12 document date: 2021-04-21