

Digital Basics RM

Sonic Maestro Stereo Headphones - Silver

USER MANUAL

Product Overview

The Digital Basics Sonic Maestro Stereo Headphones in Silver are designed for an immersive audio experience. Featuring a comfortable over-ear design with soft cushioned ear pads and an adjustable, foldable headband, these headphones are suitable for extended use and easy portability.



Image: Digital Basics Sonic Maestro Stereo Headphones in Silver. The image displays the headphones from a slight angle, highlighting the padded earcups and the adjustable headband. The cable is visible extending from the bottom of one earcup.

What's in the Box

Please check the package contents to ensure all items are present:

- Sonic Maestro Stereo Headphones - Silver
- Audio Cable (Wired connectivity)

Setup

1. **Unpack:** Carefully remove the headphones and the audio cable from the packaging.
2. **Connect the Audio Cable:** Insert the 3.5mm jack of the audio cable firmly into the headphone's audio port, typically located on the left earcup.
3. **Connect to Device:** Insert the other end of the 3.5mm audio cable into the headphone jack of your audio source device (e.g., smartphone, tablet, computer, music player).

The headphones are designed for wired connectivity and do not require batteries or charging for basic audio playback.

Operating Instructions

1. **Wearing the Headphones:**
Gently place the earcups over your ears, ensuring they fully cover your ears for optimal sound isolation and comfort. The soft cushioned ear pads are designed for extended wear.
2. **Adjusting the Headband:**
Adjust the headband by sliding the earcups up or down until the headphones fit comfortably and securely on your head. The headband is adjustable to accommodate various head sizes.
3. **Audio Playback:**
Once connected to your audio source, begin playing audio. The headphones will deliver immersive stereo sound. Adjust the volume directly from your connected device.
4. **Media Control (if applicable):**
If your audio cable includes an in-line remote, you may be able to control media playback (e.g., play/pause, skip tracks) and answer calls directly from the remote. Refer to your device's compatibility for specific remote functions.

Maintenance

- **Cleaning:**
Wipe the headphones with a soft, dry cloth. For ear pads, a slightly damp cloth can be used, but ensure they are completely dry before storage. Do not use harsh chemicals or abrasive cleaners.
- **Storage:**
The headphones feature a foldable design for compact storage. Fold them carefully to prevent damage. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:**
Avoid sharp bends or excessive pulling on the audio cable to prevent internal wire damage. When disconnecting, pull from the plug, not the cable itself.

Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound from headphones.	Cable not fully inserted. Device volume too low or muted. Incorrect audio output selected on device. Damaged cable or headphone jack.	Ensure both ends of the audio cable are securely plugged in. Increase volume on your audio source device. Check your device's audio settings to ensure headphones are selected as output. Try a different audio cable or test headphones with another device.
Sound is distorted or crackling.	Loose cable connection. Audio source issue. Damaged cable.	Re-seat the audio cable firmly. Try playing different audio files or from a different source. Inspect the cable for damage; replace if necessary.
Headphones are uncomfortable.	Improper headband adjustment. Earcups not positioned correctly.	Adjust the headband to fit your head size. Ensure earcups fully enclose your ears without excessive pressure.

Specifications

Model Name	Sonic Maestro
Model Number	RM
Brand	Digital Basics
Connectivity Technology	Wired
Headphones Jack	3.5 mm Jack
Earpiece Shape	Over Ear
Frequency Range	20 Hz to 20,000 Hz
Control Type	Media Control (Remote)
Special Features	Foldable
Included Components	Cable
Item Weight	1.79 pounds
UPC	886004062219

Warranty and Support

For detailed warranty information, please refer to the documentation included with your purchase or visit the official Digital Basics website. Support resources, including FAQs and contact information, are also available on the manufacturer's website.

Note: This manual provides general instructions. Specific features and performance may vary based on the connected audio device.

