

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KRUPS](#) /

› [Krups XL1008 Electric Milk Frother Instruction Manual](#)

KRUPS XL1008

Krups XL1008 Electric Milk Frother Instruction Manual

INTRODUCTION

Welcome to your new Krups XL1008 Electric Milk Frother. This appliance is designed to effortlessly heat and froth milk for a variety of beverages, enhancing your coffee and other drinks. Please read this manual carefully before first use to ensure safe and optimal operation and to familiarize yourself with all features.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons. Please read all instructions carefully before using the appliance.

- Read all instructions provided in this manual.
- Do not immerse the power base, cord, or plug in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Use only with the provided power base.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Avoid contact with moving parts.
- Do not use outdoors. This appliance is for household use only.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not overfill the frother jug past the MAX fill line to prevent overflow.
- Always ensure the lid is securely in place during operation.

PRODUCT OVERVIEW

Components

The Krups XL1008 Electric Milk Frother consists of the following main parts:

- Frother Jug with non-stick coating
- Removable Lid
- Frothing Whisk (inside the jug)
- Power Button with indicator light
- 360-degree Rotational Power Base
- MAX/MIN Fill Lines (inside the jug)



The Krups XL1008 Electric Milk Frother, ready for use in a kitchen setting, demonstrating its compact design.



Inside the frother jug, clearly marked MAX and MIN lines guide the user on appropriate milk quantities for frothing and heating.

SETUP

Before First Use

Follow these steps to prepare your milk frother for its initial use:

1. Unpack the appliance and all accessories from the packaging.
2. Wash the frother jug and lid with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the power base with a damp cloth. **Do not immerse the power base in water.**
4. Ensure the frothing whisk is correctly placed inside the jug.
5. Place the power base on a stable, flat, heat-resistant surface.
6. Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

Frothing and Heating Milk

To achieve perfectly frothed or heated milk, follow these simple steps:

1. Pour cold milk into the frother jug. Ensure the milk level is between the MIN and MAX fill lines indicated inside the jug. **Do not exceed the MAX line for frothing to prevent overflow.**
2. Place the lid securely on the jug.
3. Place the jug onto the power base. The 360-degree rotational base allows for easy placement from any angle.
4. Press the power button once to start the frothing and heating cycle. The indicator light will illuminate.
5. The frother will automatically stop when the milk reaches the optimal temperature and consistency. The indicator light will turn off.
6. Carefully remove the jug from the base. Pour the frothed milk into your cup.

Frothing Cold Milk

This appliance is also capable of frothing cold milk. Follow the same steps as above. The frother will operate without heating, providing cold frothed milk.



Operating the frother is simple with its one-touch power button, initiating the automatic frothing and heating process.



The frother jug can be placed on its power base from any angle, thanks to the convenient 360-degree rotational design.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your milk frother.

Daily Cleaning

1. After each use, unplug the appliance and allow it to cool down completely.
2. Remove the lid and the frothing whisk from the jug.
3. Wash the frother jug, lid, and whisk with warm, soapy water. The non-stick coating facilitates easy cleaning.
4. Rinse all parts thoroughly under running water.
5. Dry all parts completely before storing or next use.
6. Wipe the exterior of the power base with a damp cloth. **Never immerse the power base in water.**

Deep Cleaning

For stubborn milk residue, fill the jug with warm water and a small amount of dish soap. Let it soak for a few minutes, then clean with a soft brush or sponge. Avoid abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the non-stick coating.

TROUBLESHOOTING

If you encounter any issues with your Krups XL1008 Electric Milk Frother, please consult the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Frother does not start.	Not plugged in. / Power button not pressed. / Appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. / Press the power button firmly. / If the issue persists, contact customer support.
Milk does not froth or froths poorly.	Too much or too little milk. / Milk is too warm. / Incorrect milk type. / Whisk not properly installed.	Ensure milk is between MIN and MAX lines. / Use cold milk for best frothing results. / Some milk types (e.g., skim, oat) froth better than others. / Check if the frothing whisk is securely in place at the bottom of the jug.
Milk overflows.	Jug overfilled.	Do not fill milk above the MAX line indicated inside the jug for frothing.
Burnt milk residue at the bottom.	Insufficient cleaning. / Operating continuously without cooling.	Clean the jug immediately after each use. / Allow the frother to cool down between consecutive uses.

SPECIFICATIONS

Key technical specifications for the Krups XL1008 Electric Milk Frother:

Feature	Detail
Model Number	XL1008

Feature	Detail
Brand	KRUPS
Color	Black
Dimensions (L x W x H)	15 x 15 x 20.5 cm (5.9 x 5.9 x 8.1 inches)
Capacity	150 Milliliters
Power	500 Watts
Voltage	200 Volts
Material	Plastic
Special Feature	Automatic
Item Weight	1 Kilogram (2.2 lbs)
Country of Origin	China

WARRANTY AND SUPPORT

This Krups appliance is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or warranty claims, please contact Krups Customer Service. Contact information can typically be found on the Krups official website or in the documentation provided with your product.

Online Support: www.krups.com