

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Nintendo](#) /
- › [Pokemon Ranger: Guardian Signs \(Renewed\) Instruction Manual](#)

Nintendo Pokemon Ranger: Guardian Signs

Pokemon Ranger: Guardian Signs (Renewed)

Instruction Manual

- [Overview](#)
- [Setup](#)
- [Operating the Game](#)
- [Maintenance](#)
- [Warranty & Support](#)
- [Troubleshooting](#)
- [Specifications](#)

1. OVERVIEW

Pokemon Ranger: Guardian Signs is an action role-playing game developed by Creatures Inc. and published by Nintendo for the Nintendo DS handheld console. In this game, players assume the role of a Pokemon Ranger, tasked with protecting Pokemon and people in the Oblivia region. Unlike traditional Pokemon games, the primary method of interacting with Pokemon is through capturing them using the Capture Styler, a device controlled via the Nintendo DS stylus.

This product is a renewed game cartridge. It has been cleaned, tested, and is in nice condition, ensuring functionality comparable to a new product. Please note that renewed games typically do not include the original case or manual; only the game cartridge is provided.

2. SETUP

- 1. Prepare your Nintendo DS:** Ensure your Nintendo DS console is charged and powered off before inserting the game cartridge.
- 2. Insert the Game Cartridge:** Locate the game card slot on your Nintendo DS console. Gently push the Pokemon Ranger: Guardian Signs cartridge into the slot until it clicks into place. Ensure the label faces the same direction as the top screen of the console.
- 3. Power On:** Turn on your Nintendo DS console. The game icon should appear on the touch screen. Tap the icon to start the game.
- 4. Stylus Ready:** Have your Nintendo DS stylus ready, as it is essential for gameplay interaction.

3. OPERATING THE GAME

3.1 Basic Controls

- **Stylus:** The primary control method. Use it to move your Ranger, interact with objects, and perform Capture Styler actions.
- **D-Pad/Control Pad:** Used for movement in some menus and for precise character control.
- **A/B/X/Y Buttons:** Used for menu navigation, confirming selections, and specific in-game actions.
- **L/R Buttons:** May be used for quick menu access or camera adjustments.

3.2 Capturing Pokemon

To capture a Pokemon, you must encircle it repeatedly with your Capture Styler using the stylus on the touch screen. The number of loops required varies by Pokemon. Avoid taking damage during the capture process, as this can break your capture line.



Image: The lower screen displays the player's stylus encircling an Absol to capture it, while the upper screen shows capture progress and Pokemon details.

3.3 Ranger Signs and Symbols

A unique feature of Guardian Signs is the ability to draw specific Ranger Signs on the touch screen to summon captured Pokemon or activate special abilities. These signs are learned throughout the game and are crucial for progression and solving puzzles.

3.4 Exploration and Missions

Explore various environments within the Oblivia region, including forests, mountains, and underwater areas. The game features an expansive storyline with numerous missions that require you to utilize your Ranger skills and captured Pokemon to overcome challenges.



Image: The upper screen shows a map of Mitonga Island, while the lower screen depicts the player character riding a flying Pokemon over a dangerous cliff.

3.5 Multiplayer Missions

Pokemon Ranger: Guardian Signs includes multiplayer missions that allow up to four players to cooperate. These missions offer unique challenges and opportunities to play with friends.

4. MAINTENANCE

- **Cleaning the Cartridge:** If the game cartridge becomes dirty, gently wipe the gold connector pins with a soft, dry cloth. Avoid using liquids or abrasive materials.
- **Storage:** Store the game cartridge in a clean, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields.
- **Handling:** Always handle the cartridge by its edges to prevent touching the connector pins or damaging the label.

5. TROUBLESHOOTING

Issue	Possible Cause	Solution
Game does not start or freezes.	Improper cartridge insertion, dirty connector pins, console issue.	<ol style="list-style-type: none"> 1. Remove and re-insert the cartridge firmly. 2. Clean the cartridge connector pins (see Maintenance). 3. Ensure your Nintendo DS console is functioning correctly with other games.

Issue	Possible Cause	Solution
Stylus input is unresponsive or inaccurate.	Screen calibration issue, dirty screen, damaged stylus.	<ol style="list-style-type: none">1. Calibrate your Nintendo DS touch screen via system settings.2. Clean the touch screen with a soft, dry cloth.3. Ensure your stylus is not damaged.
Game save data is lost or corrupted.	Power interruption during saving, cartridge issue.	Always ensure the console has sufficient battery power when saving. If the issue persists, the cartridge may be faulty. Contact Amazon Renewed support.

For further hardware-related issues with your Nintendo DS console, please refer to your console's instruction manual or manufacturer's support resources.

6. SPECIFICATIONS

Product Title: Pokemon Ranger: Guardian Signs (Renewed)

Platform: Nintendo DS

Manufacturer: Nintendo

ASIN: B07P2JM86T

GTIN (UPC): 647213709575

Item Weight: 1.12 ounces

Product Dimensions: 6.26 x 5.2 x 0.67 inches

Rated: Everyone

Date First Available: February 23, 2019

7. WARRANTY & SUPPORT

As a renewed product, this game cartridge has been professionally inspected, tested, and cleaned to work and look like new. It is backed by the Amazon Renewed Guarantee, which provides a replacement or refund within 90 days of receipt if the product does not work as expected. For any issues or support inquiries regarding this renewed product, please contact Amazon Renewed customer service directly. Please note that this renewed game does not come with the original manufacturer's warranty or physical manual. All support is handled through the Amazon Renewed program.