

ASHATA ASHATAy0h5sgiwad-01

ASHATA 7-inch Portable Digital ATSC TV

INSTRUCTION MANUAL

Overview	Components	Setup	Operation	Maintenance	Troubleshooting	Specifications	Support
--------------------------	----------------------------	-----------------------	---------------------------	-----------------------------	---------------------------------	--------------------------------	-------------------------

1. Product Overview

The ASHATA Portable Digital ATSC TV is a versatile entertainment device designed for various environments, including vehicles, kitchens, outdoor settings, and camping. It features a high-resolution TFT LCD display, an ATSC digital TV tuner, FM radio, and support for multiple external media sources.

Key Features:

- 7-inch 1080P TFT LCD Display
- Integrated ATSC Digital TV Tuner
- FM Radio Functionality
- Support for AV In/Out
- Media Playback via SD/MMC Card and USB Devices
- Compatible with MKV, MOV, AVI, WMV, MP4, FLV, MPEG1-4, RMVB, 1080P video, and MP3 audio formats

2. Package Contents and Components

Carefully unpack the box and ensure all items are present. The package typically includes the following:

- 1 x ASHATA Portable Digital TV
- 1 x Base Stand
- 1 x Car Charger
- 1 x Power Adapter
- 1 x Foam Pad
- 1 x Antenna Cable
- 1 x AV Cable
- 1 x Remote Control
- 1 x Suction Cup Bracket

New and old models are shipped randomly



Figure 2.1: Typical package contents for the ASHATA Portable Digital TV.

Product Layout:



Figure 2.2: Rear view of the ASHATA Portable Digital TV, highlighting connectivity ports.

The rear panel of the TV features essential ports for connectivity and power. These include the antenna input, USB port, AV In/Out jacks, TF (Micro SD) card slot, and DC power input. Control buttons are located on the top or side of the unit for direct access to functions like power, volume, channel, and menu navigation.



Figure 2.3: The included remote control for convenient operation.

The remote control provides full functionality for the TV, allowing users to power on/off, adjust volume, change channels, navigate menus, and control media playback from a distance.

3. Setup Guide

Follow these steps to set up your ASHATA Portable Digital TV:

1. **Power Connection:** Connect the provided power adapter to the DC IN port on the TV and plug it into a standard wall outlet. For car use, connect the car charger to the DC IN port and your vehicle's 12V power socket.
2. **Antenna Connection:** Screw the included antenna into the ANT IN port on the TV. For optimal reception, extend the antenna fully and position it for the best signal.
3. **Mounting (Optional):** Attach the base stand for tabletop use or the suction cup bracket for mounting in a vehicle or on a smooth surface. Ensure the TV is securely mounted before use.
4. **Initial Power On:** Press the power button on the TV or remote control to turn on the device.

5. **First-Time Setup (Channel Scan):** Upon first use, the TV may prompt you to perform an automatic channel scan. Follow the on-screen instructions to scan for available ATSC digital TV channels. This process may take several minutes. Ensure the antenna is properly connected and positioned during the scan.

4. Operating Instructions

This section details the basic functions and features of your portable digital TV.

4.1 Basic TV Operation

- **Power On/Off:** Press the **POWER** button on the remote or the unit.
- **Volume Adjustment:** Use the **VOL+** and **VOL-** buttons.
- **Channel Change:** Use the **CH+** and **CH-** buttons to cycle through channels. You can also enter channel numbers directly using the numeric keypad on the remote.
- **Menu Access:** Press the **MENU** button to access the on-screen display (OSD) menu for settings. Use the arrow keys to navigate and **ENTER** to confirm.

4.2 Media Playback (USB/SD/MMC)

The TV supports playback of various media files from USB drives and SD/MMC cards.

1. Insert a USB drive into the **USB** port or an SD/MMC card into the **TF CARD** slot.
2. Press the **SOURCE** button on the remote or unit and select 'Media' or 'USB/Card' as the input source.
3. Navigate through your files using the arrow keys and press **ENTER** to play.

Supported Formats: MKV, MOV, AVI, WMV, MP4, FLV, MPEG1-4, RMVB (up to 1080P video), MP3 audio.

4.3 AV In/Out Functionality

The TV can connect to external devices using the AV In/Out ports.

- **AV In:** Connect an external video source (e.g., DVD player, game console) using the provided AV cable. Select 'AV' as the input source.
- **AV Out:** Connect the TV's audio/video output to another display or audio system.

MULTIPLE EXTERNAL SOURCES



Figure 4.1: The TV supports multiple external sources for expanded functionality.

4.4 FM Radio

To use the FM radio function:

1. Press the **SOURCE** button and select 'FM Radio'.
2. Use the channel up/down buttons to scan for radio stations.

5. Maintenance

Proper care and maintenance will extend the life of your ASHATA Portable Digital TV.

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior. For stubborn marks, lightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** When not in use for extended periods, store the TV in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** The TV contains a rechargeable battery. To maintain battery health, avoid fully discharging the battery frequently and recharge it periodically if stored for a long time.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked to prevent overheating.

6. Troubleshooting

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected, battery drained, power outlet issue.	Check power connections. Ensure the adapter is securely plugged in. Charge the battery. Try a different power outlet.

Problem	Possible Cause	Solution
No signal/Poor picture quality	Antenna not connected, poor antenna position, weak signal, no channel scan performed.	Ensure antenna is securely connected and fully extended. Adjust antenna position for better reception. Perform a channel scan. Check signal strength in menu.
No sound	Volume too low, mute activated, audio settings incorrect.	Increase volume. Press the MUTE button on the remote. Check audio settings in the menu.
Remote control not working	Batteries drained, obstruction, remote not pointed at sensor.	Replace remote batteries. Remove any obstructions between remote and TV. Point remote directly at the TV's IR sensor.
Cannot play media from USB/SD	Incorrect file format, corrupted file, device not properly inserted, incorrect input source.	Ensure media files are in supported formats. Reinsert USB drive/SD card. Select the correct input source (Media/USB/Card).

7. Product Specifications

Feature	Specification
Brand	ASHATA
Model Number	ASHATAy0h5sgiwad-01
Screen Size	7 Inches
Display Technology	LCD
Resolution	1080p
Aspect Ratio	16:9
Connectivity Technology	USB, AV In/Out, SD/MMC Card
Special Features	ATSC Digital TV Tuner, FM Radio
Voltage	240 Volts (via adapter)
Wattage	12 watts
Item Weight	2 pounds
Product Dimensions	10.24 x 6.5 x 1.06 inches

8. Warranty and Support

ASHATA is committed to providing quality products and customer satisfaction. If you encounter any issues with your Portable Digital TV, please contact our professional after-sales service team. We guarantee the product is brand new and will make every effort to resolve any problems you may have and provide a satisfactory answer. For support, please refer to the contact information provided with your purchase or visit the official ASHATA website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07P2Y9N9G>

More documents and user manuals: <https://manuals.plus/>