

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [StoveGuard](#) /

› [StoveGuard FPGF3077QFB Stove Top Protector User Manual](#)

StoveGuard FPGF3077QFB

StoveGuard FPGF3077QFB Stove Top Protector User Manual

Model: FPGF3077QFB | Brand: StoveGuard

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your StoveGuard FPGF3077QFB Stove Top Protector. Designed specifically for the Frigidaire Gas Range Model FPGF3077QFB, this protector helps safeguard your stove from spills, scratches, and daily wear, simplifying cleanup and extending the life of your appliance.

SETUP AND INSTALLATION

Before installation, ensure your stove top is clean, cool, and free from any debris. Confirm that your stove model number matches FPGF3077QFB and that your burner configuration aligns with the template shown below.

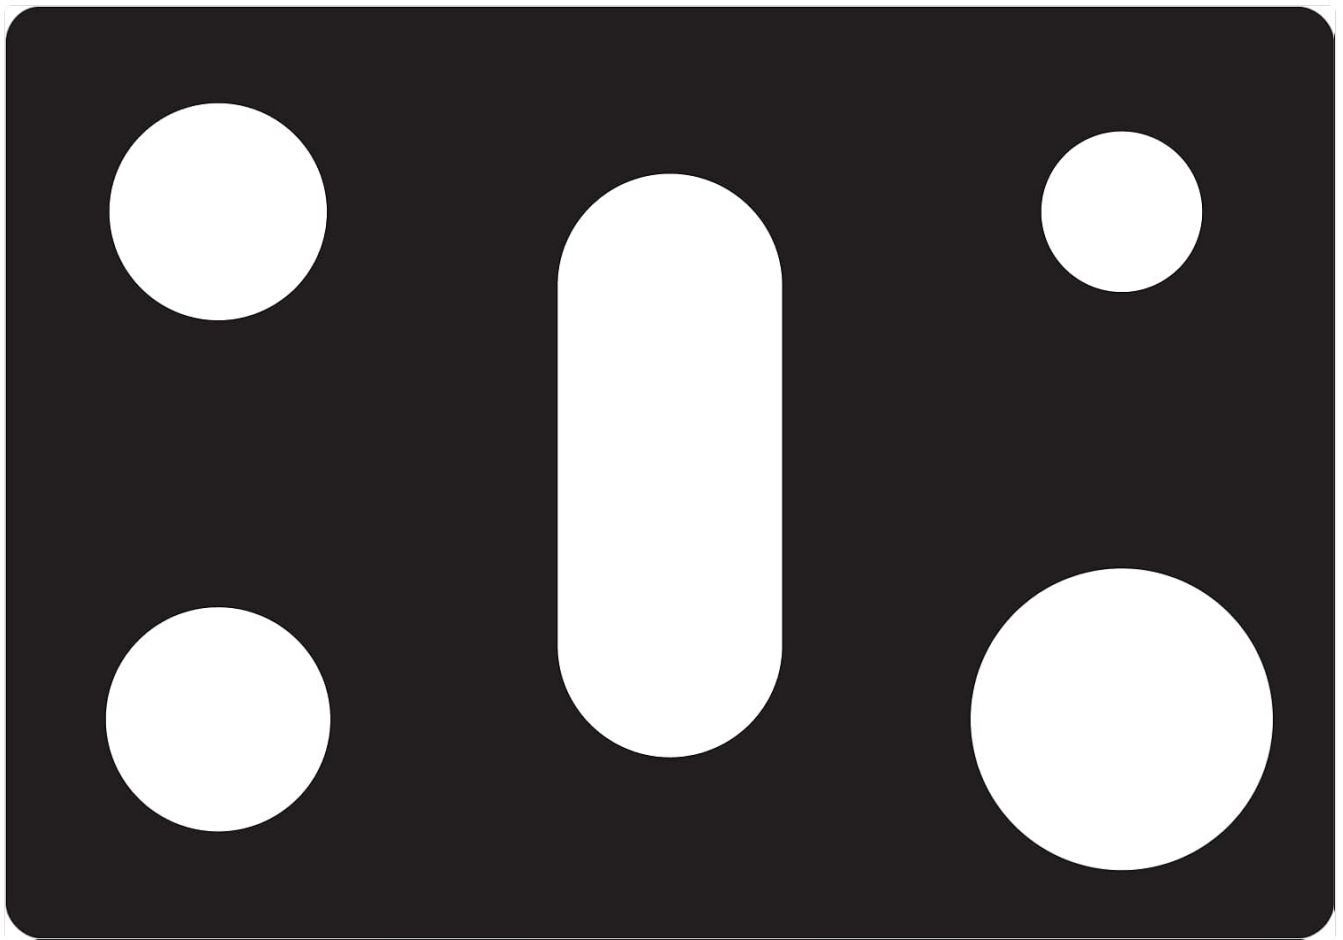


Figure 1: Burner Configuration for Model FPGF3077QFB. Ensure your stove's burner layout matches this diagram for proper fit.

1. **Prepare the Stove:** Ensure your gas stove is turned off and completely cool. Remove all grates and burner caps from the stove top.
2. **Position the Protector:** Carefully align the StoveGuard protector over your stove top, matching the cutouts with the burner bases.
3. **Lay Flat:** Gently press the protector down to ensure it lays flat and fits snugly around each burner base.
4. **Replace Components:** Once the protector is in place, re-install your burner caps and grates.



Figure 2: Proper placement of the StoveGuard protector on the stove top.



Figure 3: The StoveGuard protector seamlessly installed under the stove grates.

OPERATING AND USAGE

The StoveGuard protector is designed to remain on your stove top during cooking. It provides a protective barrier against spills, drips, and food debris, making daily cooking cleaner and easier.

- **Continuous Protection:** Leave the protector in place while cooking to catch spills and prevent them from reaching the stove's surface.
- **Heat Resistance:** The material is designed to be heat-resistant, safeguarding your stove from heat damage. However, ensure the protector is properly seated around burner bases to avoid direct flame exposure to the material.
- **Enhanced Cleanliness:** Any spills or splatters will land on the protector, not your stove, simplifying cleanup.



Figure 4: The StoveGuard protector in place during normal stove operation.



Figure 5: Detailed view of the protector's fit around a stove burner.

MAINTENANCE AND CLEANING

The StoveGuard protector is designed for easy cleaning, allowing you to quickly remove and wash away messes.

1. **Removal:** Ensure the stove is cool. Carefully lift the protector from the stove top.
2. **Initial Rinse:** Take the protector to a sink and rinse off any loose food particles or liquids under running water.
3. **Washing:** For stubborn stains or grease, use mild dish soap and a soft sponge or cloth. Gently scrub the affected areas. Avoid abrasive cleaners or harsh scrubbing pads, as these can damage the material.
4. **Drying:** Air dry the protector completely before placing it back on the stove. You can also wipe it dry with a clean cloth.



Figure 6: Removing the StoveGuard protector for cleaning.



Figure 7: The protector effectively contains spills, making cleanup simple.



Figure 8: Washing the StoveGuard protector under running water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Protector does not fit correctly.	Incorrect model number or misaligned during installation.	Verify your stove's model number matches FPGF3077QFB. Re-align the protector carefully, ensuring all cutouts match the burner bases. Refer to Figure 1.
Protector appears burned or discolored.	Direct exposure to open flame or extreme heat.	Ensure the protector is always seated properly around the burner bases, preventing direct contact with flames. While heat-resistant, prolonged direct flame exposure can cause damage. Replace if significantly damaged.
Stains are difficult to remove.	Dried-on food or grease.	Soak the protector in warm, soapy water for a few minutes before scrubbing. Use a soft sponge and mild dish soap. Avoid abrasive cleaners.
Protector becomes disfigured after washing.	Improper washing or drying methods.	Always wash by hand with mild soap and water. Avoid machine washing or drying. Allow to air dry completely on a flat surface to maintain its shape.

SPECIFICATIONS

- **Brand:** StoveGuard
- **Model Number:** FPGF3077QFB
- **Color:** Black Lite
- **Item Weight:** Approximately 9 ounces
- **Package Dimensions:** Approximately 18 x 4 x 4 inches
- **Material:** Durable, heat-resistant material
- **Compatibility:** Custom designed for Frigidaire Gas Range Model FPGF3077QFB

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your StoveGuard FPGF3077QFB Stove Top Protector, please contact the manufacturer directly. While specific warranty details are not provided in this manual, StoveGuard is committed to customer satisfaction.

You can typically find contact information for StoveGuard through their official website or the retailer from whom you purchased the product. Please have your model number (FPGF3077QFB) ready when contacting support.

Note: This product is from a small business brand. Support small businesses.

© 2024 StoveGuard. All rights reserved.

This manual is for informational purposes only. Always follow safety guidelines when operating kitchen appliances.