

Paw Patrol 6054190

Paw Patrol Chase Remote Control Police Cruiser (Model 6054190) Instruction Manual

Brand: Paw Patrol | Model: 6054190

INTRODUCTION

Welcome to the world of adventure with the Paw Patrol Chase Remote Control Police Cruiser! This manual provides essential information for setting up, operating, and maintaining your new remote control vehicle. Designed for young fans aged 3 and up, this cruiser offers simple 2-way steering for easy control and endless fun.

What's in the Box:

- 1 x Chase RC Police Cruiser
- 1 x Pup Pad Controller
- 1 x Instruction Guide



Image: The Paw Patrol Chase Remote Control Police Cruiser and its Pup Pad Controller displayed in their retail packaging.

SAFETY INFORMATION

- **Age Recommendation:** Suitable for children aged 3 years and up. Adult supervision is recommended.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Insert batteries with correct polarity. Remove exhausted batteries from the toy.
- **Choking Hazard:** Small parts may be present. Not for children under 3 years.
- **Usage:** Operate the vehicle on flat, dry surfaces. Avoid water, sand, or rough terrain.

SETUP

Battery Installation:

Batteries are not included and must be installed before use.

1. **For the Chase RC Police Cruiser:** Locate the battery compartment on the underside of the vehicle. Using a screwdriver (not included), open the compartment. Insert 3 x AAA batteries, ensuring correct polarity (+/-). Close the compartment and secure with the screw.
2. **For the Pup Pad Controller:** Locate the battery compartment on the back of the controller. Using a screwdriver (not included), open the compartment. Insert 2 x AAA batteries, ensuring correct polarity (+/-). Close the compartment and secure with the screw.

Always use fresh, high-quality batteries for optimal performance.



Image: A detailed front-side view of the blue Chase RC Police Cruiser, showcasing its design and Chase figure.

OPERATING INSTRUCTIONS

The Pup Pad Controller features simple 2-way steering, making it easy for young children to operate.

Controller Functions:

- **Forward Button (Up Arrow):** Press and hold to move the Chase RC Police Cruiser forward.

- **Backward/Turn Button (Down Arrow with Curve):** Press and hold to move the cruiser backward. While moving backward, the cruiser will automatically turn to the left, allowing for easy maneuvering.

Ensure the vehicle and controller are turned ON before attempting to operate. The remote control has a limited range; keep the controller within a reasonable distance of the vehicle for best performance.



Image: A child's hands demonstrating the use of the Pup Pad Controller, with the blue Chase RC Police Cruiser visible on a playmat.

Official Product Videos:

Your browser does not support the video tag.

Video: A closer look at the Paw Patrol Chase Remote Police Cruiser, demonstrating its features and simple controls. This video provides a visual guide to the product's functionality.

Your browser does not support the video tag.

Video: A review and demonstration of the Chase Remote Control Vehicle, highlighting its ease of use for young children.

MAINTENANCE

- **Cleaning:** Wipe the vehicle and controller with a clean, damp cloth. Do not immerse in water.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use. Remove batteries if storing for extended periods to prevent leakage.
- **Battery Replacement:** Replace all batteries at the same time when they are depleted to ensure consistent performance.

TROUBLESHOOTING

- **Vehicle Not Responding:**
 - Ensure both the vehicle and controller are turned ON.
 - Check if batteries are correctly installed and not depleted in both the vehicle and controller. Replace if necessary.
 - Ensure the vehicle and controller are within operating range.
- **Slow Movement:**
 - Batteries may be low. Replace with fresh batteries.
 - Operating surface may be too rough or uneven. Move to a smoother surface.

SPECIFICATIONS

Feature	Detail
Model Number	6054190
Product Dimensions	10 x 5.3 x 9 inches
Item Weight	1.2 pounds
Recommended Age	3 years and up
Batteries Required	2 x AAA (Controller), 3 x AAA (Vehicle) - <i>Not Included</i>



Image: A side view of the Chase RC Police Cruiser, highlighting its compact design and wheels.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Paw Patrol website. Keep your purchase receipt as proof of purchase.