

[Manuals.plus](#) /

› [Hatchimals](#) /

› Hatchimals WOW! Llalacorn Interactive Toy User Manual

Hatchimals 6046989

Hatchimals WOW! Llalacorn Interactive Toy User Manual

MODEL: 6046989

Introduction

Welcome to the world of Hatchimals WOW! This interactive Llalacorn is a unique blend of a unicorn and a llama, designed to provide an engaging and magical experience. Your Llalacorn will hatch from its re-hatchable egg and express a variety of emotions through movement and sound, growing up to 32 inches (81.3 cm) tall.

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Hatchimals WOW! Llalacorn. Please read it thoroughly before first use.

Setup

1. Unboxing Your Hatchimals WOW!

Carefully remove all contents from the packaging. The box includes one Hatchimals WOW! Llalacorn, one re-hatchable egg, one confetti fruit accessory, and this instruction guide.



Image: The Hatchimals WOW! Lilacorn egg as it appears in its retail packaging.

2. Battery Installation

Your Hatchimals WOW! Llalacorn requires 4 AA batteries, which are included. Locate the battery compartment, typically on the base of the Llalacorn or within the egg base. Use a Phillips head screwdriver to open the compartment, insert the batteries, ensuring correct polarity (+/-), and then securely close the compartment.

3. Initial Hatching Process

The Llalacorn is designed to hatch from its egg. To initiate hatching, gently tilt the egg back and forth. The Llalacorn's eyes will illuminate through the shell, indicating its readiness to hatch. It will grow taller until it pushes the top of the egg off, singing "Hatchy Birthday." This process typically takes about five minutes.



Image: A child preparing to hatch the Hatchimals WOW! egg.



Image: Two children observing the Llalacorn emerging from its egg.

Operating Your Llalacorn

Your Llalacorn is highly interactive and expresses over 250 sounds and reactions. Its personality unfolds as you play with it.

1. Understanding Llalacorn's Moods and Movements

Each time you hatch the Llalacorn, it wakes up in one of 10 different moods. Its neck can magically grow up to 32 inches (81.3 cm) tall or shrink down, reflecting its current emotion or interaction.



Image: Two Llalacorns, one pink and one purple, showcasing their design.

2. Interactive Play Modes

- **Cuddling:** Snuggle your Llalacorn, and it will coo and shrink down to a smaller size, indicating contentment.
- **Feeding:** Use the confetti fruit accessory to interact with your Llalacorn. It will chase the accessory up and down.
- **Music Play:** Play music, and your Llalacorn will grow taller, singing along to the notes.
- **Tickling:** Tickle your Llalacorn to make it giggle and bob up and down.



Image: A child embracing a pink Llalacorn, demonstrating its cuddly nature.



Image: Close-up of the confetti fruit accessory.

3. Re-Hatching

To re-hatch your Llalacorn, simply place it back into its egg. The Llalacorn can be re-hatched repeatedly, offering continuous play and discovery of its various moods.



Image: A child demonstrating how to place the Llalacorn back into its egg for re-hatching.

Maintenance

1. Cleaning Instructions

To clean your Hatchimals WOW! Llalacorn, gently wipe the surface with a damp cloth. Do not immerse the toy in water or use harsh cleaning agents, as this may damage the electronic components. Ensure the toy is completely dry before storing or playing again.

2. Storage

When not in use, store your Llalacorn in a cool, dry place, away from direct sunlight and extreme temperatures. For extended storage, it is recommended to remove the batteries to prevent leakage and potential damage to the toy.

Troubleshooting

Problem	Possible Cause	Solution
Llalacorn not hatching or responding.	Low or dead batteries; incorrect battery installation.	Replace with fresh AA batteries, ensuring correct polarity.
Llalacorn's neck not extending or retracting properly.	Obstruction in the neck mechanism; low battery power.	Check for any foreign objects. Replace batteries if needed.
Sounds are distorted or not playing.	Low battery power; internal electronic issue.	Replace batteries. If problem persists, contact customer support.

If you encounter issues not listed here, or if the suggested solutions do not resolve the problem, please refer to the support section.

Specifications

- Product Dimensions:** 8 x 8 x 12.13 inches
- Item Weight:** 3.26 pounds
- Model Number:** 6046989
- Manufacturer Recommended Age:** 5 years and up
- Batteries:** 4 AA batteries (included)
- Release Date:** November 15, 2019
- Manufacturer:** Spin Master

Warranty and Support

Warranty Information

Specific warranty details are typically provided with the product packaging or on the manufacturer's official website. Please retain your proof of purchase for any warranty claims.

Customer Support

For further assistance, technical support, or inquiries regarding your Hatchimals WOW! Llalacorn, please visit the official Hatchimals website or contact Spin Master customer service. Contact information can usually be found on the product packaging or their official website.

You can also visit the [Hatchimals Store on Amazon](#) for more information and related products.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Can the Hatchimals WOW! Llalacorn (Model 6046989) be reset without the egg, and what are the instructions for doing so?

Based on the Hatchimals WOW! Llalacorn (Model 6046989) manual, there is no specific "reset button" mentioned for the toy itself. However, you can perform a power cycle or restart the toy's behavior using the...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B07P3GHZLM>

More documents and user manuals: <https://manuals.plus/>