



[Manuals.plus](#) /

› [OGO SPORT LLC](#) /

› Ogosport OgoDisk Mini User Manual

OGO SPORT LLC SMC04

Ogosport OgoDisk Mini User Manual

Model: SMC04

INTRODUCTION

The Ogosport OgoDisk Mini is a versatile and engaging outdoor toy designed for active play. This set includes two durable disks and one soft ball, offering multiple ways to enjoy interactive games. Whether you prefer throwing it like a flying disc or using the disks as rackets for rally games similar to tennis, the OgoDisk Mini provides endless fun for users aged 6 and above.



Image: The Ogosport OgoDisk Mini set, featuring two disks in orange and teal, along with the included soft ball.

SAFETY INFORMATION

WARNING:

- This product contains small parts. Please exercise caution as there is a possibility of accidental ingestion, especially by young children.
- It is extremely dangerous to use this product on public roads or in areas with active vehicle traffic. For your safety and the safety of others, please absolutely refrain from using the OgoDisk Mini in such locations.
- Always supervise children during play.



Image: The product packaging for the OgoDisk Mini, highlighting safety warnings and product details.

PACKAGE CONTENTS

Each Ogosport OgoDisk Mini set includes the following items:

- 2 x OgoDisk Mini Disks (one orange, one teal)
- 1 x OgoSoft Ball

SETUP

The Ogosport OgoDisk Mini requires minimal setup. Simply remove all components from the packaging. The disks and ball are ready for immediate use. No assembly or batteries are required.

OPERATING INSTRUCTIONS

The OgoDisk Mini offers a variety of play options. Here are some common ways to enjoy your OgoDisk Mini:

1. Flying Disc Play

Hold the OgoDisk Mini firmly and throw it like a traditional flying disc. Experiment with different throwing techniques to achieve various flight paths and distances. The soft, flexible rim makes it easy to catch.

2. Racket Rally Games

Use the OgoDisk Mini as a racket to hit the included OgoSoft ball. This allows for dynamic rally games similar to tennis or badminton. The trampoline-like mesh surface provides excellent bounce for the ball.

- **Serving:** Gently toss the ball into the air and hit it with the OgoDisk Mini towards your partner.
- **Rallying:** Take turns hitting the ball back and forth, trying to keep it in play.
- **Bouncing:** The disk can also be used to bounce the ball directly off its surface, either to yourself or to a partner.



Image: Children enjoying active play with multiple OgoDisk Mini sets in an open field.



Image: A child demonstrating how to use the OgoDisk Mini to hit the soft ball.

MAINTENANCE AND CARE

To ensure the longevity of your Ogosport OgoDisk Mini, follow these simple care instructions:

- **Cleaning:** Wipe the disks and ball with a damp cloth to remove dirt or debris. For tougher stains, a mild soap solution can be used, followed by rinsing with clean water.
- **Drying:** Allow all components to air dry completely before storing.
- **Storage:** Store the OgoDisk Mini in a cool, dry place away from direct sunlight and extreme temperatures to prevent material degradation.
- **Avoid Sharp Objects:** Keep the disks away from sharp objects that could puncture or tear the mesh surface.

TROUBLESHOOTING

While the Ogosport OgoDisk Mini is designed for durability, here are some common issues and their solutions:

Problem	Possible Cause	Solution
Reduced bounce from disk.	Dirt or debris on mesh, or general wear.	Clean the mesh surface thoroughly. If wear is significant, consider replacing the disk.
Ball is lost or damaged.	Normal wear and tear or accidental loss.	Replacement OgoSoft balls may be available from Ogosport retailers or their official website.
Disk rim is bent or misshapen.	Excessive force or improper storage.	The EVA foam rim is designed to be flexible. It should return to its original shape. Avoid storing under heavy objects.

SPECIFICATIONS

Feature	Detail
Model Number	SMC04
Materials	EVA resin, Nylon/Polyurethane fiber, Synthetic rubber
Set Contents	2 x Disks, 1 x Ball
Product Size (approx.)	30 cm diameter, 3 cm thickness (29.5 x 32 x 7 cm packaged)
Weight (approx.)	380 g
Target Age	6 years and above
Number of Players	2
Batteries Required	No

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Ogosport OgoDisk Mini, please contact OGO SPORT LLC directly. While specific warranty details are not provided in this manual, OGO SPORT LLC is committed to customer satisfaction.

You can find more information and contact details on the official OGO SPORT LLC website or through the retailer where you purchased the product.

Note: Always refer to the official OGO SPORT LLC website for the most up-to-date product information and support contacts.

