

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Little Live Pets](#) /

› [Little Live Pets Wraptiles Vipora Cobra Instruction Manual](#)

Little Live Pets 28992

Little Live Pets Wraptiles Vipora Cobra Instruction Manual

Model: 28992 | Brand: Little Live Pets

INTRODUCTION

The Little Live Pets Wraptiles Vipora is an interactive toy designed to be worn on your wrist. This fierce best friend reacts to movement, makes sounds, and features light-up eyes that reflect its mood. It also includes a record and playback function for personalized interaction.



Image: The Little Live Pets Wraptiles Vipora Cobra toy, a blue and yellow cobra with a slap-band tail, shown in its interactive form.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years.

WHAT'S IN THE BOX

- 1x Wraptiles Vipora Cobra Toy
- 2x AAA Batteries (pre-installed)
- 1x Instruction Manual

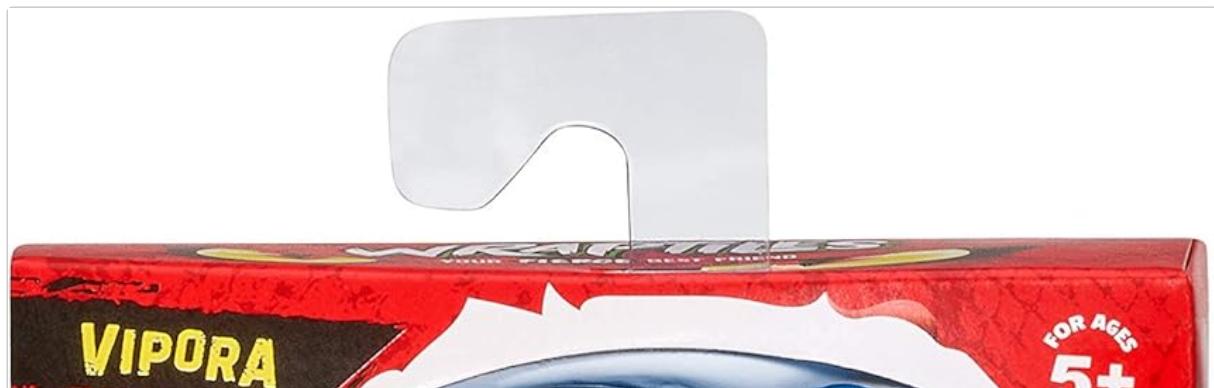




Image: The Little Live Pets Wraptiles Vipora Cobra in its retail packaging, highlighting its features.

SETUP

Battery Installation

Your Wraptiles Vipora comes with 2 AAA batteries pre-installed. To replace batteries:

1. Locate the battery compartment on the underside of the toy.

2. Using a small screwdriver, open the battery compartment.
3. Remove the old batteries and insert 2 new AAA batteries, ensuring correct polarity (+/-).
4. Securely close the battery compartment.

Power On/Off

Locate the power switch on the underside of the toy. Slide the switch to the 'ON' position to activate your Wraptiles Vipora. To conserve battery life, slide the switch to 'OFF' when not in use.



Image: The underside of the Wraptiles Vipora toy, showing the battery compartment and the power switch.

Wearing Your Wraptile

The Wraptiles Vipora features a slap-band tail. To wear it, straighten the tail and gently slap it onto your wrist. The tail will curl around your wrist, securing the toy in place. Adjust for comfort.



Image: A child wearing the Little Live Pets Wraptiles Vipora on their wrist, demonstrating how the toy is worn.

Sounds and Reactions

Your Wraptiles Vipora has over 25 sounds and reactions. Its eyes will light up and change color to reflect its mood:

- **Green Eyes:** Happy/Content
- **Red Eyes:** Angry/Aggressive
- **Orange Eyes:** Grumpy/Dizzy

The toy will make different sounds corresponding to its mood and interactions.



Image: A close-up view of the Wraptiles Vipora's face, showing its detailed features and glowing eyes.

Record and Playback

To record a message:

1. Locate the record button (often on the side or back of the head).
2. Press and hold the record button. Speak clearly into the toy's mouth.
3. Release the button to end recording.

To play back your recorded message, press the record button quickly. The Wraptiles Vipora will repeat your message in its unique voice.

Moods and Interactions

- **Shaking:** Shake your Wraptile to make it dizzy. Excessive shaking may make it angry.
- **Upside Down:** Hang your Wraptile upside down from your wrist, and it will relax and go to sleep.
- **Interacting with other Wraptiles:** Place your Wraptiles Vipora near another Wraptile, and they will interact by chatting, laughing, and arguing in their own language.



Image: Two Little Live Pets Wraptiles toys, one red and one blue, shown interacting with each other.

MAINTENANCE

Cleaning

To clean your Wraptiles Vipora, wipe it gently with a damp cloth. Do not submerge the toy in water or use harsh cleaning agents, as this may damage the electronic components.

Battery Replacement

Refer to the 'Setup' section for detailed instructions on replacing the AAA batteries.

TROUBLESHOOTING

- No Power/No Sound:** Ensure the power switch is in the 'ON' position. Check if the batteries are correctly installed and not depleted. Replace batteries if necessary.
- Recording Not Working:** Make sure you are pressing and holding the record button for the duration of your message. Speak clearly and close to the toy's mouth.

- **Eyes Not Lighting Up:** This may indicate low battery power. Replace batteries.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.92 x 12.44 x 2.22 inches
Item Weight	5.3 ounces
Item Model Number	28992
Manufacturer Recommended Age	5 - 15 years
Batteries	2 AAA batteries (included)
Manufacturer	Moose Toys

WARRANTY AND SUPPORT

For warranty information or product support, please contact Moose Toys directly. Refer to the product packaging or their official website for contact details.