

ZdalaMit AKB73775801

ZdalaMit AKB73775801 Replacement Remote Control User Manual

For LG Blu-ray Home Theater Systems

INTRODUCTION

This manual provides instructions for the ZdalaMit AKB73775801 replacement remote control, designed for use with various LG Blu-ray Home Theater systems. This remote offers direct functionality without the need for programming or pairing. Simply install batteries, and it is ready for use.

Compatible LG Home Theater Models:

- BH5140, BH5140S, S54S1-S, S54T1-W
- BH5440P, S54T1-S, S54T1-C
- BH5540T, BH5140SF0
- LHB655, S65T1-S, S65T1-C, S65T1-W
- LHB655FB, LHB675, LHB675FB, S65T3-S
- AKB73775821, AKB73775813
- BH6320H, BH6420P, BH6520T, BH6620P, BH6620S, BH6620T
- BH6220C, BH6320C, BH6220S

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

Initial Use

No programming or pairing is required for this replacement remote. Once the batteries are correctly installed, the remote is ready for immediate use with your compatible LG Blu-ray Home Theater system.

OPERATING INSTRUCTIONS

Point the remote control directly at your LG Blu-ray Home Theater system's infrared receiver. Ensure there are no obstructions between the remote and the device.



Image: Front view of the AKB73775801 replacement remote control, displaying the layout of all function buttons.

Key Functions Overview

- **POWER:** Turns the home theater system on or off.
- **OPEN/CLOSE:** Opens or closes the disc tray.
- **SUBTITLE:** Selects subtitle language.
- **INFO/MENU:** Displays information or accesses the system menu.
- **HOME:** Returns to the home screen.
- **DISC MENU:** Accesses the disc menu.
- **SLEEP:** Sets the sleep timer.
- **Navigation Pad (Up, Down, Left, Right, ENTER):** Navigates through menus and confirms selections.
- **BACK:** Returns to the previous screen or menu.
- **TITLE/POPUP:** Accesses the title menu or pop-up menu.
- **PLAY, PAUSE/STEP, STOP:** Controls media playback.
- **SKIP (Forward/Backward):** Skips tracks or chapters.
- **SCAN (Forward/Backward):** Fast forwards or rewinds media.
- **VOL (+/-):** Adjusts the master volume.
- **MUTE:** Mutes or unmutes the audio.

- **SPEAKER LEVEL:** Adjusts individual speaker levels.
- **SOUND EFFECT:** Cycles through sound modes.
- **OPTICAL/TV SOUND:** Switches audio input.
- **Colored Buttons (R, G, Y, B):** Functionality varies by menu or disc content.
- **Number Pad (0-9):** Direct input for track numbers, channels, or menu options.
- **REPEAT:** Repeats playback.
- **AV/INPUT:** Selects audio/video input sources.
- **PR/CH (Up/Down):** Changes channels (if applicable).
- **TV VOL (+/-):** Adjusts TV volume (if programmed or compatible).

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries. Do not mix old and new batteries or different battery types.

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh 1.5V AAA alkaline batteries.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the infrared sensor on your LG Home Theater system.
- **Distance:** Ensure you are within the effective operating range (approximately 33 feet or 10 meters) of the home theater system.
- **Infrared Interference:** Bright light sources, such as direct sunlight or certain types of fluorescent lighting, can interfere with the remote's infrared signal. Try operating the remote in a different lighting condition.

Limited Range or Intermittent Operation

- **Weak Batteries:** Replace batteries even if the remote appears to be partially working. Low battery power can reduce range and reliability.
- **Obstructions:** Ensure no objects are blocking the remote's signal path to the home theater system.
- **Remote Sensor:** Check if the infrared sensor on your home theater system is clean and

unobstructed.

SPECIFICATIONS

Model Name	AKB73775801
Brand	ZdalaMit
Compatible Devices	LG Blu-ray Home Theater Systems
Connectivity Technology	Infrared
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Maximum Range	33 Feet (approx. 10 meters)
Color	Black
Item Weight	40 Grams
Item Dimensions (L x W x H)	9.13" x 1.99" x 0.55"
Button Quantity	18
Special Feature	Ergonomic design

WARRANTY INFORMATION

This ZdalaMit remote control comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

SUPPORT

If you encounter any issues or have questions regarding your ZdalaMit AKB73775801 replacement remote control that are not addressed in this manual, please contact the retailer or manufacturer's customer support for assistance. Provide your product model number and a detailed description of the issue to facilitate a quicker resolution.