

Gastroback 42711

Gastroback Grind & Brew Pro Semi-Automatic Filter Coffee Machine

MODEL: 42711


INTRODUCTION

Thank you for choosing the Gastroback Grind & Brew Pro Semi-Automatic Filter Coffee Machine. This appliance is designed to provide you with freshly ground and brewed coffee, offering convenience and customizable options. It features an integrated conical grinder with 8 grind levels, a 1.5-liter glass carafe for up to 12 cups, and a 250g bean reservoir. The machine also allows for the use of pre-ground coffee, includes an LCD display, a 24-hour programmable timer, and a keep-warm function with automatic shut-off. Please read this manual carefully before first use to ensure proper operation and maintenance.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The water tank flap must always be closed as a preventive measure.



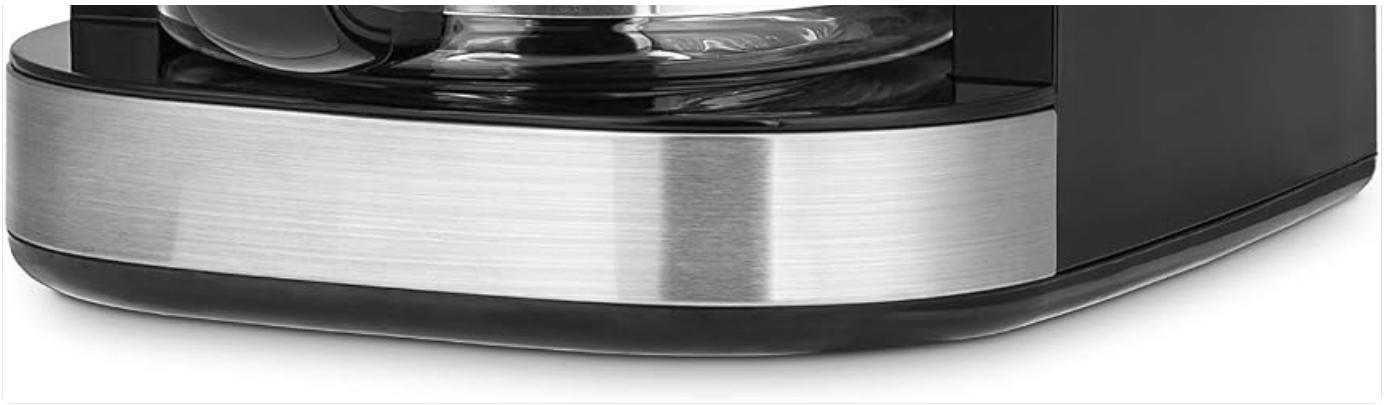

Front view of the Gastroback Grind & Brew Pro Semi-Automatic Filter Coffee Machine, showing the integrated bean hopper, control panel with LCD display, swing-out filter holder, glass carafe, and water level indicator on the side.

Components:

- **Coffee Bean Hopper:** Located at the top, for whole coffee beans.
- **Integrated Conical Grinder:** Grinds beans directly before brewing.
- **Control Panel with LCD Display:** For setting time, programming, and selecting brewing options.
- **Water Tank:** With a clear water level indicator for easy filling.
- **Swing-out Filter Holder:** Holds the permanent filter or disposable paper filter (size 1x4).
- **Glass Carafe:** 1.5-liter capacity, suitable for up to 12 cups.
- **Heating Plate:** Keeps the brewed coffee warm.
- **Strength Selector:** Allows choice of mild, medium, or strong coffee.

SETUP

1. **Unpacking:** Carefully remove the coffee machine from its packaging. Retain packaging for future transport or storage.
2. **First Cleaning:** Before first use, clean all removable parts (carafe, filter holder, permanent filter) with warm soapy water. Wipe the exterior of the machine with a damp cloth.
3. **Positioning:** Place the coffee machine on a stable, level, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet (230 Volts).
5. **Initial Rinse Cycle:** Fill the water tank to the MAX level. Do not add coffee. Run a full brewing cycle to rinse the internal components. Discard the water. Repeat this process once or twice.

OPERATING INSTRUCTIONS

Brewing Coffee from Whole Beans:

1. **Fill Water Tank:** Open the water tank flap and fill with fresh, cold water up to the desired number of cups (max 12 cups). Close the flap securely.
2. **Add Coffee Beans:** Open the lid of the bean hopper and fill with whole coffee beans (max 250g). Close the lid.
3. **Select Grind Level:** Adjust the conical grinder setting (8 levels available) according to your preference. Finer grind for stronger coffee, coarser for milder.
4. **Select Coffee Strength:** Use the strength selector on the control panel to choose mild, medium, or strong.
5. **Place Carafe:** Ensure the glass carafe is correctly placed on the heating plate.

6. **Start Brewing:** Press the START button. The machine will automatically grind the beans and begin the brewing process.

Brewing Coffee from Ground Coffee:

1. Follow steps 1 and 5 from 'Brewing Coffee from Whole Beans'.
2. **Add Ground Coffee:** Swing out the filter holder. Place the permanent filter (or a 1x4 paper filter) inside. Add the desired amount of pre-ground coffee into the filter. Swing the filter holder back into place.
3. **Select Ground Coffee Mode:** On the control panel, select the mode for ground coffee. This bypasses the grinder.
4. **Start Brewing:** Press the START button.

Programmable Timer Function:

The 24-hour programmable timer allows you to set a specific time for the machine to start brewing automatically.

1. Set the current time on the LCD display using the clock buttons.
2. Prepare the machine with water and coffee (beans or ground) as described above.
3. Press the 'PROG' button and set your desired brewing start time.
4. Activate the timer function. The machine will start brewing at the set time.

Keep Warm Function:

After brewing, the heating plate will automatically activate to keep the coffee warm for approximately 30 minutes. The machine will then automatically shut off for safety and energy saving.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your coffee machine.

Daily Cleaning:

- Always unplug the machine before cleaning and allow it to cool down.
- Remove the glass carafe, filter holder, and permanent filter. Wash them with warm soapy water and rinse thoroughly. They are generally dishwasher safe, but hand washing is recommended for longevity.
- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Clean the heating plate with a damp cloth. Do not use sharp objects to remove coffee stains.

Cleaning the Grinder:

Periodically clean the integrated grinder to prevent clogging and ensure consistent grinding. Refer to the specific instructions in your full manual for detailed steps on disassembling and cleaning the conical burrs.

Descaling:

Depending on water hardness, mineral deposits can build up in your machine, affecting performance and coffee taste. Descale your machine regularly (e.g., every 2-3 months or as needed).

- Use a commercial descaling solution suitable for coffee machines or a mixture of white vinegar and water (1:2 ratio).
- Fill the water tank with the descaling solution.
- Place the empty carafe on the heating plate.
- Run a brewing cycle without coffee.
- After the cycle, discard the solution and run 2-3 cycles with fresh water to rinse thoroughly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No water in tank; Machine not plugged in; Timer set incorrectly.	Fill water tank; Check power connection; Adjust timer settings.
Coffee is too weak/strong.	Incorrect coffee-to-water ratio; Grind setting too coarse/fine; Strength setting.	Adjust coffee amount; Change grind level; Select desired strength.
Grinder is not working.	Bean hopper empty; Grinder clogged; Incorrect mode selected.	Fill bean hopper; Clean grinder (refer to manual); Ensure 'whole bean' mode is selected.
Water overflows from filter holder.	Too much coffee; Filter clogged; Carafe not placed correctly.	Reduce coffee amount; Clean filter; Ensure carafe is fully seated.
Machine leaks.	Water tank flap not closed; Component not seated correctly.	Ensure water tank flap is closed; Check all removable parts are correctly installed.

SPECIFICATIONS

Feature	Detail
Brand	GASTROBACK
Model Number	42711
Color	Black, Stainless Steel
Product Dimensions (L x W x H)	31.4 x 21.3 x 43 cm
Item Weight	4.5 Kilograms
Capacity	12 Cups (1.5 Liters)
Power	900 Watts
Voltage	230 Volts
Material	Glass Carafe
Grinding Levels	8
Display Type	LCD
Coffee Input Type	Coffee beans, Ground coffee
Special Features	Adjustable coffee strength, Adjustable grinder settings, Integrated grinder, Keep warm function, Programmable
Filter Type	Reusable (also compatible with 1x4 paper filters)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Gastroback website. Keep your proof of purchase for any warranty claims.

© 2023 Gastroback. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question