

[Manuals.plus](#) /

> [Playmobil](#) /

> PLAYMOBIL Large Dollhouse Instruction Manual

Playmobil 70205

PLAYMOBIL Large Dollhouse Instruction Manual

Model: 70205 | Brand: Playmobil

INTRODUCTION

Welcome to your new home at the PLAYMOBIL Large Dollhouse. This comprehensive manual provides detailed instructions for assembly, operation, and maintenance of your dollhouse, ensuring a delightful and imaginative play experience. The dollhouse features a three-level design with spacious rooms, a spiral staircase, and a rooftop terrace. It includes a functioning doorbell and customizable elements like removable stickers and window boxes.





Figure 1: The fully assembled PLAYMOBIL Large Dollhouse, showcasing its three levels, spiral staircase, and various play areas.

SAFETY INFORMATION

Please read all safety warnings carefully before assembly and use. This product contains small parts which may pose a choking hazard. Not suitable for children under 3 years of age. Recommended for ages four years and up.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. The PLAYMOBIL Large Dollhouse package includes:

- Three-level dollhouse structure
- Two PLAYMOBIL figures
- Mailbox
- Window boxes with flowers
- Various other accessories (as depicted in the assembly instructions)
- Removable stickers



Figure 2: The product packaging for the PLAYMOBIL Large Dollhouse, indicating contents and age recommendation.

SETUP AND ASSEMBLY

Assembly of the Large Dollhouse requires careful attention to detail. It is recommended to assemble the dollhouse on a flat, stable surface. Follow the included pictorial instructions for step-by-step guidance. Some parts, particularly connectors, may require firm pressure to snap into place securely.

1. Unpack all components and organize them by type.
2. Begin by assembling the base structure of the dollhouse.
3. Attach the walls and floor sections for the first level, ensuring all connections are secure.
4. Install the spiral staircase, connecting it between the levels.
5. Proceed with the second and third levels, including the rooftop terrace.
6. Attach decorative elements such as window boxes and the mailbox.
7. Apply removable stickers to customize the interior and exterior as desired.
8. Insert 2 x AAA batteries into the designated compartment for the functioning doorbell (batteries not included).



Figure 3: The internal structure of the dollhouse, illustrating the multi-level design and the spiral staircase before furniture is added.



Figure 4: An overview of the dollhouse's interior layout and various accessories, providing a visual guide for assembly and play.

OPERATING INSTRUCTIONS AND FEATURES

The PLAYMOBIL Large Dollhouse offers interactive features for enhanced play.

- **Functioning Doorbell:** Press the button on the mailbox located near the front door to activate the doorbell sound. Ensure 2 x AAA batteries are correctly installed for this feature to work.
- **Spacious Rooms:** The three-level design provides ample space for arranging furniture and figures. Explore the various rooms on each floor, including the second-floor living areas and the rooftop terrace.
- **Spiral Staircase:** Figures can ascend and descend between the first and second floors using the functional spiral staircase.
- **Customization:** Utilize the included removable stickers to personalize the dollhouse's appearance. Window boxes can be filled with flowers for added detail.

playmobil

2,95 m - 2,95 cm

70205

92 Teile - Pieces - Pièces
 592

RC3 - LHC3 - AAA
 2 x 1,5V

Hinweis für Eltern: Aufbauzeit ca. 90 Minuten
Important for Parents: Time required for assembly: about 90 minutes
Info, parents: Demande de temps pour l'assemblage: environ 90 minutes
Importante para los padres: Tiempo de montaje aprox. 90 minutos
Importante para os pais: Tempo de montagem aprox. 90 minutos
Avvertenza per i genitori: Tempo di assemblaggio 90 minuti circa
Adres van de ouders: Opbouwijd ongeveer 90 minuten
Προσοχή για τους γονείς: χρόνος συναρμολόγησης περί. 90 λεπτά
Wskazówka dla rodziców: czas montażu ok. 90 minut
提醒父母的注意: 組裝時間約90分鐘

ACHTUNG! Ausstattungsvorschlag, Ergänzende Einrichtungsteile in Artikel 70205 nicht enthalten

ATTENTION! Room sets and additional figures not included in item 70205

ATTENTION! Les meubles et les figurines supplémentaires ne sont pas inclus dans la boîte 70205

¡ADVERTENCIA! Los sets de habitaciones y figuras adicionales no están incluidos en el producto 70205

ATENÇÃO! Os conjuntos de quartos e figuras adicionais não estão incluídos no artigo 70205.

ATTENZIONE: arredi e personaggi addizionali non sono inclusi nel codice 70205

ORIGELI: Kostasais en otro PLAYMOBIL: speilfiguren zgh nist. Inbegräen in artikel 70205

ΠΡΟΣΟΧΗ: Η επίπλωση και οι επιπλέον φιγούρες δεν περιλαμβάνονται στον κωδ. 70205

UWAGA! Propozycja wyposażenia nie jest zawarty w artykule 70205

70206 KÜCHE
 70207 WOHNZIMMER
 70208 SCHLAF-/NÄH-ZIMMER
 70209 JUGENDZIMMER
 70210 BABYZIMMER
 70211 BADEZIMMER
 70212 GEBURTSTAGSPARTY

Figure 5: A PLAYMOBIL figure demonstrating the use of the functioning doorbell by pressing the button on the mailbox.



Figure 6: A PLAYMOBIL figure standing at the entrance of the dollhouse, highlighting the detailed front door and surrounding elements.

MAINTENANCE

To ensure the longevity of your PLAYMOBIL Large Dollhouse, follow these maintenance guidelines:

- **Cleaning:** Wipe down the dollhouse and its accessories with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the plastic.
- **Storage:** Store the dollhouse in a cool, dry place away from direct sunlight to prevent fading and material degradation.
- **Battery Replacement:** If the doorbell sound becomes faint or stops working, replace the 2 x AAA batteries. Ensure correct polarity when inserting new batteries.
- **Part Integrity:** Periodically check all connections and parts to ensure they remain securely attached. Re-snap any loose components into place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Doorbell not working.	Batteries are dead or incorrectly installed.	Replace the 2 x AAA batteries, ensuring correct polarity (+/-).

Problem	Possible Cause	Solution
Parts do not fit together.	Incorrect orientation or insufficient force during assembly.	Refer to the assembly instructions and apply firm, even pressure to snap parts into place. Ensure correct alignment.
Dollhouse feels unstable.	Connections are not fully secured.	Check all connection points, especially the red connectors, and press firmly until they click into place.

SPECIFICATIONS

Model Number: 70205

Product Dimensions (LxWxH): 26.77 x 14.17 x 24.4 inches

Item Weight: 10.58 pounds

Recommended Age: 4 - 9 years

Batteries Required: 2 x AAA (not included)

Manufacturer: PLAYMOBIL

Release Date: August 1, 2020

WARRANTY AND SUPPORT

For information regarding warranty coverage or to obtain support for your PLAYMOBIL Large Dollhouse, please refer to the contact information provided on the product packaging or visit the official Playmobil website. Keep your proof of purchase for any warranty claims.