

[Manuals.plus](#) /

> [Siku](#) /

> Siku 5402 Airliner with Accessories Instruction Manual

Siku 5402

Siku 5402 Airliner with Accessories Instruction Manual

Model: 5402 | Brand: Siku

INTRODUCTION

This manual provides essential information for the safe and proper use of your Siku 5402 Airliner with Accessories. Please read these instructions carefully before operating the model and retain them for future reference.

The Siku 5402 Airliner is a detailed model aircraft designed for interactive play. It features a large airliner with two engines, functional elements, and accompanying ground support vehicles and figures to enhance the play experience.

INCLUDED COMPONENTS

The Siku 5402 Airliner package includes the following items:

- 1 x Siku 5402 Airliner Model (Light Blue, Plastic)
- 1 x Follow-me Vehicle
- 1 x Aircraft Tug with Tow Bar
- 1 x Aeroplane Instructor Figure
- Passenger Figures (various colors)
- 3 x LR41 Batteries (pre-installed or included separately)



Image: Product packaging displaying the Siku 5402 Airliner and its included accessories.

SETUP

1. **Unboxing:** Carefully remove all components from the packaging. Ensure all listed items are present.
2. **Battery Installation (if not pre-installed):** The airliner requires 3 LR41 batteries for the landing light function. If not already installed, locate the battery compartment (typically on the underside of the aircraft) and insert the batteries, observing correct polarity. The batteries are included.
3. **Passenger Seating:** To seat the passenger figures, lift the front flap on the roof of the airliner. Place the four passenger figures into their designated seats. Close the flap securely.



Image: View of the airliner's interior with passenger figures in their seats.

4. **Cargo Loading:** The rear flap of the airliner opens to reveal a cargo area. This space is suitable for transporting a small accessory car (not included).
5. **Ground Vehicles:** Position the Follow-me vehicle and the Aircraft Tug with Tow Bar as desired for ground operations. The aircraft tug can be connected to the front landing gear of the airliner using the tow bar.



Image: The Siku Airliner being towed by the aircraft tug.



Image: The Follow-me vehicle and ground crew figure.

OPERATING INSTRUCTIONS

The Siku 5402 Airliner is designed for manual operation, allowing for imaginative play scenarios.

1. **Taxiing:** Use the aircraft tug to maneuver the airliner on the ground. The tug connects to the front landing gear.
2. **Take-off:** As the airliner "speeds up" for take-off, the landing gear can be manually folded in for flight.
3. **Flight:** The model is designed to be held and "flown" manually.
4. **Landing:** When approaching for "landing," manually fold out the landing gear. Activate the landing light by pressing the designated button (if applicable, usually near the landing gear or cockpit). The LED landing light will automatically switch off after approximately ten minutes to conserve battery life.
5. **Parking:** After landing, the Follow-me vehicle can guide the aircraft to its parking position.

MAINTENANCE

- **Cleaning:** Wipe the model and accessories with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the model in a clean, dry place away from direct sunlight and extreme temperatures to prevent material degradation.
- **Battery Replacement:** When the landing light dims or stops working, replace the 3 LR41 batteries. Ensure proper polarity during installation.

TROUBLESHOOTING

Landing Light Not Working:

- Check if the batteries are correctly installed with the correct polarity.
- Replace the 3 LR41 batteries with new ones.
- Ensure the light activation button (if present) is being pressed firmly.

Moving Parts (Landing Gear, Flaps) Are Stiff:

- Ensure no debris is obstructing the movement.

- Apply gentle, even pressure when operating. Avoid forcing parts.

SPECIFICATIONS

Model Number	5402
Brand	Siku
Material Type	Plastic
Color	Light Blue
Item Dimensions (L x W x H)	15.16 x 14.29 x 5.08 inches (approximately)
Item Weight	410 Grams (approximately 0.90 lb)
Power Source	Battery Powered (for landing light)
Battery Type	3 x LR41 Alkaline batteries (included)
Operation Mode	Manual
Manufacturer Minimum Age	36 Months
Assembly Required	No

WARRANTY AND SUPPORT

Specific warranty and support information for the Siku 5402 Airliner with Accessories was not provided in the product details. For warranty claims, technical assistance, or further inquiries, please refer to the manufacturer's official website or contact the retailer from whom the product was purchased.

Manufacturer: Siku

SAFETY INFORMATION

- This product is suitable for children aged 36 months and older.
- Small parts may be present; adult supervision is recommended for younger children.
- Do not expose batteries to excessive heat or dispose of them in fire.
- Always dispose of used batteries responsibly according to local regulations.
- Avoid throwing or dropping the model to prevent damage.