

Becker EC141-II

Becker Centronic EasyControl EC141-II Wireless Remote Control User Manual

1. INTRODUCTION

The Becker Centronic EasyControl EC141-II is a compact and user-friendly 1-channel handheld transmitter designed for convenient control of compatible Becker automation systems. This wireless remote operates on an 868 MHz radio frequency, ensuring reliable communication with your Becker O-tronic 6, BOM 650C, and BOM 850C garage door motors. Its clear design and simple handling provide enhanced comfort, allowing you to operate your systems effortlessly.

Key features include:

- 1-channel operation with LED display for status indication.
- Ability to program two selectable intermediate positions for precise control.
- Supports simple, group, or central control functionalities.
- Equipped with a durable metal ring for easy attachment to a key chain.
- Fully compatible with Centronic 868.3 MHz systems.

2. PRODUCT OVERVIEW



Figure 1: The Becker Centronic EasyControl EC141-II wireless remote control. This image shows the compact design of the remote, featuring a single control button and an LED indicator, with a metal ring for key attachment.

The EC141-II remote control is designed for intuitive use. It typically features a single button for controlling one channel, allowing for sequential operation (e.g., open, stop, close). The integrated LED provides visual feedback on command transmission and battery status. Its robust construction and compact size make it

ideal for everyday use.

3. SETUP

3.1 Battery Installation

The Becker EC141-II remote control requires a battery for operation (battery not included). To install or replace the battery:

1. Carefully open the remote control casing. Refer to the markings on the remote for the battery compartment access point, usually a small latch or screw.
2. Insert the new battery, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Close the casing securely.

Test the remote by pressing a button; the LED should illuminate.

3.2 Programming the Remote Control

The EC141-II remote control must be paired with your Becker automation system (e.g., garage door motor BOM 650C, BOM 850C, or O-tronic 6) to function. The programming process typically involves steps performed on the receiver unit (motor) rather than the remote itself. Please refer to the instruction manual of your specific Becker motor or receiver for detailed pairing instructions. Generally, the process involves:

1. Activating the programming mode on your Becker motor/receiver (often by pressing a 'P' or 'Learn' button).
2. Pressing the desired button on your EC141-II remote control within a specified timeframe.
3. Confirming successful pairing, usually indicated by a light or sound from the receiver.

The EC141-II allows for ultra-easy programming once the receiver is in learning mode.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

Once programmed, the EC141-II remote control operates your connected Becker system with a single button press:

- **First Press:** Initiates the movement (e.g., opens the garage door).
- **Second Press (during movement):** Stops the movement.
- **Third Press (after stop):** Reverses the movement (e.g., closes the garage door).

The LED indicator will light up when a command is transmitted.

4.2 Programming Intermediate Positions

The EC141-II allows you to program up to two intermediate positions for your garage door or other connected systems. This feature enables you to stop the system at a preferred partial open/close position.

1. Move the system (e.g., garage door) to the desired intermediate position using the remote.
2. Refer to your motor's instruction manual for specific steps to save this intermediate position. This usually involves a combination of button presses on the remote and/or the motor unit.
3. Once saved, a quick press of the remote button may activate this intermediate position, depending on your motor's configuration.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or wet cloths, as these can damage the casing or internal components.

5.2 Battery Replacement

When the LED indicator on your remote control becomes dim or fails to light up, or if the remote's range decreases significantly, it is likely time to replace the battery. Follow the battery installation steps outlined in Section 3.1. Always use the recommended battery type to ensure optimal performance and avoid damage.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check the battery. Replace if necessary.
 - Ensure the remote is within range of the receiver.
 - Verify that the remote is correctly programmed to your Becker system. Refer to your motor's manual for re-pairing instructions.
- **Limited range:**
 - Replace the battery.
 - Check for sources of interference (e.g., other wireless devices, large metal objects) between the remote and the receiver.
- **System not responding to commands:**
 - Confirm that your Becker motor (BOM 650C, BOM 850C, O-tronic 6) operates on the 868 MHz frequency. This remote is not compatible with other frequencies.
 - Ensure the motor unit has power and is functioning correctly.

7. SPECIFICATIONS

Feature	Detail
Model	EC141-II
Manufacturer	Becker-Antriebe GmbH
Product Type	Single-channel handheld transmitter
Frequency	868.3 MHz (Centronic compatible)
Channels	1
Battery Required	Yes
Battery Included	No
Compatibility	Becker O-tronic 6, BOM 650C, BOM 850C garage door motors

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or spare parts availability for your Becker Centronic EasyControl EC141-II remote control, please contact Becker-Antriebe GmbH directly or refer to their official website. Keep your purchase receipt as proof of purchase for any warranty claims.