

UBay HTR-A18M

UBay HTR-A18M Remote Control Instruction Manual

For Haier LCD LED TVs

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your UBay HTR-A18M remote control. This remote is designed as a direct replacement for various Haier LCD LED TV models and requires no programming or pairing. Simply install batteries, and it is ready for use.



Image 1.1: Front view of the UBay HTR-A18M remote control.

2. SETUP

2.1 Battery Installation

The UBay HTR-A18M remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two new 1.5V AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 2.1: Back view of the remote control with the battery compartment.

Note: Batteries are not included with the remote control. Always use new batteries for optimal performance.

3. OPERATION

Once batteries are installed, the UBay HTR-A18M remote control is ready for immediate use with compatible Haier LCD LED TVs. No programming or pairing is required.

3.1 Basic Functions

- **Power Button (⏻):** Turns the TV on or off.
- **Input Button:** Selects the input source (e.g., HDMI, AV).
- **Number Pad (0-9):** Directly enters channel numbers.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the television channel.
- **MUTE:** Mutes or unmutes the TV audio.
- **MENU:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **BACK/EXIT:** Returns to the previous screen or exits a menu.
- **SAP/AUDIO:** Selects audio language or SAP (Secondary Audio Program).
- **SLEEP:** Sets the TV's sleep timer.
- **WIDE/PICTURE:** Adjusts the screen aspect ratio or picture mode.
- **CH.LIST:** Displays the channel list.
- **FAVORITE:** Accesses favorite channels.
- **Media Control Buttons (Play, Pause, Fast Forward, Rewind, Stop):** Controls media playback if supported by the TV.



Image 3.1: Detailed view of the remote control buttons.

4. COMPATIBLE HAIER TV MODELS

The UBay HTR-A18M remote control is compatible with a wide range of Haier LCD LED TV models, including but not limited to:

- 32D3000
- LE32M600M20
- LE32F32200
- LE24M600M80
- LE24F33800
- LE32M600M80
- LE58F3281
- LE39F32800
- LE39M600M80
- 40D3500M
- 48D3500
- LE48M600M80
- LE50M600M80
- 55D3550
- LE55M600M80
- LE55F32800
- 40E3500
- 65D3550
- 24D3000
- 28E2000
- 32D2000
- 32D3005
- 32E3000
- 39D3005
- 40D2500
- 42E3500
- 48DR3505
- 50D3505
- 55E3500
- 65E3550
- LE40D3281
- LE46H32800
- 40D3505T

If your Haier TV model is not listed, the remote may still be compatible. Please refer to your TV's original remote or user manual for button functions.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.

5.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

6. TROUBLESHOOTING

6.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are installed correctly with the correct polarity (+/-). Replace with fresh AAA batteries.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
- **TV Power:** Confirm that the TV is powered on and not in standby mode.
- **Remote Sensor:** Ensure the remote's infrared emitter (located at the top) is not blocked or dirty.

6.2 Limited Range

If the remote control only works when held very close to the TV, the batteries may be low. Replace them with new AAA batteries.

6.3 Certain Functions Not Working

While the UBay HTR-A18M is broadly compatible, some advanced or specific functions may vary depending on your exact Haier TV model. Refer to your TV's original user manual for specific feature support.

7. SPECIFICATIONS

Feature	Specification
Model	HTR-A18M
Brand	UBay
Power Supply	2 x 1.5V AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.5 inches (17.78 x 5.08 x 1.27 cm)
Item Weight	1.76 ounces (50 grams)
Compatibility	Haier LCD LED TVs (various models)

8. WARRANTY AND SUPPORT

Specific warranty information for the UBay HTR-A18M remote control is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please contact the manufacturer, UBay, or your point of purchase directly.