

[Manuals.plus](#) /

> [Other](#) /

> SR100 Plus Bluetooth Soundbar Home TV Speaker Wireless Subwoofer Remote Control Stereo Surround Sound 4 \* 15W Speakers for Home Theater AUX IN Coaxial Optical Speaker User Manual

## Other V5345EU

# SR100 Plus Bluetooth Soundbar User Manual

Model: V5345EU | Brand: Other

## INTRODUCTION

---

The SR100 Plus Bluetooth Soundbar is designed to enhance your home audio experience, delivering stereo surround sound with its integrated 4\*15W speakers and passive radiators. Its sleek black design and LED display provide a modern aesthetic, while multiple connectivity options ensure versatility with various devices. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to help you get the most out of your soundbar.



Figure 1: SR100 Plus Bluetooth Soundbar and Remote Control.

## PACKAGE CONTENTS

---

Before you begin, please ensure all components are present in the package:

- 1 x SR100 Soundbar
- 1 x 1 to 2 Audio Cable
- 1 x 1 to 1 Audio Cable

- 1 x Remote Control (*Note: Batteries are not included*)
- 1 x Optical Fiber Cable
- 1 x Power Adapter
- 1 x User Manual (Multi-language)



Figure 2: All components included in the SR100 Plus Soundbar package.

## SETUP

---

### 1. Placement

The SR100 Plus Soundbar offers flexible placement options. It can be placed on a flat surface, such as a TV stand or desk, or mounted on a wall to save space.

**It can be placed on the desk or mounted on the wall to save space.**



Figure 3: Soundbar placement options: on a desk or wall-mounted.

## 2. Connections

Identify the various input ports on the rear of the soundbar. Refer to Figure 4 for port identification.

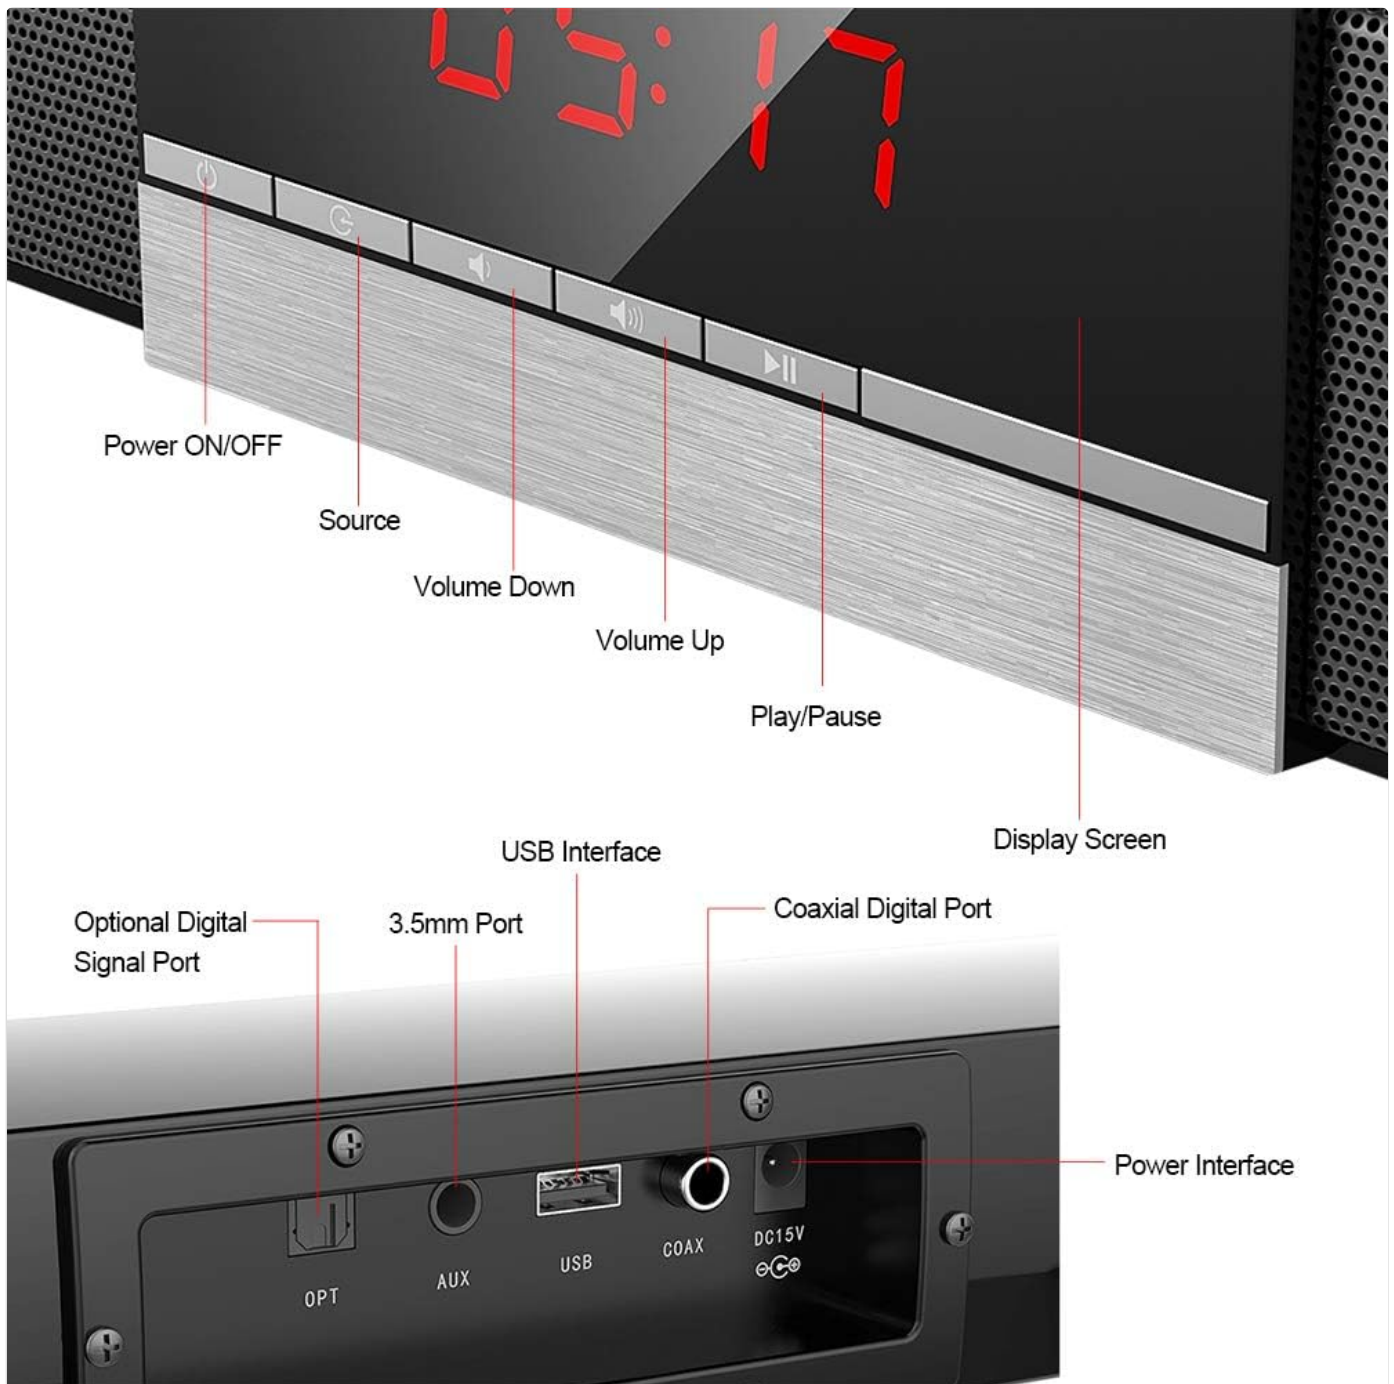


Figure 4: Soundbar Control Panel and Rear Ports (Power ON/OFF, Source, Volume Down/Up, Play/Pause, USB Interface, Optional Digital Signal Port, 3.5mm Port, Coaxial Digital Port, Power Interface, Display Screen).

1. **Power Connection:** Connect the provided Power Adapter to the DC15V Power Interface on the soundbar and plug it into a wall outlet.
2. **Audio Input:** Choose one of the following methods to connect your audio source:
  - **Optical:** Connect the Optical Fiber Cable from your TV or audio device's optical output to the OPT port on the soundbar.
  - **Coaxial:** Connect a coaxial cable (not included) from your TV or audio device's coaxial output to the COAX port on the soundbar.
  - **AUX (3.5mm):** Use the 1 to 1 Audio Cable or 1 to 2 Audio Cable to connect your device's audio output (e.g., headphone jack) to the AUX port on the soundbar.
  - **USB:** Insert a USB drive into the USB Interface to play audio files directly.

## 1. Power On/Off

Press the Power ON/OFF button on the soundbar or the remote control to turn the unit on or off.

## 2. Source Selection

Press the "Source" button on the soundbar or the remote control to cycle through available input modes: Bluetooth (BT), AUX, Optical (OPT), Coaxial (COAX), and USB. The LED display will indicate the current mode.

## 3. Volume Control

Use the Volume Up (+) and Volume Down (-) buttons on the soundbar or the remote control to adjust the audio volume.

## 4. Play/Pause

When playing media via Bluetooth or USB, press the Play/Pause button on the soundbar or remote control to pause or resume playback.

## 5. Bluetooth Connection

To connect a Bluetooth-enabled device:

1. Turn on the soundbar and switch to Bluetooth mode using the "Source" button. The LED display will show "BT".
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "SR100 Plus" from the list of found devices.
4. Once paired, the soundbar will indicate a successful connection, and you can play audio wirelessly from your device.



## Remote Control

Equipped with a remote controller, easy and convenient to control. You can lie on the bed or sofa to enjoy crystal and clear sound.  
Note: Please attention that the batteries are not included in the controller.



Figure 5: Convenient control with the included remote.

## MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your soundbar.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the soundbar. Do not use liquid cleaners or abrasive materials, as they may damage the finish or internal components.
- **Storage:** If storing the soundbar for an extended period, disconnect it from power and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure the soundbar has adequate ventilation and is not placed in an enclosed space that could lead to overheating.

## TROUBLESHOOTING

---

If you encounter issues with your SR100 Plus Soundbar, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound	<p>Power not connected or unit off.</p> <p>Incorrect input source selected.</p> <p>Volume too low or muted.</p> <p>Audio cable not connected properly.</p>	<p>Ensure power adapter is connected and unit is on.</p> <p>Press "Source" button to select the correct input.</p> <p>Increase volume using (+) button; check if muted.</p> <p>Verify all audio cables are securely connected to both the soundbar and the source device.</p>
Distorted sound or low bass	<p>Source audio quality is poor.</p> <p>Volume set too high.</p> <p>Speaker placement.</p>	<p>Try a different audio source or media file.</p> <p>Reduce the volume.</p> <p>Ensure the soundbar is placed on a stable surface and not obstructed.</p>
Bluetooth connection issues	<p>Device too far from soundbar.</p> <p>Interference from other devices.</p> <p>Soundbar not in pairing mode.</p>	<p>Ensure device is within 10 meters of the soundbar.</p> <p>Move soundbar away from other wireless devices.</p> <p>Switch soundbar to Bluetooth mode and re-attempt pairing.</p>
Remote control not responding	<p>Batteries are dead or incorrectly inserted.</p> <p>Obstruction between remote and soundbar.</p> <p>Remote control faulty.</p>	<p>Replace batteries with new ones (AAA, not included) and ensure correct polarity.</p> <p>Remove any objects blocking the line of sight to the soundbar's sensor.</p> <p>If issues persist after checking batteries and line of sight, contact customer support.</p>

## SPECIFICATIONS

---

# 4\*15W Speakers

The soundbar includes four 52mm full-frequency speakers (2\*alt speakers and 2\*bass speakers) to ensure clear and loud sound, and with two 50120 passive radiators added, ensure the intensity and thickness of sound.

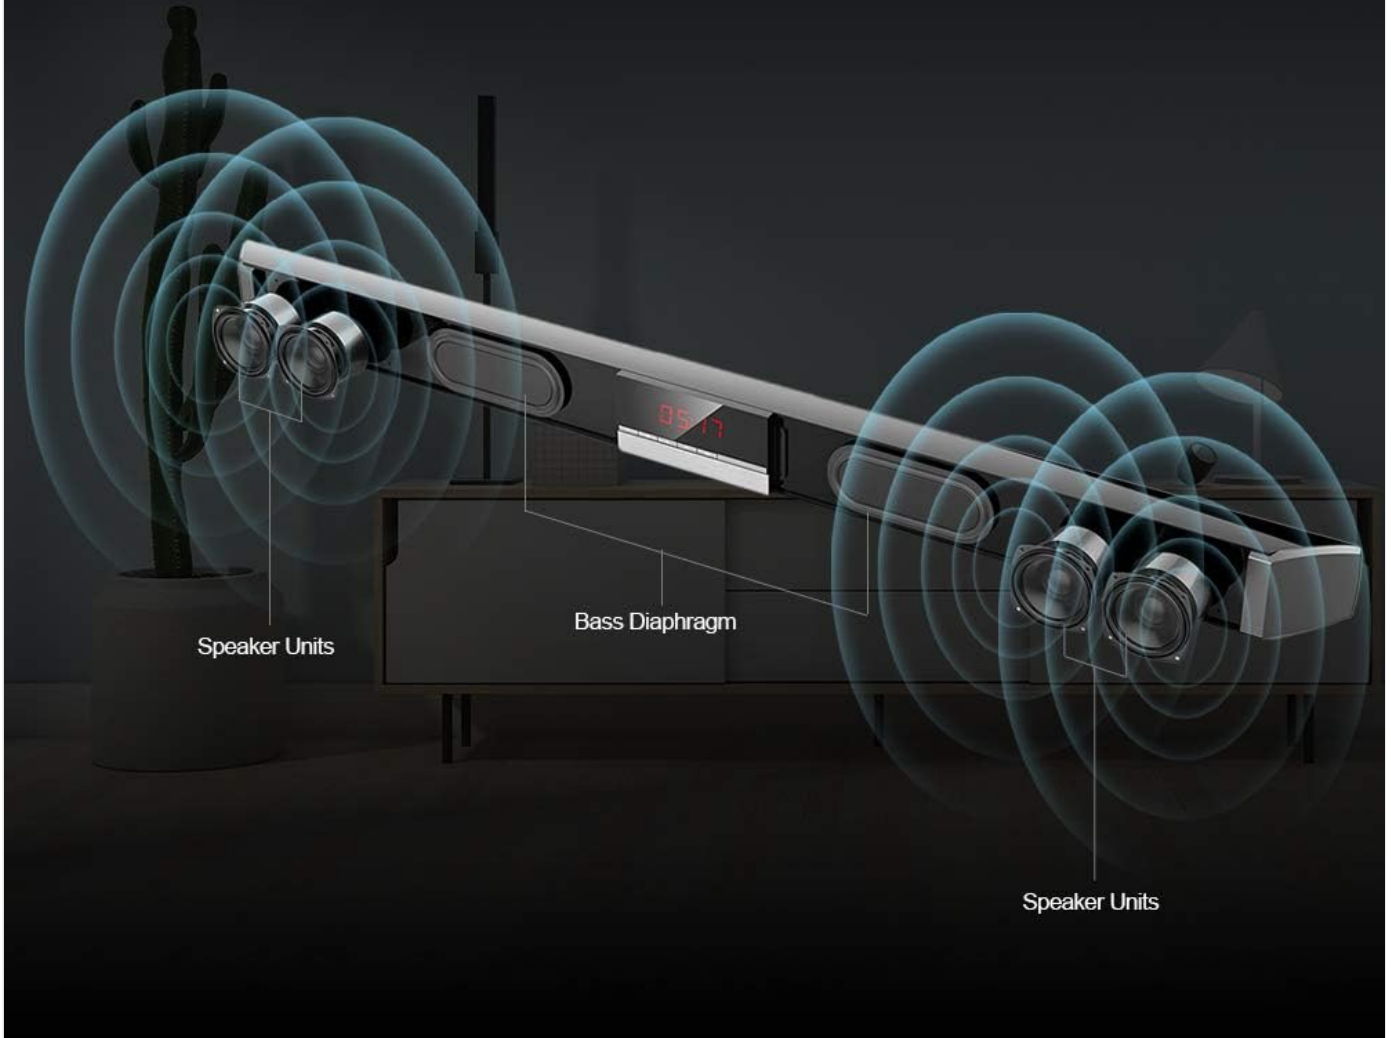


Figure 6: Internal speaker configuration of the SR100 Plus Soundbar.

Feature	Detail
Product Model	SR100 Plus
Bluetooth Version	V4.1 + EDR
Output Power	20W*2 (Total 40W)
Frequency Response	50-18kHz
SNR (Signal-to-Noise Ratio)	83dB
Distortion	<1%
Coaxial Decoding Format	2.0CH PCM
Optical Fiber Decoding Format	2.0CH PCM

Feature	Detail
Bluetooth Transmission Distance	Up to 10M (Linear Distance)
Material	PVC
Item Size (L*W*H)	87.3*7*5cm / 34.4*2.8*2in
Item Weight	1442g / 50.9oz (approx. 1.44 kg)
Color	Black
Speaker Type	Full-frequency speakers (4 units)
Surround Sound Channel Configuration	2.0
Connectivity Technology	Bluetooth, Auxiliary, Optical, Coaxial, USB
Mounting Type	Wall Mount, Tabletop
Waterproof	Yes

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. If you require technical assistance or have questions not covered in this manual, please reach out to the manufacturer's customer service department.