

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Philips Audio](#) /
- › [Philips UpBeat SHB2505 Wireless Earbuds User Manual](#)

Philips Audio SHB2505BK/00

Philips UpBeat SHB2505 Wireless in-Ear Earbuds User Manual

Model: SHB2505BK/00

Brand: Philips Audio

INTRODUCTION

Welcome to the user manual for your Philips UpBeat True Wireless Earbuds. These earbuds are designed to provide total freedom with vibrant sound and an extended battery life, complemented by a compact charging case for music enjoyment on the go. They feature a wing tip design for a secure and comfortable fit.



Image: Philips UpBeat SHB2505 Wireless Earbuds in their open charging case, showing the earbuds nestled inside and blue indicator lights.

WHAT'S IN THE BOX

- Philips UpBeat SHB2505 Wireless Earbuds
- Charging Case
- USB Cable
- Ear Tips

SETUP GUIDE

Initial Charging

Before first use, fully charge your earbuds and charging case. Connect the provided USB cable to the charging case and a power source. The indicator lights on the case will show charging status.

Pairing Your Earbuds

1. Ensure the earbuds are in the charging case and the case has power.

2. Open the charging case. The earbuds will automatically turn on and enter pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth.
4. Search for "Philips UpBeat SHB2505" in the list of available Bluetooth devices and select it to connect.
5. Once connected, the earbuds will indicate successful pairing.

Wearing the Earbuds

The earbuds are designed with wing tips for a secure and comfortable fit. Gently insert each earbud into your ear, rotating slightly to ensure the wing tip is tucked into your ear's concha for maximum stability.



Image: A woman comfortably wearing the Philips UpBeat SHB2505 earbuds while sitting on a blanket outdoors, demonstrating the secure fit during casual use.

OPERATING INSTRUCTIONS

Power On/Off

The earbuds feature an auto on/off functionality. They will automatically power on when removed from the charging case and power off when placed back into the case.

Music Playback

Control your music directly from the earbuds:

- **Play/Pause:** Press the button on either earbud once.
- **Next Track:** Double-press the button on the right earbud.
- **Previous Track:** Double-press the button on the left earbud.

Phone Calls

Manage your calls with ease:

- **Answer/End Call:** Press the button on either earbud once.
- **Reject Call:** Press and hold the button on either earbud for 2 seconds.

Your browser does not support the video tag.

Video: An official product video demonstrating the key features and usage of the Philips UpBeat SHB2505 Wireless Earbuds, including sound quality, design, and connectivity.

MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your Philips UpBeat SHB2505 earbuds, follow these care guidelines:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Ear Tips:** Remove the ear tips and clean them with mild soap and water if necessary. Ensure they are completely dry before reattaching.
- **Storage:** When not in use, always store the earbuds in their charging case to protect them and keep them charged.
- **Water Resistance:** These earbuds are not water resistant. Avoid exposure to water, moisture, or extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your earbuds, refer to the following common solutions:

- **No Sound/Poor Sound Quality:**
 - Ensure earbuds are fully charged.
 - Check Bluetooth connection and re-pair if necessary.
 - Adjust volume on both your device and the earbuds.
 - Clean ear tips and speaker grilles to remove any obstructions.
- **Earbuds Not Pairing:**
 - Ensure Bluetooth is enabled on your device.
 - Place earbuds back in the case, close it, wait a few seconds, then open it again to re-enter pairing mode.
 - Forget the device from your phone's Bluetooth settings and try pairing again.
- **Charging Issues:**
 - Verify the USB cable is securely connected to both the case and the power source.
 - Ensure the charging pins on the earbuds and inside the case are clean and free of debris.
 - Try a different USB cable or power adapter.
- **Intermittent Connection:**
 - Ensure your device is within the 10-meter wireless range.
 - Avoid physical obstructions between the earbuds and your device.
 - Minimize interference from other wireless devices.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Philips Audio
Model Name	2019 TWS
Model Number	SHB2505BK/00
Connectivity Technology	Bluetooth 5.0
Wireless Range	10 Meters
Audio Driver Size	6 mm
Noise Control	Sound Isolation
Battery Life (Earbuds)	3 Hours
Battery Life (with Case)	Up to 12 Hours (3 + 9)
Charging Time	3 Hours
Control Type	Media Control, Touch
Earpiece Shape	Angular, with stability fin
Material	Plastic
Dimensions (Product)	2.56 x 1.6 x 1.4 inches
Item Weight	0.002 ounces
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Philips Audio website. You can also contact Philips Audio customer service for assistance with product registration, technical support, and service inquiries.

Online Resources:

- [Philips Official Store on Amazon](#)