

[Manuals.plus](#) /

> [Sony](#) /

> Sony PlayStation 2 Slim (SCPH-70000) Instruction Manual

Sony SCPH-70000

Sony PlayStation 2 Slim (SCPH-70000) Instruction Manual

Model: SCPH-70000

INTRODUCTION

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your Sony PlayStation 2 Slim console, model SCPH-70000. This product has been professionally inspected and tested to ensure functionality and appearance consistent with a new device.

Included Components:

- PlayStation 2 Slim Console
- 1 Original Equipment Manufacturer (OEM) Controller
- Power Cord
- Video Cord



Image: Sony PlayStation 2 Slim console in silver, accompanied by its silver DualShock 2 controller. The console is shown vertically, highlighting its compact design.

SETUP

Follow these steps to connect your PlayStation 2 Slim console:

1. **Connect the Video Cord:** Insert one end of the video cord into the AV Multi Out port on the back of the PlayStation 2 console. Connect the other end (typically red, white, and yellow RCA connectors) to the corresponding input ports on your television. Ensure colors match (yellow for video, white for left audio, red for right audio).
2. **Connect the Power Cord:** Plug the small end of the power cord into the DC IN 8.5V port on the back of the console. Plug the larger end into a standard electrical outlet.
3. **Connect the Controller:** Insert the controller cable into one of the controller ports on the front of the console. The console supports up to two controllers.
4. **Power On:** Press the POWER button on the front of the console. The indicator light should turn green.
5. **Select TV Input:** Use your television's remote control to select the correct video input source (e.g., AV1, Video 1, Component) that corresponds to where you connected the video cord.

OPERATING INSTRUCTIONS

Basic operation of your PlayStation 2 Slim console:

- **Inserting a Disc:** Gently slide open the disc tray cover on the top of the console. Place a PlayStation 2 format disc (CD or DVD) label-side up onto the disc spindle. Close the disc tray cover.
- **Starting a Game:** After inserting a disc, the console will typically boot directly into the game. If it returns to the main menu, select the 'Disc' option.
- **Powering Off:** Press the POWER button on the front of the console to turn it off. The indicator light will turn red.
- **Using the Controller:** The DualShock 2 controller features analog sticks, directional pad, face buttons (Triangle, Circle, X, Square), shoulder buttons (L1, L2, R1, R2), and the START and SELECT buttons. Refer to individual game manuals for specific control schemes.
- **Memory Cards:** PlayStation 2 games save data to memory cards. Insert a PlayStation 2 memory card into one of the memory card slots on the front of the console.

MAINTENANCE

Proper care ensures the longevity of your console:

- **Cleaning the Console:** Use a soft, dry cloth to wipe the exterior of the console. Avoid using liquid cleaners or abrasive materials.
- **Disc Care:** Handle discs by their edges. Clean discs with a soft, lint-free cloth, wiping from the center outwards. Do not use harsh chemicals.
- **Ventilation:** Ensure the console is placed in a well-ventilated area to prevent overheating. Do not block the ventilation openings.
- **Storage:** When not in use for extended periods, store the console in a cool, dry place away from direct sunlight and dust.

TROUBLESHOOTING

If you encounter issues, try these common solutions:

- **No Power:**
 - Ensure the power cord is securely connected to both the console and the electrical outlet.
 - Test the outlet with another device to confirm it is functional.
- **No Picture/Sound:**
 - Verify the video cord is correctly connected to both the console and the TV.
 - Check that your TV is set to the correct input channel (e.g., AV1, Video 1).
 - Ensure TV volume is not muted or too low.
- **Disc Read Error:**
 - Clean the disc carefully with a soft cloth.
 - Ensure the disc is inserted correctly, label-side up.
 - Try a different game disc to determine if the issue is with the disc or the console.
- **Controller Not Responding:**
 - Ensure the controller cable is fully inserted into the controller port.
 - Try connecting the controller to the other port.
 - Test with a different controller if available.

SPECIFICATIONS

Feature	Detail
Model Number	SCPH-70000
Manufacturer	Sony
Product Dimensions	12 x 3.5 x 10 inches
Item Weight	0.01 ounces
Date First Available	February 26, 2019

WARRANTY AND SUPPORT

As a renewed product, this PlayStation 2 Slim console is typically covered by the Amazon Renewed Guarantee. This guarantee ensures eligibility for replacement or refund if you are not satisfied with your purchase. For specific details regarding your warranty coverage or to obtain support, please refer to the documentation provided with your purchase or contact the seller directly through the platform where the item was acquired.