

[Manuals.plus](#) /

› [CosmoLiving by Cosmopolitan](#) /

› CosmoLiving by Cosmopolitan Astor Dining Chair (Model C008410) Instruction Manual

CosmoLiving by Cosmopolitan C008410

CosmoLiving by Cosmopolitan Astor Dining Chair (Model C008410) Instruction Manual

1. PRODUCT OVERVIEW

The CosmoLiving by Cosmopolitan Astor Dining Chair, Model C008410, is an upholstered seating solution designed for dining areas or home office use. It features a rounded shape, velvet upholstery, and brass-finished metal legs. The chair is constructed with a sturdy wooden frame and foam padding for comfort and durability.



Image 1.1: The Astor Dining Chair featuring green velvet upholstery and brass legs.

2. SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Do not exceed the maximum weight limit of 250 lbs (113 kg).
- Avoid standing on the chair or using it as a step stool.
- Keep small parts away from children during assembly to prevent choking hazards.
- Place the chair on a flat, stable surface to prevent tipping.

3. PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Upholstered Seat (1)

- Upholstered Backrest (1)
- Leg Frame Assembly (1)
- Hardware Pack (Screws, Washers, Allen Wrench)

4. SETUP AND ASSEMBLY INSTRUCTIONS

Minimal assembly is required for this dining chair. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Attach Leg Frame to Seat:** Align the leg frame with the pre-drilled holes on the underside of the upholstered seat. Insert the provided screws with washers and hand-tighten them partially.
3. **Attach Backrest to Seat:** Position the upholstered backrest against the rear of the seat, aligning the mounting points. Insert the remaining screws with washers and hand-tighten them partially.
4. **Final Tightening:** Once all screws are in place and the chair is upright, gradually tighten all screws using the Allen wrench until secure. Do not overtighten.

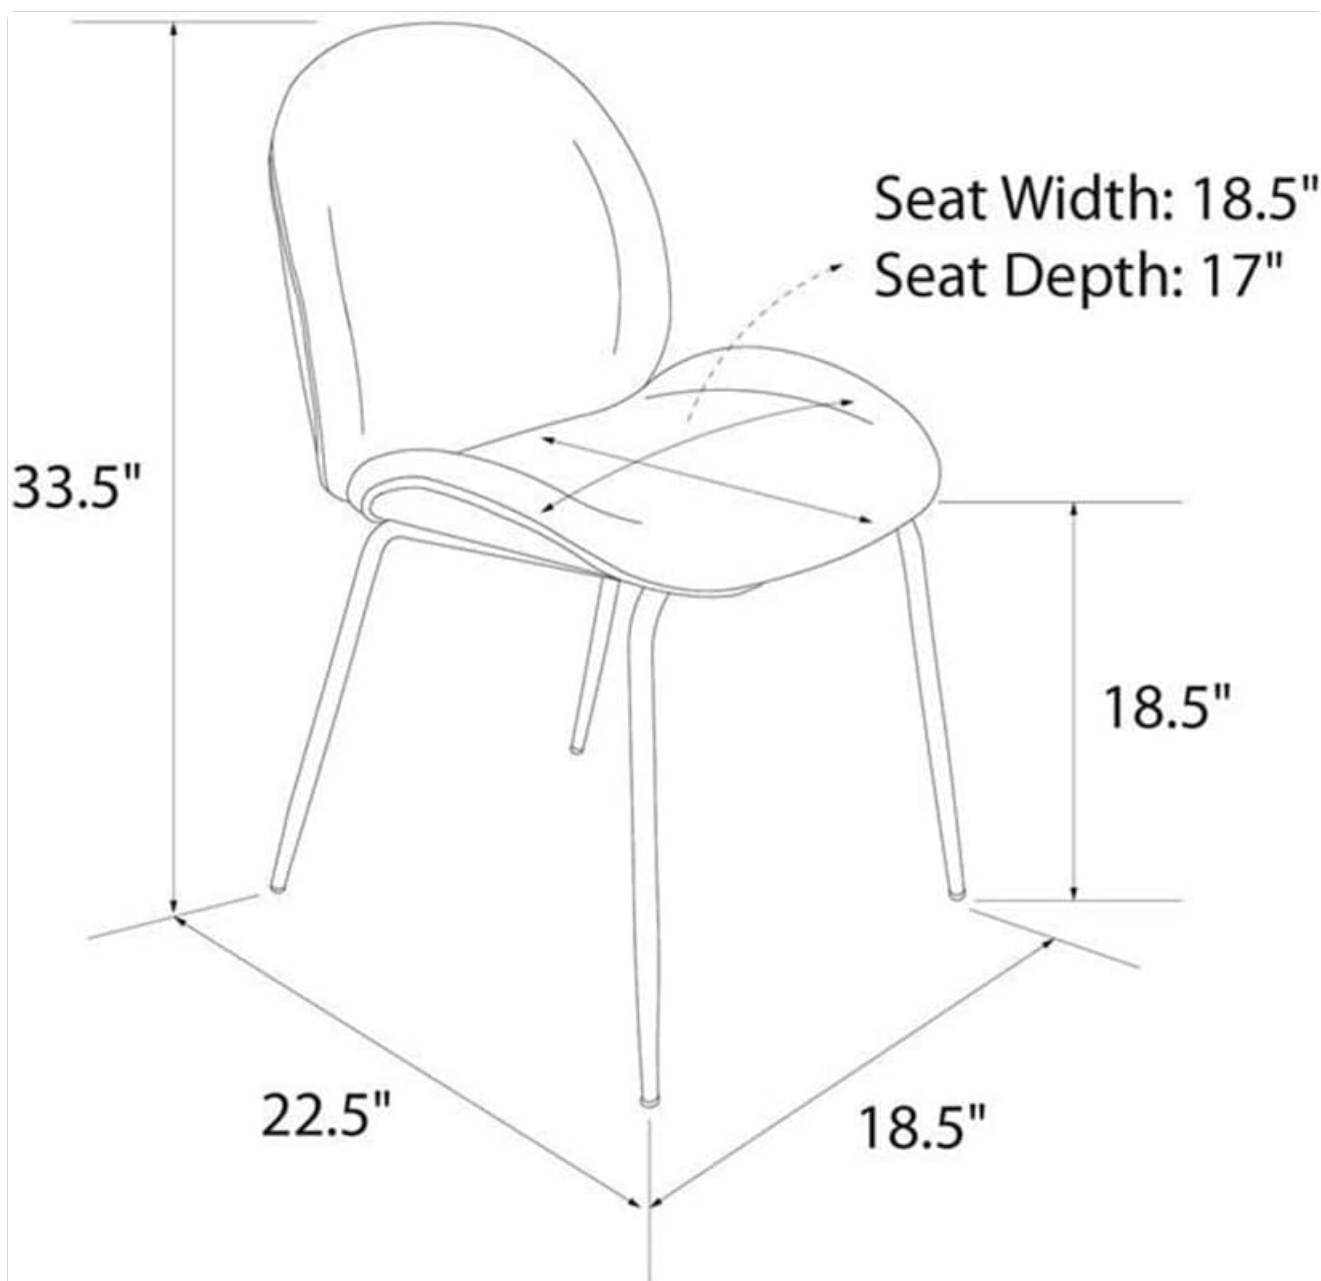


Image 4.1: Assembly diagram illustrating the chair's components and overall dimensions.

Assembly Video Guide

Your browser does not support the video tag.

Video 4.1: Official product video demonstrating the features and design of the Astor Upholstered Dining Chair, including visual cues for assembly and overall appearance.

5. OPERATING INSTRUCTIONS (USAGE)

The Astor Dining Chair is designed for comfortable seating in various indoor environments.

- Use the chair for dining purposes, as an accent chair, or as a comfortable seat in a home office setting.
- Ensure the chair is placed on a level surface to maintain stability.



Image 5.1: Astor Dining Chairs in a typical dining room setup.

6. MAINTENANCE AND CARE

To maintain the appearance and longevity of your Astor Dining Chair:

- **Cleaning:** Wipe clean with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes, as these may damage the velvet upholstery or metal finish.
- **Spills:** Blot spills immediately with a clean, dry cloth. Do not rub.
- **Dusting:** Regularly dust the chair with a soft, dry cloth.
- **Inspection:** Periodically check all fasteners and tighten if necessary to ensure stability.

7. TROUBLESHOOTING

- **Chair wobbles:** Ensure all screws are fully tightened and the chair is placed on an even surface. If the floor is uneven, consider using furniture pads under the legs.
- **Loose parts:** Re-tighten any loose screws or connections. Do not use the chair if any parts are significantly loose or damaged.
- **Stains on upholstery:** For minor stains, gently spot clean with a mild fabric cleaner and a soft cloth. Test on an inconspicuous area first. For stubborn stains, professional cleaning may be required.

8. SPECIFICATIONS

Model Name	Astor
Item Model Number	C008410
Product Dimensions	22.5"D x 18.5"W x 33.5"H (57.15 cm D x 46.99 cm W x 85.09 cm H)
Seat Width	18.5" (46.99 cm)
Seat Depth	17" (43.18 cm)
Maximum Weight Recommendation	250 lbs (113 kg)
Materials	Velvet upholstery, Wood frame, Foam padding, Brass-finished metal legs
Color	Green
Assembly Required	Yes (Minimal)
Product Care	Wipe Clean

9. WARRANTY AND SUPPORT

This CosmoLiving by Cosmopolitan Astor Dining Chair (Model C008410) comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use.

For warranty claims, missing parts, or technical support, please contact CosmoLiving by Cosmopolitan customer service. Please have your model number (C008410) and proof of purchase available when contacting support.

Customer Support:

- Refer to the contact information provided with your purchase or visit the official CosmoLiving by Cosmopolitan website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question