

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Calvas](#) /
- › [Calvas PT346SK Remote Control User Manual](#)

Calvas PT346SK

Calvas PT346SK Remote Control User Manual

Model: PT346SK

PRODUCT OVERVIEW

The Calvas PT346SK Remote Control is designed to provide convenient control over your Amazon Echo devices, featuring integrated voice microphone capabilities. This ergonomic remote allows for easy navigation, media playback control, and direct access to voice commands, enhancing your smart home experience.

Package Contents

- 1 x Calvas PT346SK Remote Control
- (Batteries not included, typically requires 2x AAA batteries)

Remote Control Layout

Familiarize yourself with the buttons and features of your new remote control.



Image 1: Front view of the Calvas PT346SK Remote Control. It features a black, elongated design with a circular navigation pad in the center, including play/pause, skip forward, and skip back buttons. Above the navigation pad is a microphone button for voice commands. The remote has a smooth, matte finish.



Image 2: Back view of the Calvas PT346SK Remote Control. The back is smooth and black, showing the battery compartment cover at the top, which slides open for battery insertion. The ergonomic design is visible from this angle.

SETUP

1. Inserting Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover open.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely.

2. Pairing with Amazon Echo Device

To use your Calvas PT346SK remote, it must be paired with a compatible Amazon Echo device. This process is typically done through the Alexa app.

1. Ensure your Amazon Echo device is powered on and connected to Wi-Fi.
2. Open the **Amazon Alexa app** on your smartphone or tablet.
3. Navigate to the **Devices** tab.
4. Select your specific Echo device that you wish to pair the remote with.
5. Look for an option to add a new device or accessory, often under "Bluetooth Devices" or "Echo Remotes".
6. Follow the on-screen prompts in the Alexa app to put your Echo device into pairing mode.
7. On the Calvas PT346SK remote, press and hold the **Play/Pause** button for approximately 5 seconds until the indicator light (if present) begins to flash, indicating it's in pairing mode.
8. The remote should appear in the Alexa app's list of discoverable devices. Select it to complete the pairing process.
9. Once paired, the remote's indicator light will stop flashing, and the app will confirm successful pairing.

Note: Some older Echo devices may require a firmware update for full remote functionality, particularly for the microphone button. This update typically occurs automatically when connected to the internet. If issues persist, consult Amazon's official support for your specific Echo model.

OPERATING INSTRUCTIONS

Basic Navigation and Media Control

- **Circular Navigation Pad:** Use the directional buttons (up, down, left, right) to navigate menus and selections on

compatible Echo devices with screens (e.g., Echo Show).

- **Play/Pause Button:** Press the center button of the navigation pad to play or pause media playback.
- **Skip Buttons:** Use the left and right buttons on the navigation pad to skip backward or forward through tracks or content.
- **Volume Buttons:** The remote may include dedicated volume up and down buttons (often on the side or top) to adjust the audio output of your paired Echo device.

Voice Control

The integrated microphone allows you to issue voice commands directly to your Amazon Echo device.

- **Microphone Button:** Press and hold the microphone button (located at the top of the remote) to activate Alexa.
- While holding the button, speak your command clearly into the remote.
- Release the button when you have finished speaking. Alexa will process your request through the paired Echo device.

MAINTENANCE

Battery Replacement

When the remote's performance degrades or it stops responding, it's likely time to replace the batteries.

1. Follow the steps outlined in the "Inserting Batteries" section under Setup.
2. Always replace both AAA batteries at the same time with new ones.
3. Dispose of used batteries responsibly according to local regulations.

Cleaning

To maintain the remote's appearance and functionality:

- Wipe the remote with a soft, dry, lint-free cloth.
- For stubborn marks, lightly dampen the cloth with water. Avoid excessive moisture.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the remote's finish or internal components.

TROUBLESHOOTING

If you encounter issues with your Calvas PT346SK remote, refer to the table below for common problems and solutions.

Problem	Possible Cause / Solution
Remote not responding or pairing.	<p>Batteries: Ensure batteries are inserted correctly and are not depleted. Replace with fresh AAA batteries.</p> <p>Pairing Mode: Make sure the remote is in pairing mode (hold Play/Pause button).</p> <p>Echo Device: Ensure your Echo device is powered on and within range. Try restarting your Echo device.</p> <p>Alexa App: Confirm you are following the pairing steps precisely in the Alexa app.</p> <p>Firmware: Some older Echo devices may require a firmware update to recognize the remote. This usually happens automatically when the Echo is connected to Wi-Fi.</p>

Problem	Possible Cause / Solution
Voice control (microphone button) not working.	Pairing: Ensure the remote is fully paired with your Echo device. Button Press: Make sure you are pressing and holding the microphone button while speaking. Echo Compatibility: Verify your specific Echo model supports remote voice input. Firmware: As noted, some older Echo devices might need a firmware update for microphone functionality.
Buttons are unresponsive or delayed.	Batteries: Replace batteries with new ones. Interference: Ensure there are no obstructions between the remote and the Echo device. Re-pair: Try unpairing and then re-pairing the remote with your Echo device.

SPECIFICATIONS

Feature	Detail
Brand	Calvas
Model	PT346SK
Compatible Devices	Amazon Echo (various models)
Special Feature	Ergonomic, Voice Microphone
Color	Black
Max Number of Supported Devices	1 (per remote)
Power Source	2 x AAA Batteries (not included)

WARRANTY AND SUPPORT

Calvas products are manufactured with quality and reliability in mind. This product comes with a standard limited warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please contact your retailer or the manufacturer directly. Refer to the product packaging or the retailer's website for specific contact details.

Online Resources: For the most up-to-date information and support, visit the official Calvas website or the product page on the retailer's website where you purchased this item.

